

Instructions for FrenchCreek Production 1501 and 1503 Industrial Anchors

Warning


FrenchCreek Production Model #1501 and 1503 Industrial pipe anchors should only be used with a shock absorbing lanyard. User must completely understand these instructions and the instructions for each component within the fall-arrest system. User must follow all manufacturer's instructions for this product and related products. Failure to follow manufacturer's instructions could result in serious injury or death.

Inspect the anchor before each use. If anchor is distorted or will not close correctly, DO NOT USE. Check visually for any bends, burrs, cracks, or dents. If any of those conditions exist, or the anchor does not open and close smoothly, remove from service and contact FrenchCreek Production for service.


To use the anchor, squeeze the spring-loaded handle which opens the anchor, allowing attachment to the desired point. Release the handle to close. Make sure that the anchor closes completely, with the hooks passing through the loops on both sides as in diagram #1. The maximum diameter pipe for using the 1501 is 3 inches, maximum diameter for the 1503 is 5 inches.

When using the 1501 or 1503 anchors, the connector should be compatible in size and shape. The anchor should only be loaded on its axis. Do not side load. Attach the locking snap of the shock absorbing through the eye at the bottom of the handle. Do not contact with electrical sources. Never allow for more than a six foot free fall. Diagrams 2 and 3 illustrate incorrect uses of the 1501 and 1503 anchors.

Dia. #1 Proper operation

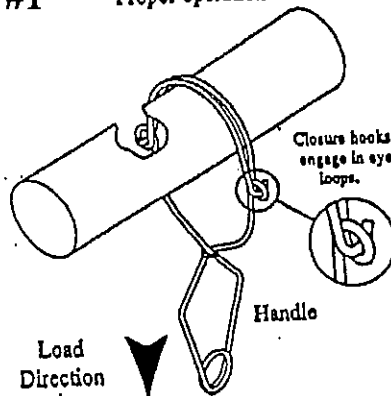

Dia. #2 Improper operation

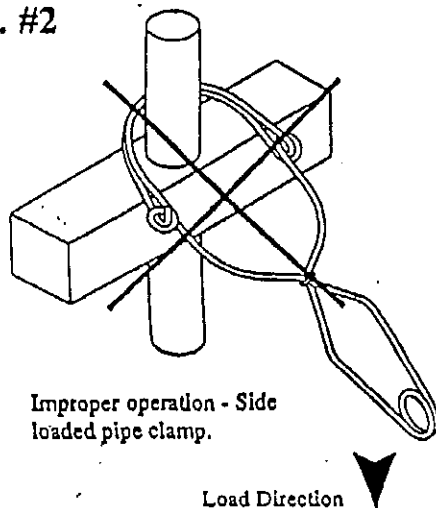

Dia. #3 Improper operation

