


# 3-PENDANT LINEAR CHANDELIER ASSEMBLY AND WIRING INSTRUCTIONS

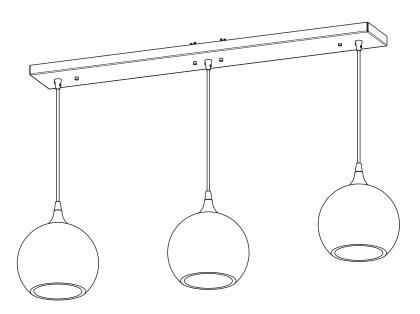



All Lighting is UL or ETL listed for US and Canada.

PLEASE CONSULT A CERTIFIED ELECTRICIAN BEFORE INSTALLING HARDWARE. DRAW-INGS ARE NOT TO SCALE AND ARE FOR REFERENCE ONLY. THESE INSTRUCTIONS ARE SUBJECT TO REVISION. THIS HARDWARE IS MEANT TO INSTALL INTO A STANDARD CEILING ELECTRICAL BOX/JUNCTION BOX.

# **PARTS LIST:** L: Cylindrical Finial Qty. 4 A: Canopy Plate Qty. 1 K: 8-32 Threaded Stud Qty. 2 C: Canopy Cord Grip Qty. 3 D: Plastic Mini Screws Qty. 6 H: Green Ground Screw Qty. 1 F: 8-32 Mounting Screws S: 8-32 Toggle Bolt Wings Qty. 2 1.25 inches tall, Qty. 2 GND° G: Round Backplate Qty. 1

JJ: Bare Ground Strap Qty. 1

Q: 8-32 Toggle Bolts Qty. 2




I: Orange Wire Connectors Qty. 3







U: E26 Socket Set Qty. 3

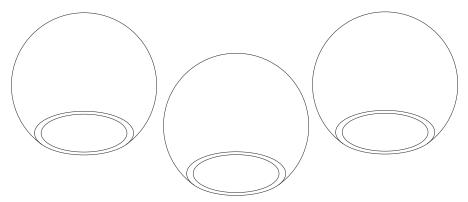





V: Shade Ring Qty. 3

<sup>\*</sup>Illustrated figure is Model 767: 7 inch inside diameter, 5 1/8 inch opening, 6 3/4 inch high. Your selected shade may be different.

# WIRE DESIGNATION CHART:

#### **BRUSHED NICKEL HARDWARE:**

Physical Description	Electrical Designation
Clear Wire with black stripe	BLACK/ HOT
Clear Wire with no stripe	WHITE/ NEUTRAL
Clear Wire with green stripe	GREEN/ GROUND


### BLACK/ POLISHED BRASS/ ANTIQUE BRONZE HARDWARE:

Physical Description	Electrical Designation
Black Wire with copper lead	BLACK/ HOT
White Wire with copper lead	WHITE/ NEUTRAL
Green Wire with copper lead	GREEN/ GROUND


#### **INSTALLATION HEIGHT RECOMMENDATIONS:**


Over a Kitchen Island	30-40 inch gap from the bottom of the shade to the top of the kitchen island.
Over a Dining Room Table	28-36 inch gap from the bottom of the shade to the top of the table.

PRO TIP: This hardware kit is fully assembled and wired. However, if you need to cut the cords then it is recommended to take a photo of the existing wiring on your phone to use as reference before removing it.

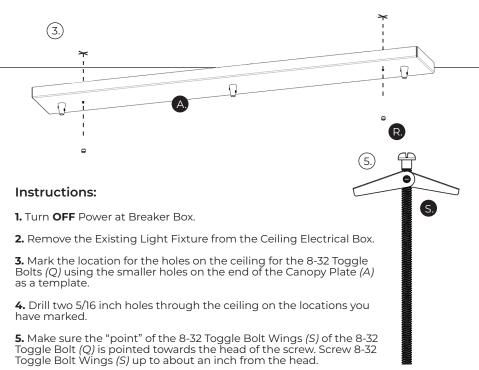


6. Push the 8-32 Toggle Bolts (Q), through each hole you have drilled, head first, until you feel the 8-32 Toggle Bolt Wings (S) pop out.

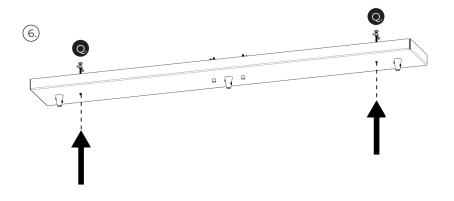

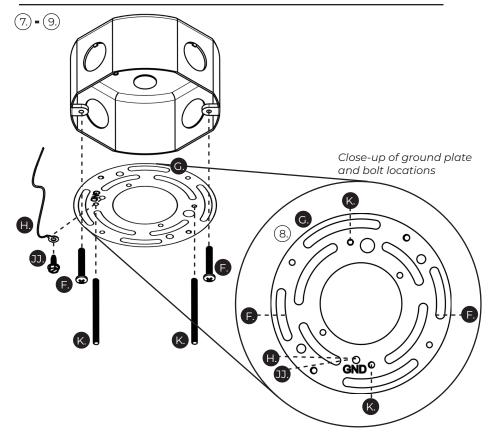

- **7.** Mount the Bare Ground Strap (JJ) to the Round Backplate (G) in the hole marked GND using the Green Ground Screw (H).
- **8**. Thread the two 8-32 Mounting Screws (F) through the opposite outermost slots of the Round Backplate (G) and then mount this assembly to the Ceiling Electrical Box. Ensure that the head of the Green Ground Screw (H) and Bare Ground Strap (JJ) facing downward.
- 9. Mount the two 8-32 Threaded Studs (K) to the corresponding holes in the Round Backplate (G). The first hole directly next to the GND hole and the second hole is directly opposite the GND hole.
- **10.** Adjust the cord to the desired length by pulling excess cord into Canopy Plate (A) and tighten the two Plastic Mini Screws (D) provided.

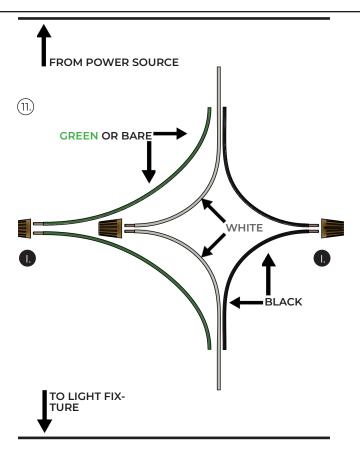


11a. Connect the BLACK Wire from the fixture to the BLACK Wire from the Ceiling Electrical Box using an Orange Wire Connector (I) provided. (See: NOTICE #1, WARNING #2 and WARNING #3)


**11b.** Connect the **WHITE** Wire from the fixture to the **WHITE** Wire from the Ceiling Electrical Box using an Orange Wire Connector (*I*) provided. (See: NOTICE #1, WARNING #2 and WARNING #3)

**11c.** Connect the **GREEN** Wire from the fixture and the BARE Wire from the Mounting Strap (F) to the **GREEN** Wire from the Ceiling Electrical Box using an Orange Wire Connector (I) provided.

(See: NOTICE #1, WARNING #1 and WARNING #3)

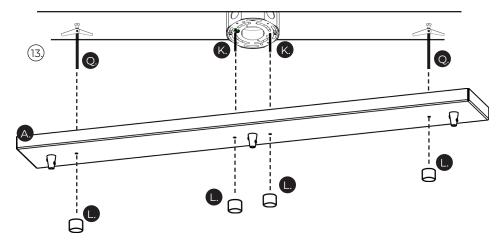

12. Carefully arrange any excess wiring and Orange Wire Connectors (I) within Canopy Plate (A) and the Ceiling Electrical Box.

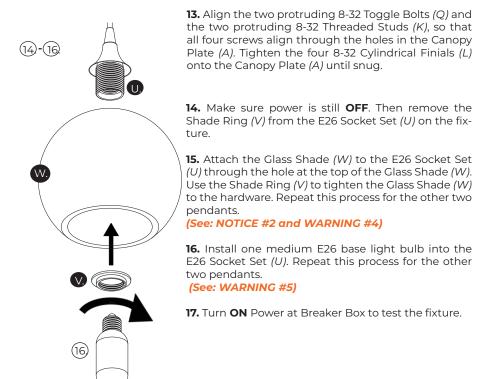

## **WARNINGS:**

WARNING #1: Never connect Ground Wire (GREEN or BARE) to WHITE/Neutral or BLACK/Hot Wire.

WARNING #2: Never connect the BLACK/Hot Wire to WHITE/Neutral Wire.

WARNING #3: Orange Wire Connectors (I) provided are designed to connect TWO to FOUR 18-gage wires and may be appropriate for your wiring situation. All wiring should be snugly and securely fastened with correctly sized wire connectors. If your wiring differs from this most simple example, you should consult a qualified electrician to be sure that the wiring is done safely and correctly with appropriate sized connectors for your unique wiring situation.

**WARNING #4:** Do **NOT** over tighten the Shade Ring (V) as the Glass Shade (W) may crack or break.

WARNING #5: The hardware has a 60-watt INCANDESCENT MAX rating. Do **NOT** exceed this rating.

For California residents it is recommend to not go beyond a 10-watt LED MAX ratina.

NOTICE #1: Brushed Nickel fixtures come with clear cord. The clear cord comes with distinct heat shrink colored labels instead of fully colored wires. Other finishes come with either black or brown cord and the individual wires are **BLACK/**Hot, WHITE/Neutral and GREEN/Ground.

#### (SEE: 'WIRE DESIGNATION' CHART AT THE BEGINNING OF INSTRUCTIONS).

NOTICE #2: Make sure power is OFF before attempting to adjust the Glass Shade (W). The flange of the Shade Ring (V) (wide and flat side of the ring) screws around the E26 Socket Set (U) against the Glass Shade (W) to affix it to the lighting fixture. The hole at the top of the shade is slightly larger than the E26 Socket Set (U). If the shade hangs slightly crooked then hold Glass Shade (W) while unscrewing the Shade Ring (V) a few turns. Once the Glass Shade (W) is loose, recenter the Glass Shade (W) to hang straight and then re-tighten the Shade Ring (V) to set Glass Shade (W) in place.