

Semi-Flush with Hang Straight Assembly and Wiring Instructions



Parts List:

- A: Canopy Plate
- B: Canopy Screws
- E: Mounting Strap
- F: 8-32 Mounting Screw
- I: Orange Wire Connectors
- M: Hang Straight
- U: E26 Socket Set
- V: Shade Ring
- T: Socket Cover Cup
- W: Glass Shade



All Lighting is UL or ETL listed for US and Canada.

Wire Designation:

| Reference Image | Physical Description | Electrical Designation |
|---|-----------------------------|------------------------|
|  | Black Wire with copper lead | BLACK/ HOT |
|  | White Wire with copper lead | WHITE/ NEUTRAL |

Instructions:

1. Turn **OFF** Power at Breaker Box

PRO TIP: Take a photo of the existing wiring on your phone to use as reference before removing it.

2. Remove existing Light Fixture from the Ceiling Electrical Box

3. Remove Mounting Strap (E) from Canopy Plate (A) by removing the two Canopy Screws (B) from the sides of Canopy Plate (A). (Save Mounting Strap (E) and Canopy Screws (B) for later use).

4. Attach the Mounting Strap (E) to the ceiling box with the tabs facing downward, using the two 8-32 Mounting Screws (F) provided. Make sure that Canopy Plate (A) can be mounted snug to the ceiling after the Mounting Strap (E) is attached to the Ceiling Electrical Box when wiring is complete.

5. Connect **BLACK** Wire of the fixture to **BLACK** Wire of the Ceiling Electrical Box using an Orange Wire Connector (I) provided. **(See: WARNING #2 and WARNING #3)**

6. Connect the **WHITE** Wire of the fixture to **WHITE** Wire of the Ceiling Electrical Box using an Orange Wire Connector (I) provided. **(See: WARNING #2 and WARNING #3)**

7. Connect the BARE Ground Wire from Mounting Strap (E) to the **GREEN/BARE** wire of the Ceiling Electrical Box using an Orange Wire Connector (I) provided. **(See: WARNING #1 and WARNING #3)**

8. Adjust the movable joint on Hang Straight (*M*) to the desired angle, by holding the base of Hang Straight (*M*) on Canopy Plate (*A*) in one hand and the E26 Socket Set (*U*) end in the other hand. Bend the joint slowly to avoid bending Canopy Plate (*A*) or Socket Cover Cup (*T*) because the joint is stiff.

9. Carefully arrange any excess wiring and Orange Wire Connectors (*I*) within Canopy Plate (*A*) and the Ceiling Electrical Box.

10. Align holes in the side of the Canopy Plate (*A*) to the holes at the ends of the Mounting Strap (*E*), while pushing it snug to the ceiling, insert the two Canopy Screws (*B*) and tighten.

11. Remove the Shade Ring (*V*) from the E26 Socket Set (*U*) on the fixture.

12. Attach the Glass Shade (*W*) to the E26 Socket Set (*U*) through the hole at the top of the Glass Shade (*W*). Use the Shade Ring (*V*) to tighten the Glass Shade (*W*) to the hardware.

(See: NOTICE #1 and WARNING #4)

13. Install one medium E26 base light bulb into the E26 Socket Set (*U*). **(See: WARNING #5)**

14. Turn **ON** Power at Breaker Box to test the fixture.

WARNING #1: Never connect Ground Wire (**GREEN** or BARE) to **WHITE**/Neutral or **BLACK**/Hot Wire.

WARNING #2: Never connect the **BLACK**/Hot Wire to **WHITE**/Neutral Wire.

WARNING #3: Orange Wire Connectors (*I*) provided are designed to connect **TWO to FOUR** 18-gage wires and may be appropriate for your wiring situation. All wiring should be snugly and securely fastened with correctly sized wire connectors. If your wiring differs from this most simple example, you should consult a qualified electrician to be sure that the wiring is done safely and correctly with appropriate sized connectors for your unique wiring situation.

WARNING #4: Do **NOT** over tighten the Shade Ring (*V*) as the Glass Shade (*W*) may crack or break.

WARNING #5: The hardware has a 60-watt *INCANDESCENT MAX* rating. Do **NOT** exceed this rating. For California residents it is recommend to not go beyond a 10-watt *LED MAX* rating.

NOTICE #1: Make sure power is **OFF** before attempting to adjust the Glass Shade (*W*). The flange of the Shade Ring (*V*) (wide and flat side of the ring) screws around the E26 Socket Set (*U*) against the Glass Shade (*W*) to affix it to the lighting fixture. The hole at the top of the shade is slightly larger than the E26 Socket Set (*U*). If the shade hangs slightly crooked then hold Glass Shade (*W*) while unscrewing the Shade Ring (*V*) a few turns. Once the Glass Shade (*W*) is loose, recenter the Glass Shade (*W*) to Hang Straight (*M*) and then re-tighten the Shade Ring (*V*) to set Glass Shade (*W*) in place.