

BAUMANN

12-cup programmable
coffee maker

Coffee brewing made easy

12-tassen programmierbare
kaffeemaschine

Kaffeekochen leicht gemacht



BM-CM9408TGS

INSTRUCTIONS MANUAL/ GEBRAUCHSANWEISUNG


www.baumannliving.com

TABLE OF CONTENTS

IMPORTANT SAFEGUARDS	2
PARTS AND FEATURES	4
BEFORE FIRST USE	5
OPERATING THE COFFEE MAKER	5
Setting the Clock.....	5
Brewing Coffee.....	6
Setting the AUTO ON function	7
CLEANING AND MAINTENANCE.....	9
Removing Mineral Deposits	9
HINTS AND TIPS	10

IMPORTANT SAFEGUARDS

When using this appliance, basic safety precautions should always be followed, including the following:



1. Read all instructions before use.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electric shock, do not immerse cord or plugs or the appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from wall outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard .
7. The use of accessory attachments not recommended by the appliance manufacturer may result in electric shock or injuries to persons.
8. Do not use outdoors or in a damp area.
9. Do not let power cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. To disconnect, turn the appliance off by pressing the  button, then remove plug from wall outlet.
12. Do not use appliance for other than intended use.
13. The carafe is designed for use with this appliance only. It must never be used on a range top.

14. Do not set a hot carafe on a wet or cold surface.
15. Do not use a cracked carafe or a carafe having a loose or weakened handle.
16. Do not clean the carafe with cleansers, steel wool pads, or other abrasive material.
17. Scalding may occur if either top lid or carafe lid is opened during the brewing cycles.
18. Do not touch the keep warm plate while the appliance is switched on.
19. Do not leave an empty carafe on the keep warm plate while the appliance is switched on. This may cause the carafe to crack.
20. TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT REMOVE THE BOTTOM COVER ON THE APPLIANCE. NO USER SERVICEABLE PARTS INSIDE. REPAIR SHOULD BE DONE BY AUTHORIZED SERVICE PERSONNEL ONLY.
21. Do not operate the appliance with an empty water tank.
22. Keep the area above the appliance clear during use, as hot steam will escape the appliance.
23. When opening the lid after use, be careful as hot steam can be trapped beneath.
24. Do not use hot water for brewing.

SAVE THESE INSTRUCTIONS

FOR HOUSEHOLD USE ONLY

PARTS AND FEATURES

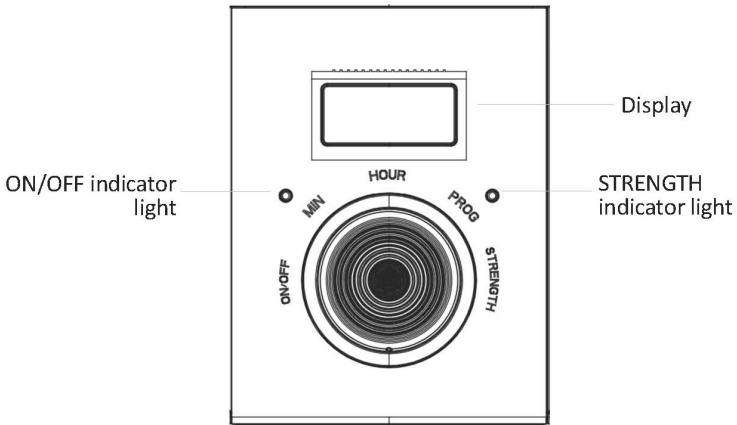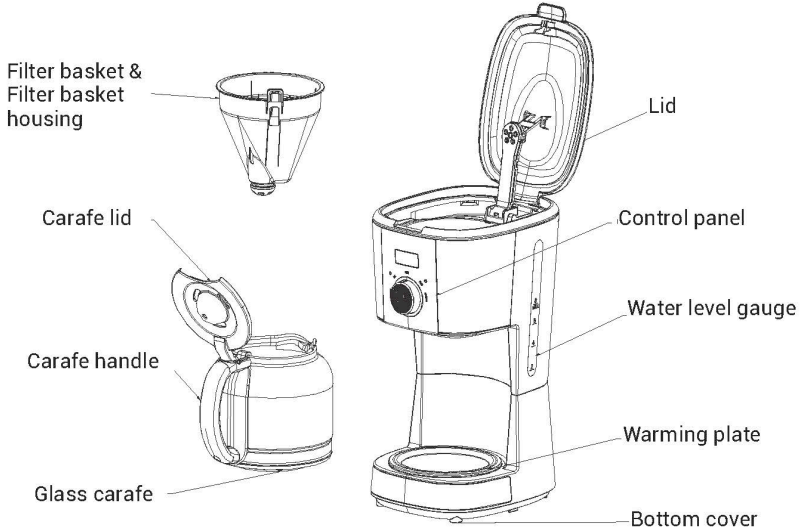

BEFORE FIRST USE

Check that all accessories are complete and the unit is not damaged. Add water to water tank up to the MAX level and brew water for several times without coffee powder, then discard the water. Clean all detachable parts thoroughly according to the section on **Cleaning and Maintenance**.

OPERATING THE COFFEE MAKER

Setting the Clock

1. Connect the appliance to a power source. "12:00" will flash in the display, indicating that the unit is in Clock Set mode.
2. To set the clock, turn control knob to **HOUR**. Press the knob button to set hours on the clock. Each press will advance the clock by one hour. Press and hold the knob button to advance through hours rapidly.
3. Turn control knob to **MIN**. Press the knob button to set minutes on the clock. Each press will advance the clock by one minute. Press and hold the knob button to advance through minutes rapidly.
4. The time in the display will stop blinking to indicate that the clock has been set and will begin to run.

NOTE: Time format is 24 hours.

Brewing Coffee

1. Open the top lid and fill the water tank with drinking water.
NOTE: The water level should not exceed MAX level as indicated on the water level gauge.
2. Place the filter basket holder into the coffee maker, then place filter basket into the filter basket holder. Make sure the filter basket and holder are correctly in place; otherwise, the top cover cannot be closed.
3. Add proper amount of coffee powder into the filter basket, then close the top lid. Usually, a cup of coffee needs a level spoon of coffee powder, but you may adjust according to personal taste.
NOTE: The appliance will not work unless the top lid is properly closed.
4. Place carafe on the warming plate.
5. Connect the appliance to a power source.
6. Turn the knob to **ON/OFF**, then press the knob once. The ON/OFF indicator light will illuminate in red as the coffee maker begins to brew coffee at regular strength.
7. For stronger coffee flavor, turn the knob to **STRENGTH** and press knob button once. The STRENGTH indicator light will illuminate in orange as the coffee maker begins to brew coffee at bold flavor strength. To cancel the STRENGTH setting, turn the knob to **STRENGTH** and press the knob once.
NOTE: During the brewing operation, all settings are disabled except STRENGTH.

NOTE: The brewing operation can be interrupted by pressing the control knob at any time. The ON/OFF indicator light will go off, indicating that the coffee maker is turned off.

NOTE: The appliance is designed with a pause-and-serve feature. At any time during the brewing cycle, you can temporarily remove glass carafe to pour and serve a cup of hot coffee. The brewing cycle will pause and no coffee will drip from the appliance. To restart the brewing cycle, simply replace glass carafe onto warming plate. Do not remove glass carafe for longer than 30 seconds.

8. Remove glass carafe to serve when finished brewing. When the brewing cycle is completed, the appliance will automatically switch to keep-warm mode. After keeping warm for 40 minutes, the appliance will turn off automatically and the indicator light will go off. For optimum coffee taste, serve immediately after brewing.

NOTE: The coffee you get will be less than the water you have added as some water is absorbed by coffee powder.

9. Always turn the coffee maker off and unplug when not in use.

Setting the AUTO ON function

The coffee maker is equipped with an automatic brewing function, allowing you to set the time you would like freshly brewed coffee.

1. Follow steps 1-5 of the section on **Brewing Coffee**.

NOTE: Make sure clock has been set. (See section on **Setting the Clock**)

2. Turn the knob to **PROG** setting, then press the knob once. The ON/OFF indicator light will blink in green as the display shows "12:00."
3. Set the desired automatic start time by following steps 2-3 of the section **Setting the Clock**.
4. Turn the knob to PROGRAM setting, then press the knob once. The ON/OFF indicator light will illuminate in green.
5. After a few seconds, the display will show the current time.
6. To cancel the Auto ON function, turn the knob to **PROG** setting and press the knob once. To change the automatic start time, steps 2-3 of the section **Setting the Clock**.
7. When the time is due, the ON/OFF light indicator will illuminate in red and the coffee maker starts brewing. Remove glass carafe to serve when finished brewing. When the brewing cycle is completed, the appliance will automatically switch to keep-warm mode. After keeping warm for 40 minutes, the appliance will turn off automatically and the indicator light will go off. For optimum coffee taste, serve immediately after brewing.

NOTE: During the delay brewing process, the **HOUR** and **MIN** settings are disabled.

CLEANING AND MAINTENANCE

CAUTION: Be sure to unplug this appliance before cleaning and let the appliance cool down completely. To protect against electrical shock, do not immerse cord, plug or unit in water or liquid.

1. Clean all detachable parts such as inner cover, filter basket, water tank and carafe after each use with the brush with spoon included and in warm soapy water.
2. Wipe surface of the coffee maker with a soft, damp cloth to remove stains.
3. Water droplets may build up in the area above the filter basket and drip onto the product base during brewing. To control the dripping, wipe off the area with a clean, dry cloth after each use.
4. Wipe the warming plate with a soft damp cloth.
5. Replace all parts and keep for next use.

Removing Mineral Deposits

To keep your coffee maker operating efficiently, periodically clean the mineral deposits left by the water depending on the hardness of your tap water and how often you use the coffee maker. To clean:

1. Fill the water tank to capacity with a mixture of 4:1 water and household descaler. You may also use a mixture of 1/3 white vinegar and 2/3 water.
2. Place glass carafe onto the warming plate.

3. Make sure filter basket is empty and assembled in place.
4. Switch on the appliance and allow it to “brew” the descaling solution.
5. When the brewing cycle has completed, switch off the appliance.
6. Leave the solution for 15 minutes and repeat step 3-5.
7. Switch on the appliance and run off the solution until the water tank is completely empty.
8. Rinse by operating the appliance with fresh water for at least 3 times.

HINTS AND TIPS

1. A clean coffee maker is essential for making great-tasting coffee. Regularly clean the coffee maker as specified in the **“CLEANING AND MAINTENANCE”** section. Always use fresh, cold water in the coffee maker.
2. Store unused coffee powder in a cool, dry place. After opening a package of coffee powder, reseal it tightly and store it in a refrigerator to maintain its freshness.
3. For optimum coffee taste, buy whole coffee beans and finely grind them just before brewing.
4. Do not reuse coffee powder since this will greatly reduce the coffee's flavor. Reheating coffee is not recommended as coffee is at its peak flavor immediately after brewing.

5. Clean the coffee maker when over-extraction causes oiliness. Small oil droplets on the surface of brewed, black coffee are due to the extraction of oil from the coffee powder.
6. Oiliness may occur more frequently if heavily roasted coffees are used.