

**BAUMANN
LIVING**

rotisserie & convection oven

Fast, power-efficient and perfectly even cooking



BM-DN45SRML

INSTRUCTIONS MANUAL

www.baumannliving.com

Table of Contents

IMPORTANT SAFEGUARDS	2
PARTS AND FEATURES.....	6
Control Panel.....	7
BEFORE USING YOUR OVEN.....	8
USING YOUR OVEN.....	9
CLEANING AND MAINTENANCE.....	9

IMPORTANT SAFEGUARDS

In order to make the best use of this product and use it safely, please read the instruction manual carefully and keep it for future reference.

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs. The temperature of the outer surface can get very hot while the appliance is in operation. Always use oven gloves when handling hot materials and allow metal parts to cool before cleaning. Allow the appliance to cool thoroughly before putting in or taking out parts. Always use the handles when moving the appliance.
3. To protect against electric shock, do not immerse cord, plug or any parts of the oven in water or any other liquids.
4. Before turning on, ensure the electrical voltage and frequency of the circuit corresponds to those indicated on the rating label of the appliance.
5. Do not use an extension cord unless completely necessary with this product. If an extension cord is used please ensure that it has a rating equal or exceeding the rating of this appliance.
6. **Do not** let cord hang over edge of table or counter, or touch hot surfaces.
7. **Do not** operate appliance with damaged cord or plug or after the appliance malfunctions or has been damage in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.

8. The use of accessory attachments not recommended by the appliance manufacturer may cause hazard or injury.
9. **Do not** place on or near a hot gas or electric burner.
10. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning.
11. To disconnect, turn the time control to OFF, then remove the plug. Always hold the plug, and never pull the cord.
12. Do not pull or carry by cord, use cord as a handle, close a door on the cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
13. Do not bend or damage the power cord.
14. Never force the plug into an outlet.
15. **Do not** cover crumb tray or any part of the oven with metal foil. This may cause the oven to overheat.
16. Use extreme caution when removing the tray, racks or disposing of hot grease or other hot liquids.
17. **Do not** clean the inside of the oven with metal scouring pads, pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
18. Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric risk.
19. A fire may occur if the oven is covered or touching flammable material, including the curtains, draperies, walls, and the like, when in operation. Do not store any item on top of the appliance when in operation.
20. Extreme cautions should be exercised when using cooking or baking containers constructed of anything other than

metal or ovenproof glass.

21. Be sure that nothing touches the top or bottom elements of the oven.
22. **Do not** place any of the following materials in the oven: cardboard, plastic, paper, or anything similar.
23. **Do not** store any materials other than manufacturer's recommended accessories in this oven when not in use.
24. Always wear protective, insulated oven gloves or use a special handle when inserting or removing items from a hot oven.
25. This appliance has a tempered, safety glass door. The glass is stronger than ordinary glass and more resistant to breakage. Tempered glass can still break around edges. Avoid scratching door surface or nicking edges.
26. Do not cover the appliance while in use. If it is covered there is a risk of fire.
27. Improper installation may result in the risk of fire, electric shock or injury to persons.
28. The appliance has no user-serviceable parts contained within. Do not attempt to repair, disassemble or modify the appliance.
29. Always operate on a dry level surface. Operating on sinks or uneven surfaces must be avoided.
30. **Do not** use outdoors.
31. **Do not** use appliance for other than intended use.
32. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use


- of the appliance by a person responsible for their safety.
33. Close supervision is necessary when any appliance is used by or nearby children.
 34. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
 35. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices, and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments
 36. This appliance is not intended to be operated using external timer or remote-control system.

**SAVE THESE INSTRUCTIONS.
FOR HOUSEHOLD USE ONLY**

PARTS AND FEATURES



CAUTION: HOT SURFACE. To indicate that the marked item can be hot and should not be touched without taking care.

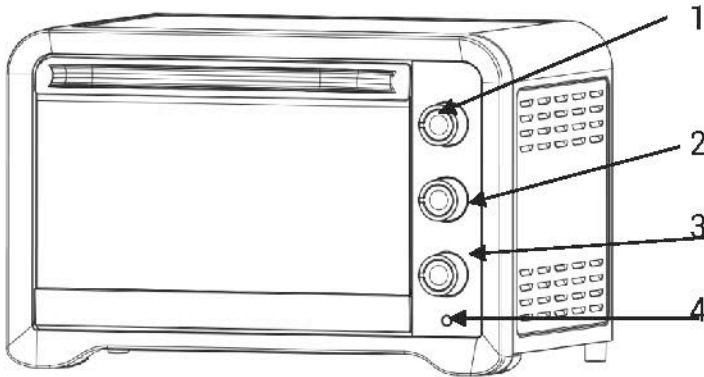

5



6



7



8



9



10


1. Temperature control knob
2. Function knob
3. Timer
4. Pilot lamp
5. Bake tray
6. Rotisserie rod & skewers

7. Wire rack
8. Rotisserie handle
9. Crumb tray
10. Bake tray handle


Control Panel

1. **Temperature control:** choose the desired temperature from 100°C to 230°C for cooking.
2. **Function control:** this oven is equipped with different functions for a variety of cooking needs:


: OFF

 Upper heating element and lower heating element with convection function.

 Upper heating element with convection function.

 Upper and Lower heating elements are working together.

 Upper heating element with rotisserie function.


 Upper and lower heating elements with convection and rotisserie function.

3. **Timer:** You can set the time up to 60 minutes by turning the control clockwise. This function has a bell that rings at the end of the programmed time.

BEFORE USING YOUR OVEN

Before using your electric oven for the first time, be sure to:

1. Read all of the instruction included in this manual.
2. Make sure that the oven is unplugged and the **Timer** is in the "OFF" position.
3. Wash all the accessories in hot, soapy water or in the dishwasher.
4. Thoroughly dry all accessories and re-assemble in oven, plug oven into outlet and you are ready to use your new toaster oven.

5. After reassembling your oven, we recommend that you run it at the highest temperature (230°C) on the  function for approximately 15 minutes to eliminate any packing residue that may remain after shipping. This will also remove all traces of odor initially present.

PLEASE NOTE: During first use, the appliance may release some smoke and burning smell for the first few minutes. This is due to factory residue being burned off. This is normal.

USING YOUR OVEN

1. Place food on removable wire rack or bake tray and insert into oven.
2. Set the temperature control to desired position.
3. Set the function control.
4. Turn the Timer to desired duration. Bell will ring to signal the end of the cooking cycle.
5. Turn the timer to 'Off' position to switch off the oven.

CLEANING AND MAINTENANCE

1. It is important that you clean the appliance after each use to prevent an accumulation of grease and avoid unpleasant odors.
2. Allow the appliance to cool and unplug from outlet before cleaning.
3. Do not immerse appliance in water or wash it under waterspout.
4. Removable wire rack, bake pan, crumb tray can be washed, as normal kitchenware.
5. Clean outside of appliance with a damp sponge.
6. Do not use abrasive cleaners or sharp utensils to clean the oven.
7. Let all parts and surfaces dry thoroughly prior to plugging oven in and using.



You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipment to an appropriate waste disposal center.