

**BAUMANN
LIVING**
PROFESSIONAL

COUNTERTOP STAND MIXER



BM-LW6836

INSTRUCTIONS MANUAL

www.baumannliving.com

TABLE OF CONTENTS

IMPORTANT SAFEGUARDS.....	2
PARTS AND FEATURES	5
BEFORE FIRST USE.....	6
HOW TO OPERATE	6
GENERAL MIXING TIPS	10
CLEANING AND MAINTENANCE.....	10
TROUBLESHOOTING	11
WARRANTY TERMS AND CONDITIONS.....	12

IMPORTANT SAFEGUARDS

When using this electrical appliance, basic safety precautions should always be followed:


1. Read all instructions carefully.
2. The appliance should only be connected to a correctly installed outlet. Ensure that the rating for your local power supply corresponds with the details on the rating plate of the appliance.
3. To protect against the risk of electric shock, do not immerse this appliance, cord set or plug in water or any other liquid.
4. Close supervision is necessary when any appliance is used by or nearby children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Always disconnect the appliance from the outlet when fitting or removing accessories. This will prevent unintentional activation of the appliance.
7. Do not operate any appliance with a damaged cord or plug, or after appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service center for examination, repair, or adjustment.
8. The use of accessory attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
9. Do not use outdoors.

10. Do not use an extension cord.
11. Do not let cord hang over edge of table or counter, or touch hot surfaces.
12. Ensure that the power cable does not become wet or moist during use. Route the cable in such a way that it cannot be crushed or damaged.
13. Do not place the appliance near a hot gas or electric burner.
14. Extreme caution must be used when moving an appliance containing hot oil or other liquids.
15. Do not use appliance other than for its intended use.
16. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
17. Children should be supervised to ensure that they do not play with the appliance.
18. Do not change accessories unless the drive shaft is entirely at a standstill and the mixer is unplugged from the power supply! The appliance will run on for a short time after being switched off!
19. Keep hands, hair, and clothing, as well as spatulas and other utensils away from beaters during operation to reduce the risk of injury to persons and/or damage to mixer.
20. Never leave the appliance unattended.

21. While the appliance is in operation, do not put anything other than the ingredients to be processed into the mixing bowl.
22. Do not operate the appliance at maximum speed for longer than 4 minutes.
23. Do not operate the appliance without ingredients. Risk of overheating.
24. Never fill the appliance with hot ingredients.
25. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
26. This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices, and other similar working environment;
 - in agricultural working environments;
 - by customers in hotels, motels etc. and similar establishments;
 - in bed-and breakfast type environments.

**SAVE THESE INSTRUCTIONS.
FOR HOUSEHOLD USE ONLY.**

PARTS AND FEATURES

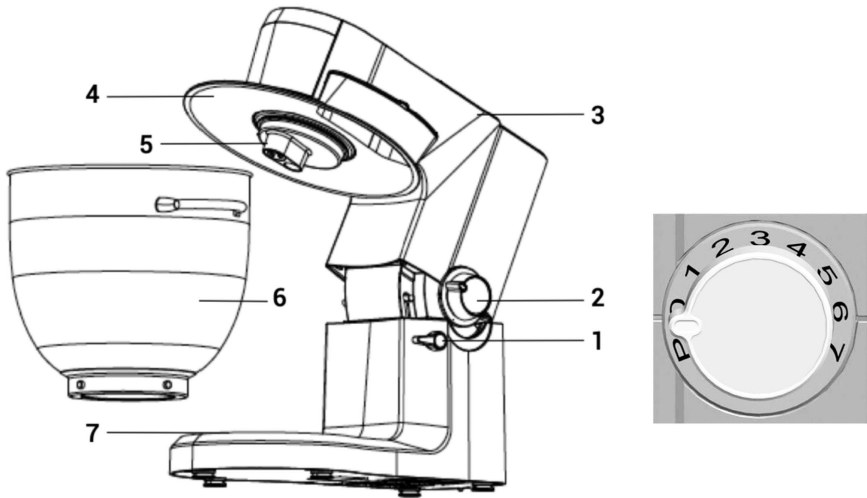

- | | |
|-----------------------------------|-------------------------------|
| 1 Mixer Head Release Lever | 6 Stainless Steel Mixing Bowl |
| 2 Speed Control Dial | 7 Base |
| 3 Mixer Head | 8 Wire Whisk |
| 4 Splatter Guard with Chute | 9 Dough Hook |
| 5 Attachment Socket (drive shaft) | 10 Flat Beater |

BEFORE FIRST USE

1. Take all the parts out of the box and remove the packaging material and any protective wrapping or stickers.
2. Clean all components as described in the section “Cleaning and Maintenance”. Ensure that all parts are completely dry.
3. Place the appliance on a clean and level surface and attach it firmly in place with the suction cups.

HOW TO OPERATE

WARNING! RISK OF INJURY!




▶▶ Never place your hands or fingers in the mixing bowl during operation! Danger of injury due to rotating parts!

▶▶ Do not change accessories unless the drive shaft is at a complete standstill! After being switched off, the drive shaft will continue to run for a short time.

▶▶ In cases of malfunction, switch the appliance off and remove the plug from the wall socket to prevent the appliance from being switched back on unintentionally.

1. Always make sure mixer is unplugged and Speed Control Dial is set to OFF (0).

2. Press the Mixer Head Release Lever down and the tilt the mixer head up until it is fully raised. The Mixer Head Release Lever will snap back to the locked position.
3. If desired, fit splatter guard onto the underside of the mixer head where the attachment socket is found, and snap into place.
4. Place mixing bowl onto the base, then turn bowl clockwise until securely in place.
5. Select the appropriate attachment:

			
Action and Recommended Speed	Beating and whipping mixtures; gradually increase the speed from 1 to 7	Creaming fat and sugar / Start on speed 1; gradually increase to 5 Beating fat, sugar, and eggs / Speed 4 to 7	Mixing and kneading dough / Start on 1; gradually increase to 2

		Folding in flour, fruit, etc./ Speed 1 to 2; do not overmix	
Usage	Use for mixtures that need to incorporate air such as eggs, cream, meringues, mousses, and souffles	Use for stirring, mixing, and beating medium to heavy mixtures such as cakes, biscuits, pastries, icing and fillings	Use for mixing and kneading bread doughs containing yeast

6. Insert attachment onto drive shaft and push upward as far as possible. Turn attachment to right, hooking attachment over the pin on the shaft.
7. Add ingredients into the bowl.
8. Push the Mixer Head Release Lever up and lower the mixer head down into position.
9. Plug unit into outlet. Select desired speed 1 to 7, or P (Pulse) to start mixing. You may add additional ingredients through the chute during operation.

NOTE: *The maximum operation time per use should not exceed 20 minutes with a minimum of 10-15 minutes rest time between uses. Do not operate the appliance at maximum power for longer than 4 minutes.*

10. When finished, turn Speed Control Dial to OFF (0) and unplug from outlet.
11. Press the Mixer Head Release Lever down and the tilt the mixer head up.
12. Remove the attachment by pushing attachment upward as far as possible. Turn attachment to the left and pull to remove from the shaft.
13. Remove the mixing bowl from the base by turning it counterclockwise, then lifting it up.
14. Remove splatter guard by gently pulling it away from the mixer head.

GENERAL MIXING TIPS

- Place liquid ingredients into mixing bowl first, then add dry ingredients.
- Always stay near the mixer during use.
- To begin mixing, use the lower speeds until the ingredients are thoroughly combined. This will reduce splattering.
- Always add ingredients as close to the sides of the bowl as possible, not directly into the moving attachment.
- Mixtures containing large amounts of liquid ingredients should be mixed at lower speeds to avoid splattering. Increase speed only after the mixture has thickened.
- If necessary, stop the mixer to scrape the sides of the bowl with a spatula.

CLEANING AND MAINTENANCE

WARNING! Electrical Shock Hazard

Disconnect power before cleaning. Do not immerse cord, plug, or base in water or any liquid.

1. Unplug unit and make sure Speed Control Dial is set to OFF (0).

2. Wash bowl and attachments in hot, soapy water. Rinse and dry. Bowl and attachments are dishwasher-safe in the top rack only.
3. Wipe mixer head and base with a damp, nonabrasive cloth.

TROUBLESHOOTING

The appliance will not turn on.

- Check that the plug is correctly connected to a wall socket.
- Check whether the Mixer Head is in the correct position.

Food is not mixed well.

- Place liquid ingredients in bowl before adding dry ingredients.
- Reduce ingredients.
- Stop mixer and scrape sides of bowl.
- Increase speed.

Food splatters during mixing.

- Mixtures containing large amounts of liquid ingredients should be mixed at low speeds to avoid splattering. Increase speed only after the mixture has thickened.

WARRANTY TERMS AND CONDITIONS

ONE-YEAR LIMITED WARRANTY ON PARTS AND LABOR

BAUMANN LIVING provides a warranty to the original purchaser of this product against defects in materials and workmanship for one year. If a product covered by this warranty is determined to be defective within the warranty period, **BAUMANN LIVING** will repair or replace the defective part with a new or remanufactured part free of charge subject to terms and conditions stated herein.

To obtain warranty service, proof of purchase in the form of a sales invoice or copy thereof is required to show that a product is within the warranty period. If any one of the documents cannot be produced, corresponding fees for labor and replacement parts will be charged.

Parts and Labor

There will be no charge for parts and labor during the warranty period. Replacement parts or units may be new or recertified and are upon **BAUMANN LIVING's** option and sole discretion. Replacement parts and units are warranted for the remaining portion of the original warranty. Our decision on all questions relating to complaints as a result of defects, either workmanship or materials, shall be conclusive and you shall agree to abide by such decision. Any unit or defective part that have been replaced shall become **BAUMANN LIVING's** property. After the lapse of this warranty, a charge will be made on all labor and replacement of parts.

Types of Services

Defective products must be sent to any **BAUMANN LIVING** service center to obtain warranty service. **BAUMANN LIVING** is neither responsible for transportation costs to the service center nor **BAUMANN LIVING** will cover return shipping to the customer. Product returns to **BAUMANN LIVING** service centers must utilize either the original carton box and shipping material or packaging that affords an equal degree of protection.

For home service, the transportation fee of **BAUMANN LIVING** service personnel will be charged to the customer, depending on the location. Our service personnel reserve all rights to refuse to attend to any equipment installed in an inaccessible location or any other hazardous situation.

LIMITATIONS AND EXCLUSIONS

BAUMANN LIVING one-year limited warranty only covers defects in materials and workmanship; however, this warranty does not cover the following:

1. Damage resulting from accidents, transport, misuse, abuse, alteration, tampering, or failure of the purchaser to follow normal operating procedures outlined in the user's manual.
2. Damage caused by negligence and poor maintenance.
3. Defects or damage due to spillage of food/liquids or improper usage of electrical supply or electrical circuit, major fluctuations in voltage, exposure to rain or moisture, wrong fuel or oil used.
4. Damage, losses, and defects as a result of fire, flood, or other Acts of God.

5. Normal wear-and-tear, corrosion, rusting, or stains.
6. Defects & damage arising from improper testing, operation, usage of the wrong component, demonstration, maintenance, installation, adjustment, or any alteration or modification of any kind.
7. Scratches & damage to the outer surface areas and externally exposed parts that are due to normal customer use.
8. General maintenance & routine servicing.
9. Claims for damaged/missing parts after 7 days from the date of purchase.
10. If any part or parts of the unit are replaced with a part or parts not supplied or approved by us, or if the unit has been dismantled or repaired by any person other than a **BAUMANN LIVING** authorized technician.
11. Any equipment/product which has its serial number removed or made illegible/tampered with.
12. If the warranty card is altered, defaced, or erased in any manner whatsoever.
13. If the unit is used for purposes other than household use, such as commercial use.

The one (1) year warranty covers the mainboard and control PCB, motor, heating element, boiler, and power supply. However, this warranty does not cover parts (i.e. accessories, bowl, pressure valve, top cover lid, filter, glass carafe, heating and grill plates, glass lid, pot, wire racks, drip tray, glass and plastic jar, juicing cones, lever, blades, cutter, baskets, glass bowl, handle, trays, fuse, coffee holder, water and milk tank, silicon tubes, belts, gaskets, burrs, rubber connectors, gears, glass door, bulb, handle, interior and exterior casing) that are subject to wear and tear, rust, stains, or corrosion.

This one-year limited warranty does not cover Products sold **"AS IS"**, **"FACTORY RECTIFIED"**, or by a non-authorized reseller.

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED OR DESCRIBED ABOVE. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE PERIOD OF TIME SET FORTH ABOVE. **BAUMANN LIVING'S** TOTAL LIABILITY FOR ANY AND ALL LOSSES AND DAMAGES RESULTING FROM ANY CAUSE WHATSOEVER INCLUDING **BAUMANN LIVING'S** NEGLIGENCE, ALLEGED DAMAGE, OR DEFECTIVE GOODS, WHETHER SUCH DEFECTS ARE DISCOVERABLE OR LATENT, SHALL IN NO EVENT EXCEED THE PURCHASE PRICE OF THE PRODUCT. **BAUMANN LIVING** SHALL NOT BE RESPONSIBLE FOR LOSS OF USE, COMMERCIAL LOSS, LOST REVENUE OR LOST PROFITS, OR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES. THIS WARRANTY IS SUBJECT TO CHANGE WITHOUT NOTICE.

IMPORTANT: Please present sales invoice as proof of purchase whenever you require our service during the warranty period.

www.baumannliving.com