

BAUMANN

5-cups programmable
coffee maker

Coffee brewing made easy

BM-CM1082TCB



INSTRUCTIONS MANUAL


www.baumannliving.com

TABLE OF CONTENTS

IMPORTANT SAFEGUARDS	1
PARTS AND FEATURES	4
ILLUSTRATIONS	6
BEFORE FIRST USE	7
OPERATING THE COFFEE MAKER	7
Assembly	8
Using the appliance.....	9
Setting the clock.....	10
Brewing	11
Keep warm function	12
AUTO function.....	12
HINTS AND TIPS	13
CLEANING	14
Storage.....	15
TROUBLESHOOTING	16

IMPORTANT SAFEGUARDS

When using this appliance, basic safety precautions should always be followed, including the following:

- 1.** Read all instructions before use.
- 2.** Do not touch hot surfaces. Use handles or knobs.
- 3.** To protect against electric shock, do not immerse cord or plugs or the appliance in water or other liquid.
- 4.** Close supervision is necessary when any appliance is used by or near children.
- 5.** Unplug from wall outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- 6.** If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard .
- 7.** The use of accessory attachments not recommended by the appliance manufacturer may result in electric shock or injuries to persons.
- 8.** Do not use outdoors or in a damp area.
- 9.** Do not let power cord hang over edge of table or counter, or touch hot surfaces.
- 10.** Do not place on or near a hot gas or electric burner, or in a heated oven.
- 11.** To disconnect, turn the appliance off by pressing the  button, then remove plug from wall outlet.
- 12.** Do not use appliance for other than intended use.
- 13.** The carafe is designed for use with this appliance only. It must never be used on a range top.

14. Do not set a hot carafe on a wet or cold surface.
15. Do not use a cracked carafe or a carafe having a loose or weakened handle.
16. Do not clean the carafe with cleansers, steel wool pads, or other abrasive material.
17. Scalding may occur if either lid is opened during the brewing cycles.
18. Do not touch the keep warm plate while the appliance is switched on.
19. Do not leave an empty carafe on the keep warm plate while the appliance is switched on. This may cause the carafe to crack.
20. TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT REMOVE THE BOTTOM COVER ON THE APPLIANCE. NO USER SERVICEABLE PARTS INSIDE. REPAIR SHOULD BE DONE BY AUTHORIZED SERVICE PERSONNEL ONLY.
21. Do not operate the appliance with an empty water tank.
22. Keep the area above the appliance clear during use, as hot steam will escape the appliance.
23. When opening the lid after use, be careful as hot steam can be trapped beneath.
24. Do not use hot water for brewing.
25. Do not add water immediately after brewing. Hot steam will generate and scalding may occur.

SAVE THESE INSTRUCTIONS

FOR HOUSEHOLD USE ONLY

Extension cords

A short detachable power-supply cord is to be provided to reduce the risk of becoming entangled in or tripping over a longer cord. Longer extension cords are available and may be used if care is exercised in their use. If a long detachable power-supply cord or extension is used:

- The marked electrical rating of the cord or extension cord should be at least as great as the electrical rating of the appliance.
- If the appliance is of the grounded type, the extension cord should be a grounding 3-wire cord; and
- The longer cord should be arranged so that it does not drape over the countertop or table top where it can be pulled on by children or tripped over unintentionally.

Polarized plug

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.


PARTS AND FEATURES



- 1 – Lid
- 2 – Drip head
- 3 – Water tank
- 3a – Water-level indicator
- 4 – Power cord with plug
- 5 – Anti-slip feet
- 6 – Control panel

- 7 – Keep warm plate
- 8 – Carafe
- 9 – Carafe handle
- 10 – Carafe lid
- 11 – Drip stop
- 12 – Filter housing
- 13 – Permanent filter



Name	Function
14 – AUTO button	Starts programmed operation/extend keep warm
15 – MIN button	Sets minutes (time/program)
16 – Display	Shows time/program time
17 – HOUR button	Sets hours (time/program)
18 –  button	On/Off, starts manual brewing cycle

ILLUSTRATIONS



BEFORE FIRST USE

- Remove all packaging materials, labels and/or stickers from your appliance.
- Check package contents for completeness and damage. Do not operate the appliance if package content is incomplete or appears damaged. Return it immediately to the dealer.

CAUTION: Danger of suffocation! Packaging materials are not toys. Always keep plastic bags, foils and Styrofoam parts away from babies and children. Packaging material could block nose and mouth and prevent breathing.

NOTE: Always use the appliance fully assembled

- Place the appliance on a clean, at and stable surface.
- Connect the plug to a suitable wall outlet (ill. M).

OPERATING THE COFFEE MAKER

NOTE: The appliance may produce an odor and emit smoke when switched on for the first time, as residues from the production process are eliminated. This is normal and does not indicate a defect or hazard.

- When using the appliance for the first time, it is recommended to operate it for at least 2 full cycles, without ground coffee, using any program.

CAUTION: During operation, the appliance produces hot steam. Keep clear of the top of the appliance.

CAUTION: Never touch the keep warm plate during use (ill.J) or remove accessories when the appliance is plugged in and switched on.

CAUTION: Never use the appliance with the lid open (ill. K).

- Let the appliance cool completely.
- Clean the appliance (see Cleaning).

Assembly

- Place the appliance on a clean, at and stable surface.
- Open the lid and place the filter housing in the appliance (see ill. A)

NOTE: Ensure to align the filter housing correctly (see ill. A).

- Place the permanent filter in the filter housing (see ill. B)
- Close the lid (ill. F).
- To disassemble, follow the above steps in reverse order.

Using the appliance

Use the appliance for brewing and keeping coffee warm.

NOTE: The appliance has a rated power of 700W. Before plugging it into the wall outlet, ensure that the electrical circuit is not overloaded with other appliances. This appliance should always be operated on a separate 220V ~ 60Hz wall outlet.

CAUTION: Always ensure there is water in the water tank before using the appliance. Do not use the appliance without water. Do not use hot water for brewing. Do not over fill the water tank. Do not use the appliance without the carafe, filter housing or the permanent filter.

- Assemble the appliance.
- Add the required amount of ground coffee into the permanent filter using the measuring scoop (ill. C).
- Fill the required amount of water into the carafe. Pour the water into the water tank (ill. D). Check the water-level indicator in the inside of the water tank (ill. E).
- Close the lid (ill. F).
- Place the carafe on the keep warm plate (ill.F).

NOTE: Ensure the appliance is assembled correctly and completely.

NOTE: It is possible to place a paper filter into the filter housing instead of the permanent filter. Only use a filter of the cone type 1x2 (for 4-6 cups).

NOTE: Do not place a paper filter in the permanent filter, as water will not flow freely through the permanent filter.

- Connect the plug to a wall outlet (ill.G).
- The appliance is now in stand-by mode. On the display (18), "12:00" will flash for about 5 seconds and then change to be displayed constantly. The display backlight will be fully illuminated for about 30 seconds before dimming.

NOTE: Pressing any button at any stage will cause the display backlight to switch to full illumination for about 30 seconds before returning to being dimmed.

Setting the clock

NOTE: Setting the clock is required to be able to use the **AUTO** function.

NOTE: The appliance has a 24-hour display

- Press and hold **HOUR** or **MIN** button for about 1 second to enter the clock setting mode.
- Press the **HOUR** button to set the hours on the clock. Each press will advance the clock by one hour.
- Press the **MIN** button to set the minutes on the clock. Each press will advance the clock by one minute.

NOTE: Press and hold either the **HOUR** or **MIN** button to advance through hours/minutes rapidly.

NOTE: The clock will be reset if the appliance is unplugged from the wall outlet. The clock needs to be set again.

NOTE: If no button is pressed for about 5 seconds, the set time will be saved and the appliance returns to stand-by mode.



Brewing

NOTE: Depending on the number of cups required to be brewed, the amount of ground coffee has to be adjusted. As a general rule, one scoop of ground coffee equals one cup.

NOTE: The appliance will run until no water is left in the water tank.


NOTE: During operation, the keep warm plate will start to warm up and remain on until the appliance is returned to stand-by mode.

NOTE: After the brewing has finished, the appliance switches to the keep warm function automatically.

- Add the required amount of ground coffee in the permanent filter **(15)** (ill.C).
- Press the  button to start the brewing process (ill. H). The button will illuminate.
- Once the brewing process has finished, a signal tone is emitted and the appliance switches to the keep warm function, by default for 40 minutes or until switched off via the  button.

NOTE: During the brewing process, pressing any button, apart from the button and the **AUTO** button to see the preset time, has no effect. Only the display backlight will be fully illuminated.

NOTE: It is possible to remove the carafe from the keep warm plate during the brewing process for a short time, within 30 seconds, to pour coffee. The flow of coffee is stopped by the drip stop (ill. I).

- To stop the brewing process prematurely, press the  button. The appliance will return to stand-by mode. The keep warm plate will stop heating.

Keep warm function

The appliance is equipped with a keep warm function, which is switched on automatically after any brewing program has finished. The default keep warm time is 40 minutes.

AUTO function

The appliance is equipped with an automatic brewing function, allowing you to set the time you would like freshly brewed coffee.

NOTE: Using this function is only possible if the clock has been set.

NOTE: The time set, is the time the coffee will be ready.

- Add the required amount of ground coffee in the permanent filter (ill. C).
- Fill the water tank with the required amount of water (ill. D).
- Place the carafe on the keep warm plate.

- Press and hold the **AUTO** button for about 1 - 3 seconds. **AUTO** starts flashing in the display.
- Set the time by pressing the buttons **HOURL** and **MIN**.
- Press the **AUTO** button to set and confirm the time. **AUTO** is shown in the display.

NOTE: To cancel the **AUTO** function, press and hold the **AUTO** button for about 3 seconds. **AUTO** is no longer shown in the display.

- The **AUTO** function is now set and the appliance will start the brewing process in time to finish at the set time.
- Once the brewing process starts, **AUTO** is no longer shown in the display and the **ON** button will illuminate.

NOTE: The set **AUTO** time will remain set until changed or the appliance is unplugged. To use the **AUTO** function again, first press and hold the **AUTO** button for about 1 - 3 seconds. Adjust the time if required and confirm by pressing the **AUTO** button again.

HINTS AND TIPS

- As a general rule, one measuring scoop of ground coffee equals one cup.
- It is recommended not to place appliance under wall units, as rising steam can cause damage to wooden cabinetwork.

CARE AND CLEANING

Proper maintenance will ensure many years of service from your appliance. Clean the appliance after every use. The appliance contains no user serviceable parts and requires little maintenance. Leave any servicing or repairs to qualified personnel.

CAUTION: Disconnect the plug from the wall outlet. Allow all parts of the appliance to cool down completely.

NOTE: Do not immerse the power cord with plug and appliance into water or any other liquid. Do not use abrasive cleaners, steel wool or scouring pads (ill.L). Dry all parts thoroughly after cleaning, before using or storing the appliance. Ensure that no water enters the appliance housing.

- Clean the appliance and keep warm plate with a clean slightly damp cloth.
- Clean the carafe, permanent filter, filter housing in hot, soapy water. The carafe is dishwasher safe.
- To remove stains from the carafe, fill with hot water and add baking soda or mild cleaning agent. For stubborn stains, leave to soak overnight.
- Clean all part of the appliance after each use.


NOTE: Dry all parts and surfaces thoroughly before use. Make sure that all parts and surfaces are completely dry before connecting the appliance to a wall outlet. Do not dry the inside of the water tank with a cloth, as lint may remain.

NOTE: It is recommended to replace the filter every 60 cycles following the steps above. Replace more frequently, if the water hardness level in your area is high.

Storage

- Before storage, always make sure the appliance is completely cool, clean and dry.
- It is recommended to store the appliance in a dry place.
- Store the power cord in the cord storage of the appliance (ill. N).
- Store the appliance on a stable shelf or in a cupboard, preferably in its original packaging. To avoid accidents, ensure that both the appliance and its power cord are beyond the reach of children or pets.

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The appliance is not working	Appliance not plugged in Wall outlet not energized Appliance not switched on	Insert the plug into the wall outlet Check fuses and circuit breaker Switch the appliance on by pressing the  button
Water does not pass through the appliance	Water tank is empty Water intake under charcoal filter holder is clogged The permanent filter is blocked	Refill water into the water tank Clean the water intake Clean the permanent filter (15) and try a coarser ground coffee
The coffee is too strong	Too much ground coffee in the permanent filter	Empty the permanent filter and reduce the amount of ground coffee used
The coffee is too weak	Ground coffee too coarse	Try a finer ground coffee

<p>AUTO function not working/ not working correctly</p>	<p>The clock has not been set</p> <p>The clock has been set incorrectly</p> <p>The AUTO time has been set incorrectly</p> <p>AUTO mode is not activated</p>	<p>Set the clock (Setting the clock)</p> <p>Reset the clock to the correct time</p> <p>The AUTO time shows the brewing time will be started, set the time accordingly</p> <p>Make sure AUTO is shown in display</p>
<p>Coffee leaks around the filter housing</p>	<p>Filter housing not aligned correctly</p> <p>Ground coffee too fine, blocking the permanent filter</p> <p>Carafe not placed on keep warm plate correctly</p>	<p>Align filter housing correctly (ill. A)</p> <p>Clean the permanent filter and use a different type of coffee</p> <p>Ensure the carafe is seated correctly on the keep warm plate</p>