

BAUMANN

horizontal masticating
slow juicer

Healthy juicing has never been easier

BM-JYZE21C



INSTRUCTIONS MANUAL

www.baumannliving.com

TABLE OF CONTENTS

IMPORTANT SAFEGUARDS 2

PARTS AND FEATURES 5

BEFORE FIRST USE 6

HOW TO ASSEMBLE..... 6

HOW TO OPERATE..... 7

JUICING TIPS 8

HOW TO DISASSEMBLE AND CLEAN 9

STORAGE 9

TROUBLESHOOTING 10

IMPORTANT SAFEGUARDS

When using this electrical appliance, basic safety precautions should always be followed:


1. Read all instructions.
2. Before use, please make sure that the service voltage corresponds to 220-240V ~50/60Hz, in order to avoid damaging the appliance.
3. The unit belongs to Class 1 appliance. Make sure the unit is properly grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current.
4. Do not operate any appliance with a damage cord or plug or after the appliance malfunction or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
5. The use of attachments, including juice strainer and food pusher, not recommended or sold by the manufacturer may cause fire, electric shock or injury.
6. Do not place on or near a hot gas or electric burner or in a heated oven.
7. Do not let cord hang over edge of table or counter.
8. Please operate the unit on a horizontal workbench. Do not operate it on an inclined or unstable workbench or surfaces such as carpets or towels. Keep the unit away from the edges of a workbench or table in order to prevent injuries or damage to the unit.
9. Never run the appliance without food inside.
10. Do not put your fingers or other objects into the feeding chute while juicer is in operation. If food becomes lodged in

the feeding chute, use food pusher or another piece of fruit or vegetable to push it down. When this method is not possible, turn the motor off and disassemble juicer to remove the remaining food.

11. Avoid contact with moving parts.
12. Make sure the unit is switched off after each use. Make sure the motor stops completely before disassembling.
13. Do not immerse the main body in water or other liquid.
14. All detachable parts must be dried completely after cleaning, and then assembled into the appliance for next usage.
15. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
16. Always disconnect the juicer from the power supply if it is left unattended and before assembling, disassembling or cleaning.
17. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
18. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge.
19. Do not use outdoors.
20. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.

SAVE THESE INSTRUCTIONS. FOR HOUSEHOLD USE ONLY.

PARTS AND FEATURES

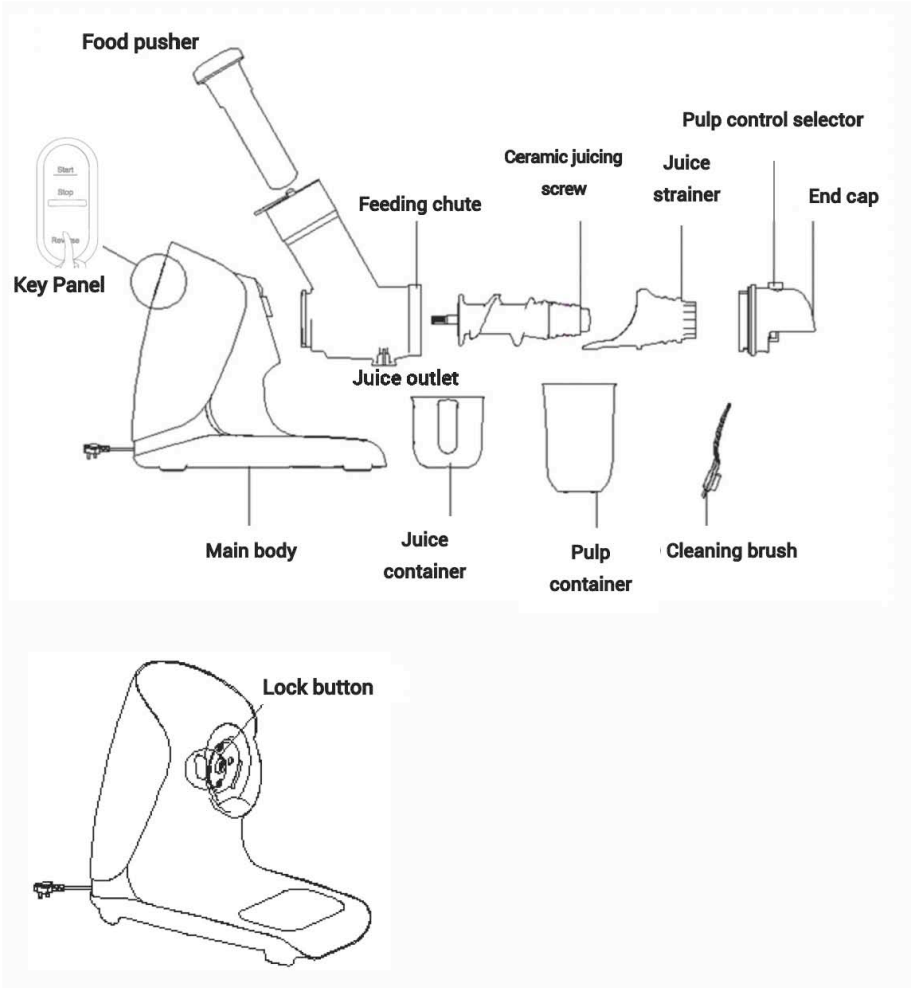





BEFORE FIRST USE

1. Unpack the appliance and place all parts on a flat surface.
2. Immerse all the detachable parts and accessories in warm soapy water and rinse them and dry. (To disassemble, see section HOW TO DISASSEMBLE AND CLEAN)

WARNING! *Never immerse main body in water to prevent the risk of electric shock.*


3. Before assembling, ensure that the power cord is unplugged from the power supply.

HOW TO ASSEMBLE


1. Align feeding chute frame and main body. Turn feeding chute counterclockwise from the  to the  position until the lock button clicks.
2. Align the shaft of the ceramic juicing screw with the hole in the feeding chute frame, then push the juicing screw into place.
3. Slide the juicing strainer over the ceramic juicing screw.
4. Align mark on end cap to  mark on feeding chute frame. Turn end cap counterclockwise until mark on end cap is aligned with the  mark on the feeding chute frame.
5. Finally, place containers under the juice outlet and pulp outlet.

HOW TO OPERATE


1. Insert the power plug into an outlet. Open the juice outlet cover.
2. Choose your desired juice texture using the pulp control selector on the end cap.

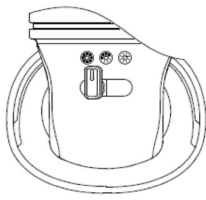

More pulp

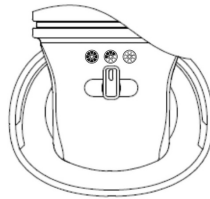

Less pulp

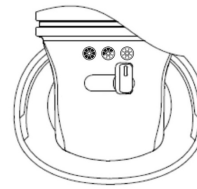

No pulp

Note: Do not adjust the pulp control selector while the unit is in operation.

3. Press the START/STOP button. Insert cut fruits or vegetables into the feeding chute, a few pieces at a time. If the pieces are too big for the rotating lid, flip it to drop the pieces inside the chute. Use the food pusher to push the fruit or vegetables gently down the chute. Leave the unit running as you feed in the ingredients.
 - Feed ingredients little by little and at a slow pace, allowing all the pulp to extract. Do not force or overstuff.
 - Use the food pusher when food becomes stuck.
 - If becomes lodged in the feeding chute, a beeping sound will be heard and the unit will automatically operate in reverse for a few seconds before coming to a stop. Press START/STOP button to resume the juicing operation.



4. After extraction is completed, press START/STOP and close the juice outlet cover. Unplug unit from outlet.

Note: *The unit has a protection chip and will automatically stop after 15 minutes of continuous operation. Wait for about 20-30 minutes to let the motor cool down before using the unit again.*

JUICING TIPS


1. Choose fresh fruits and vegetables with higher water content, such as apples, pears, pineapple, watermelon, citrus fruits, carrots, tomatoes, and cucumbers.
2. Cut fruit into pieces small enough to fit the feeding chute opening.
3. Peel the thick skin and remove large and/or hard seeds and stones from fruits such as mangoes and pineapples. Leave the skin on apples.
4. Fresh apple juice turns brown quickly because of oxidation. This can be slowed down by adding a few drops of lemon juice.
5. Leafy vegetables with stems can also be used with the slow juicer.
6. Soft, fleshy fruits such as bananas, papayas, avocado, and mangoes are more suitable for blenders.
7. Seeds, nuts, beans, and corn need to be fresh or soaked in water before using with the slow juicer.
8. Mix with fruits when juicing leafy greens for optimal results.
9. Do not feed pulp into the juicer for re-extraction.

HOW TO DISASSEMBLE AND CLEAN

1. Turn feeding chute assembly clockwise from the  to the  position until the lock button clicks.
2. Remove the end cap from the feeding chute assembly, followed by the juice strainer, then the ceramic juicing screw.
3. Wash the juice and pulp containers, feeding chute, food pusher, ceramic juicing screw, juice strainer, and end cap in warm soapy water. Use the supplied cleaning brush to clean the parts thoroughly.

Note: *Move the pulp control selector back and forth to facilitate removal of pulp inside the end cap.*

4. Wipe main body with a soft, damp or dry cloth.
5. Dry all parts thoroughly.

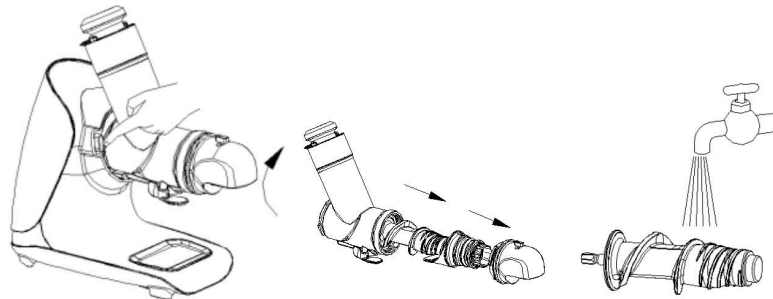

STORAGE

1. To avoid formation of rust, dry the parts thoroughly after washing.
2. Store juicer in a dry, well-ventilated place beyond the reach of children. Avoid direct sunlight.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Juicer does not run after power is switched on	<ul style="list-style-type: none"> • Power plug is not plugged • Feeding chute assembly is not attached to the main body correctly • Circuit breaker protection is activated: Unsuitable ingredients used; volume of ingredients too big 	<ul style="list-style-type: none"> • Insert power plug into an outlet • Make sure feeding chute assembly is properly attached • Use suitable ingredients and do not overstuff the juicer
The juicer suddenly stops	<ul style="list-style-type: none"> • Intelligent protection chip is activated; operating time is longer than the rated duration • Feeding chute assembly is jammed 	<ul style="list-style-type: none"> • Follow the rated duration (15 minutes). To resume operation, please wait for 20-30 minutes before turning on the unit again. • Press Reverse button to loosen the jammed ingredients. Or remove the feeding chute assembly and take out the ingredients causing the jam.
Abnormal noise and vibration during operation	The feeding chute assembly parts are not installed and assembled correctly	Make sure the feeding chute assembly is properly installed and in place.

<p>Juice is leaking from the slow juicer</p>	<ul style="list-style-type: none"> • The juice outlet cover is open • Feeding chute assembly is not assembled properly 	<ul style="list-style-type: none"> • Close the juice outlet cover. • Assemble parts correctly.
--	--	--

IMPORTANT DISPOSAL INSTRUCTIONS



GB

The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.

NO

Symbolet på produktet eller emballasjen indikerer at produktet ikke må kastes sammen med annet husholdningsavfall. I stedet er det ditt ansvar å avhende utstyret ved å levere det til et egnet innsamlingssted for resirkulering av elektrisk og elektronisk utstyr. Separat innsamling og gjenvinning av kassert utstyr på tidspunktet for deponering vil bidra til å bevare naturressurser og sikre at det resirkuleres på en måte som beskytter helse og miljø. For mer informasjon om hvor du kan levere avfall til gjenvinning, kan du kontakte lokale myndigheter, eller der du kjøpte produktet.

SE

Symbolen på produkten eller dess forpackning indikerar att denna produkt inte får kastas bort tillsammans med ditt vanliga hushållsavfall. Istället är det ditt ansvar att slänga bort utrustningen genom att lämna över den till en ansvarig insamlingsstation för återanvändning av elektriska eller elektroniska apparater. Den separata återvinningscentralen för din bortkastade utrustning kommer att ta tillvara på återanvändbara produkter och konservera naturella tillgångar och intyga att utrustningen återanvänds på ett sätt som skyddar mänsklig hälsa och miljön. För ytterligare information om var du kan slänga bort ditt avfall för återanvändning, vänligen kontakta din lokala myndighet eller där du inhandlade produkten.

FI

Tuotteessa tai sen pakkauksessa oleva merkintä osoittaa, että tätä tuotetta ei saa hävittää muun kotitalousjätteen mukana. Sen sijaan vastuullasi on hävittää kyseinen laite viemällä se määrättyyn käytettyjen sähkö- ja elektroniikkatuotteiden keräyspisteeseen kierrätystä varten. Erilliset käytettyjen laitteiden keräys- ja kierrätystoimet auttavat säästämään luonnonvaroja ja varmistamaan, että laitteet kierrätetään ihmisten terveyttä ja ympäristöä suojelevalla tavalla. Saat lisätietoja jätteen keräys- ja kierrätyspisteistä ottamalla yhteyttä paikallisiin viranomaisiin tai jalleenmyyjäsi.