

BAUMANN

electric kettle

Boil water in style

BM-KE4060GS



INSTRUCTIONS MANUAL

www.baumannliving.com

Table of Contents

IMPORTANT SAFEGUARDS	1
PARTS AND FEATURES.....	3
BEFORE FIRST USE.....	4
HOW TO OPERATE.....	4
Boil-dry protection.....	5
CARE AND CLEANING	5
Removal of mineral deposits	6
Cleaning external housing	6
Cleaning the filter.....	6
Storage.....	6

IMPORTANT SAFEGUARDS

Before using the electrical appliance, the following basic precautions should always be followed, including the following:


1. Read all instructions before using.
2. Before connecting the kettle to the power supply, check that the voltage indicated on the appliance (underside the kettle & base) corresponds with the voltage in your home. If this is not the case, contact your dealer and do not use the kettle.
3. The attached base cannot be used for other than intended use.
4. Do not operate the appliance without load to avoid damaging the heat elements.
5. Unplug from the outlet when not in use.
6. Do not let the cord hang over edge of table counter or touch hot surface.
7. Do not place on or near a hot gas or electric burner or in a heated oven.
8. Should you accidentally allow the kettle to operate without water, the boil-dry protection will automatically switch it off. If this occurs, allow the kettle to cool before filling with water and re-boiling.
9. Ensure that kettle is used on a firm and flat surface where the children cannot reach as this can prevent from overturning the kettle to cause damage or injury.
10. To protect against fire, electric shock or personal injury, do

not immerse cord, electric plugs or kettle in water or other liquid.

11. Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
12. Be careful when opening the lid for refilling when the kettle is hot.
13. Close supervision is necessary when any appliance is used by or near children.
14. Do not touch the hot surface. Use the handle or the button.
15. Extreme caution must be used when moving an appliance containing hot water.
16. The use of attachments that are not recommended by the appliance manufacturer may result in fire, electric shock or personal injury.
17. While boiling water, avoid contact with steam from the spout when water is boiling or just after it has been switched off.
18. Unplug from outlet when not in use and before cleaning; allow it to cool before putting on or taking off parts and before cleaning the appliance.
19. Always ensure the lid is closed and do not lift while the water is boiling. Scalding may occur if the lid is removed during boiling.
20. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

SAVE THESE INSTRUCTIONS. HOUSEHOLD USE ONLY.

PARTS AND FEATURES

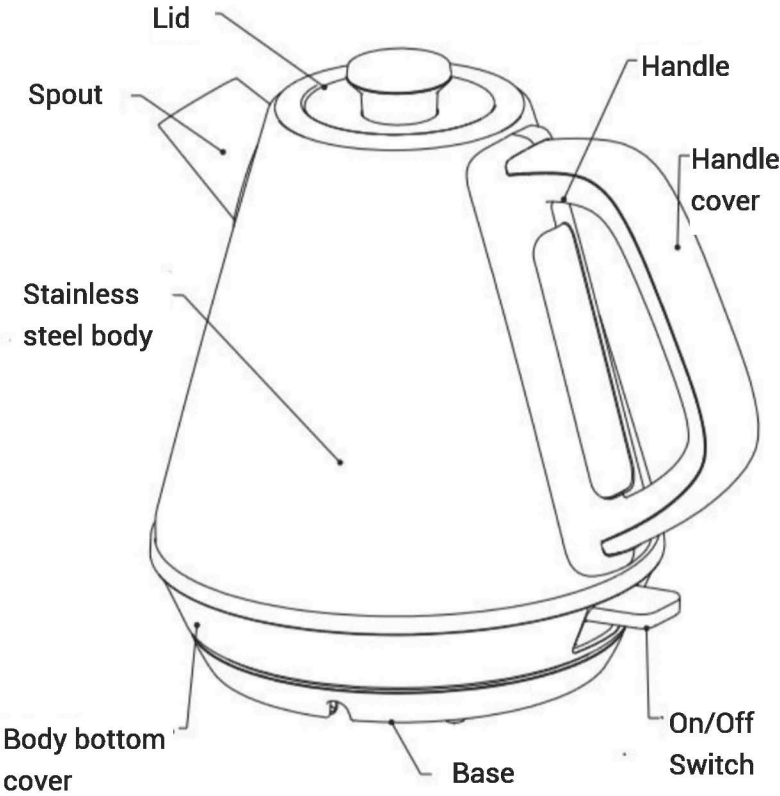

BEFORE FIRST USE

1. Remove packaging and contents.
2. Fill kettle with water to the maximum water level. Boil, then discard. Repeat 3 times.

HOW TO OPERATE

1. Remove kettle from the power base and open the lid by pressing down on the lid button. Fill with the desired amount of water. Always fill the kettle between the minimum (0.8L) and maximum (1.7L) marks. Too little water will result in the kettle switching off before the water has boiled.

NOTE: Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before connecting the power cord to the outlet.

2. Close the lid. Position the kettle on the base, making sure the kettle is completely in contact with it.
3. Connect the plug into a power outlet. Lift the switch upwards to "I" position and the switch light illuminates. Water will then start to boil. The kettle will switch off automatically once the water has boiled and the switch

light goes off. You can shut off the power by pressing the switch at any time during boiling process.

NOTE: Ensure that the switch is clear of obstructions and the lid is firmly closed. The kettle will not turn off if the switch is constrained or if the lid is left open.

4. Lift the kettle from the power base and then pour the water to serve.

NOTE: Be extra careful when pouring the water from the kettle as boiling water may result in scalding.

NOTE: The kettle will not re-boil until the switch is lifted. Allow to cool for 15~20 seconds before reopening to boil water. The kettle may be stored on the base when not in use.

Boil-dry protection

Should you accidentally allow the kettle to operate without water, the boil-dry protection will automatically switch it off. If this occurs, allow the kettle to cool before filling with water and re-boiling.

CARE AND CLEANING

Always disconnect the appliance from the power outlet and leave it to cool down completely before cleaning. Never immerse the kettle or cord in water, or allow moisture to come into contact with these parts.

Removal of mineral deposits

Mineral deposits in tap water may cause the kettle interior to discolor. To remove this build-up, use non-toxic liquid descaler.

Alternatively:

1. Fill the kettle to the maximum level with 3 cups of white vinegar and the water. Allow to stand overnight. Do not boil.
2. Empty the solution from the kettle. Any stains remaining inside the spout can be removed by rubbing with a damp cloth. Fill the kettle with clean water, bring to boil and then discard the water. Repeat twice.

Cleaning external housing

Wipe the external housing with a mild and damp cloth or cleaner.

CAUTION: Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the kettle.

Cleaning the filter

Occasionally clean the filter with a clean damp cloth.

Storage

When not in use or in storage, the power cord may be wound around the cord storage under the base of kettle.