

BAUMANN

popcorn maker

Deliciously hot and fresh popcorn in minutes

BM-PC369



INSTRUCTIONS MANUAL

www.baumannliving.com

Table of Contents

IMPORTANT SAFEGUARDS..... 1

PARTS AND FEATURES..... 3

BEFORE FIRST USE..... 3

HOW TO MAKE POPCORN 4

CARE AND CLEANING 6

IMPORTANT SAFEGUARDS

Before using the electrical appliance, the following basic precautions should always be followed, including the following:

1. Read all instructions before operating this appliance.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the popcorn maker.
3. Do not touch hot surfaces. Use handles and knobs where provided. Use hot pads or oven mitts when handling hot surfaces.
4. To protect against electrical shock do not immerse cord, plug or any part of this unit in water or other liquid.
5. Close supervision is necessary when any appliance is used by or near children.
6. Unplug from outlet when not in use and before removing parts and before cleaning.
7. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
8. Do not let the cord hang over edge of table or counter or touch hot surface.
9. Do not place on or near a hot gas or electric burner, or in a heated oven.
10. The accessory attachments not recommended by the appliance manufacturer may cause injuries.
11. Position this unit near outlet to prevent any hazard of injury due to tripping over cord.

12. DO NOT leave kettle motor running once popping has ceased.
13. Extreme caution must be used when moving this appliance.
14. DO NOT use the appliance for other than its intended use.
15. Do not leave appliance plugged in when it is not being used.
16. Check the appliance for presence of foreign objects prior to use.
17. Always attach cord to appliance first, then plug cord into wall outlet. After popping, unplug cord from wall outlet. Let appliance cool before removing cord.
18. Children should be supervised to ensure that they do not play with the appliance.
19. The appliance is not intended to be operated by means of an external timer or separate remote-control system
20. DO NOT use outdoors.

SAVE THESE INSTRUCTIONS

HOUSEHOLD USE ONLY


Notes on the Cord Plug

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

Notes on the Cord

1. A short power-supply cord is to be provided to reduce risks resulting from becoming entangled in or tripping over a long cord.
2. Extension cords are available and may be used if care is exercised in their use.
3. If a long detachable power-supply cord or extension cord is used:
 - The marked electrical rating of extension cord should be at least as great as the electrical rating of the appliance.
 - The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

PARTS AND FEATURES

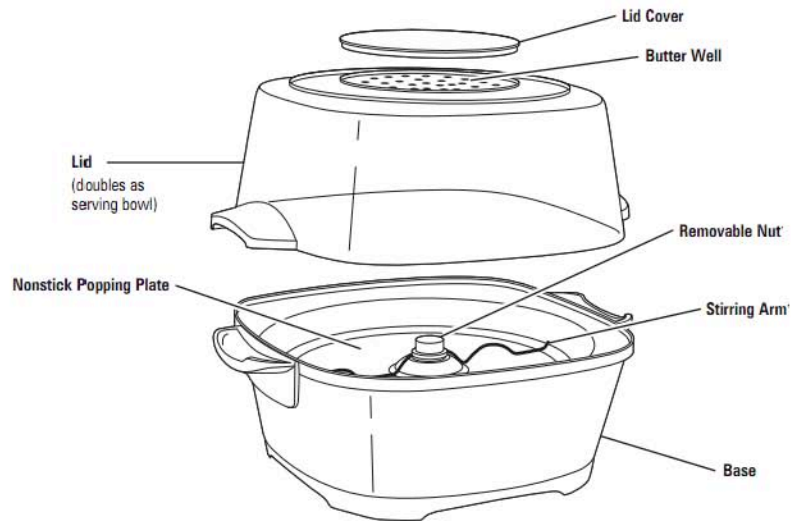

BEFORE FIRST USE

Wash all removable pieces in warm, soapy water. Ensure that the nut is hand-tightened onto the stirring arm before operating the popper.

HOW TO MAKE POPCORN

1. Put recommended amount of oil (canola or peanut oil) and popcorn kernels on the popping plate (see Servings Chart below). Do not substitute butter, margarine, shortening, or lard for oil as these will burn or smoke excessively.
2. Place lid on the base without lid cover to allow steam to escape. Plug unit into outlet. **DO NOT OPERATE WITH LID COVER ON LID.**
3. If buttered corn is desired, place thin pats of butter in the butter well, allowing butter to melt into the popcorn as the unit heats. For best results, place no more than approximately 4 thin pats of butter in a single layer on the butter well. Softened butter will yield best results.
Note: If unrefrigerated butter is used, add to butter well after the first kernel of corn pops.
4. Stirring arm begins to rotate and the unit heats the kernels and oil. The heated kernels will begin to pop.
5. When popping slows to about 2 seconds between pops, unplug unit so popcorn does not burn.
Note: Popcorn kernels may continue to pop after unit is turned off. Make sure popping has stopped before flipping and removing lid.
Note: If butter is not completely melted in butter well, use a pastry brush to push any remaining butter through the buttering holes.

6. Push lid cover firmly onto lid.
7. Holding the popcorn maker using oven mitts, and grasping the handles together firmly, turn the unit over, flipping it away from your body to prevent burns from steam. The unit will now rest on the lid cover. **CAUTION! Burn Hazard. The popcorn popper will be VERY HOT.**
8. Remove base, turn back to upright position, and set aside.
9. Popcorn is now ready for serving. Popcorn may be eaten directly from the lid (as serving bowl). Sprinkle salt or any other flavoring over popcorn, if desired.
 Note: Popping additional batches of Popcorn - If you plan to pop more corn immediately, transfer popcorn from serving cover to another serving bowl. Follow steps 1 through 9 above.

Servings Chart

Amount of Popcorn (Unpopped)	Amount of Oil	Approximate Yield
2 Tablespoons	1 to ½ Tsp oil	4 to 5 cups popped
1/2 cup	1 ½ to 2 Tsp oil	9 to 10 cups popped
1/4 cup	2 to 2 ½ Tsp oil	13 to 15 cups popped
1/3 cup	1 Tbsp oil	18 to 20 cups popped
3/4 cup	1 to 1 ½ Tbsp oil	22 to 24 cups popped

CARE AND CLEANING

Warning! Disconnect power before cleaning. Do not immerse base or cord in any liquid.

1. Allow unit to cool completely.
2. Wash lid and lid cover in warm, before cleaning. soapy water. Rinse and dry.
3. Remove nut and stirring arm from popper base.
4. Wipe nonstick popping plate with a damp cloth.
5. Replace stirring arm on popper base and secure with nut.
6. For more compact storage, place popper base and cord inside lid.