

**BAUMANN**

# bread toaster

*Always wind up with a perfect piece of toast*

**BM-TA1018AGS**



# INSTRUCTIONS MANUAL

[www.baumannliving.com](http://www.baumannliving.com)



## TABLE OF CONTENTS

IMPORTANT SAFEGUARDS .....	1
PARTS AND FEATURES .....	1
BEFORE FIRST USE .....	4
USING YOUR BREAD TOASTER .....	4
Defrosting Bread .....	5
Reheating Toast .....	5
Extra Lift Function.....	6
CLEANING AND STORAGE .....	6
Push Button Removable Crumb Tray.....	6
STORAGE .....	7

## IMPORTANT SAFEGUARDS

When using this electrical appliance, basic safety precautions should always be followed:

1. Read all instructions before operating the toaster for the first time. Please keep these instructions in a safe place, and ensure you include them if you pass the toaster on to a new owner.
2. This appliance is intended for private domestic use only. It is not intended for commercial, industrial or trade use.
3. Do not use the appliance for other than intended or specified purposes.
4. To avoid electrical shock, do not place the cord, plug or toaster in water or other liquids.
5. Do not operate appliance with wet hands or operate in a wet working environment.
6. Do not let the power cord hang off the edge of the table or counter or come in contact with hot surfaces.
7. Do not place the toaster on near a hot surface.
8. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified persons in order to avoid a hazard.
9. Unplug appliance from outlet when not in use.
10. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless


they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

11. Children should be supervised to ensure that they do not play with the appliance.
12. Do not move the toaster while it is switched on.
13. Do not place any objects such as toast, bread or similar on top of your toaster when in use.
14. Operate the toaster on a flat level surface.
15. The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.
16. Do not leave your toaster unattended when in use.
17. Do not allow crumbs to accumulate in the crumb tray by cleaning tray regularly.
18. Do not toast dry items that may be flammable as they could on fire.
19. Never attempt to extract jammed toast, crumpets or muffins with a knife or any metal object, as contact with the live element may cause electrocution.
20. The temperature of accessible surface may be high when the appliance is operating.
21. Appliances are not intended to be operated by means of an external timer or separate remote-control system.
22. This product has been packaged to protect it against transportation damage. Unpack the appliance and keep the original packaging carton and materials in a safe place. It

will help prevent any damage if the product needs to be transported in the future, and you can use it to store the appliance when it is not in use. In the event the carton is to be disposed of, please recycle all packaging materials where possible. Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach and disposed of safely.

**SAVE THESE INSTRUCTIONS. FOR HOUSEHOLD USE ONLY**

# PARTS AND FEATURES

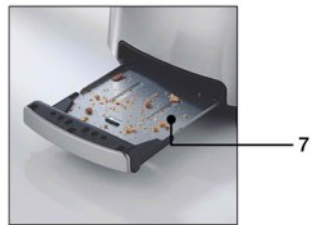

- 1. Bread Slots
- 2. Lever
- 3. Adjustable Browning Control
- 4. Reheat Button

- 5. Stop Button
- 6. Defrost Button
- 7. Push Button Removable Crumb Tray

## BEFORE FIRST USE

Before using your toaster for the first time remove any packaging material and promotional labels. Position your toaster on a firm level table or bench, clear of curtains and others combustible materials. You may notice an odor from the unit for the first use. This is normal and will cease after a short while.

**NOTE:** Ensure the toaster, cord and plug are damaged and in good working order before disposing of original packing.

## USING YOUR BREAD TOASTER

- 1.! Plug the toaster into a household power outlet and turn on the power.
- 2.! Place up to 2 slices of bread muffins or bagels into the bread slot.



- 3.! Select the browning setting using the dial to the desired level. "1" being light and "7" being dark.

**NOTE:** The "Cancel" button will automatically illuminate when the toasting cycle has started.

- 4.! Once the browning setting has been selected, push the lever



down gently until it locks into place. This will commence the toasting cycle. At the end of the toasting cycle the toaster automatically raises the toast. Pressing the Cancel button will stop the cycle and raise the bread at any point.

**WARNING:** The top surface of the toaster may be hot during and after toasting cycle is complete, take care when removing toast.

### **Defrosting Bread**

- 1.! Place the bread in the bread slots.
- 2.! Choose the desired browning setting, and lower the lever until it locks in place.
- 3.! Press the Defrost button. The light behind the Defrost button will illuminate.

Note: The bread will be defrosted and toasted in the same cycle.

### **Reheating Toast**

- 1.! Place the toast in the bread slots.
- 2.! Choose the browning setting 1. Lower the lever until it locks in place.
- 3.! Press the Reheat button. The light behind the Reheat button will illuminate.

Note: Only use plain unbuttered toast

### **Extra Lift Function**

To aid in the removal of toasted items, use the high lift function to safely remove the items. Lift the lever upwards slightly once the toasting cycle is complete.

**NOTE:** In the unlikely event that the bread or crumpet becomes jammed, switch the power off at the power outlet. Remove the power plug from the power outlet and then carefully ease the bread out of the toaster, ensuring that you do not damage the element.

**WARNING:** Never attempt to extract jammed toast, crumpets or muffins with a knife or any metal object, as contact with the live element may cause electrocution.

### **CLEANING AND STORAGE**

Always switch off and unplug the appliance from power outlet when cleaning. Make sure the toaster has cooled down if recently used. Clean the exterior with a damp cloth. Do not use cleaning products on the toaster as it could damage the finish.

**WARNING:** Do not immerse the appliance in water or any other liquid.

### **Push Button Removable Crumb Tray**

It is important to clean out the crumb tray regularly. If crumbs accumulate, they can be a fire hazard. To clean, push the

crumb tray to eject it and slide out. Dispose of the crumbs and wipe down the tray with a damp cloth. Ensure the tray is dry before reinserting it.



**TIP:** You can also clean the interior of the toaster by turning it upside down over the sink or bin and gently shaking to clear the crumbs. Do not shake the toaster too vigorously as it could damage the unit.

**NOTE:** The crumb tray is not dishwasher safe.

## STORAGE

Ensure the toaster is turned off, unplugged, clean and dry before storing it. Allow the appliance to fully cool down if recurrently used. Do not store anything on top of the toaster.