



capsule espresso machine with milk frother

Quick, convenient cafe-style coffee at home



BM-CM7010GS

INSTRUCTIONS MANUAL

www.baumannliving.com

TABLE OF CONTENTS

IMPORTANT SAFEGUARDS	2
PARTS AND FEATURES	4
BEFORE FIRST USE	5
OPERATING YOUR CAPSULE ESPRESSO MACHINE	6
Preparing Espresso	6
Preparing Cappuccino	8
Preparing Latte	9
Cold Frothing	9
Low Temperature Protection	10
CARE AND CLEANING	10
Descaling	11
WARRANTY TERMS AND CONDITIONS	13

IMPORTANT SAFEGUARDS

When using this electrical unit, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not immerse the unit, cord or plug in water or any other liquid.
3. Switch off and unplug the unit from the mains socket when not in use or before cleaning.
4. Place unit on flat surface or table.
5. Do not let the cord hang over the edge of a table or counter, or touch a hot surface.
6. Allow the unit to cool before attaching accessories or cleaning.
7. Only use the unit for the intended use as laid out in these instructions.
8. Do not leave the unit unattended while it is operating.
9. The use of accessory attachments not recommended by the manufacturer may result in fire, electric shock or personal injury.
10. Be careful not to get scalded by steam. Direct it away from hands and fingers.
11. Never switch on the unit without water in the water tank.
12. Do not fill the tank when the unit is on. Turn the unit off and allow to cool before filling with water.
13. Never repair the unit by yourself.
14. Do not insert fingers in the capsule holder to avoid injury.
15. Do not lift the capsule holder handle while appliance is on operation.
16. To disconnect, remove plug from wall outlet. Always hold the plug; never pull the cord.

17. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
18. Keep the outside of the unit clean and dry at all times.
19. This appliance is not intended to be operated by means of an external timer or separate remote-control system.
20. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
21. Children should be supervised to ensure that they do not play with the appliance.
22. This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.

**SAVE THESE INSTRUCTIONS.
FOR HOUSEHOLD USE ONLY.**



PARTS AND FEATURES



- | | |
|---|-------------------------------|
| 1 Capsule Holder Cover Handle | 9 Capsule Collection Tray |
| 2 Capsule Holder | 10 Drip Grid |
| 3 Espresso (Double) Button with Indicator | 11 Drip Tray |
| 4 Espresso (Single) Button with Indicator | 12 Water Tank |
| 5 Froth Button with Indicator | 13 Milk Tank Lid |
| 6 Cappuccino Froth Button with Indicator | 14 Milk Tank |
| 7 Latte Froth Button with Indicator | 15 Whisk |
| 8 Dispensing Outlet | 16 Power Switch (not in view) |

BEFORE FIRST USE

1. Carefully unpack the unit and remove all packaging materials.
2. Remove water tank from the machine by pulling it upwards. Rinse water tank, then fill with fresh, clean water up to the MAX level. Place water tank back into position at the back of the machine.
3. Make sure drip grid, drip tray and capsule collection tray are in place.

4. Plug in the machine. Switch the power button to “I” to turn on the machine. All the button indicators start flashing.
5. After about 1 minute, all button indicators stop blinking and become steady.
6. Place an empty cup or mug under the dispensing spout.
7. Press the  or  button and wait until water dispensing is complete. Discard the water. Repeat step 6 three times to ensure that machine has been thoroughly rinsed.
8. Wash all other detachable parts with warm water.

OPERATING YOUR CAPSULE ESPRESSO MACHINE

Preparing Espresso



1. Fill removable water tank with fresh, clean water. Make sure water is within the MIN and MAX levels.
2. Lift the capsule holder cover handle, then insert a capsule and close the cover.



NOTE: Only use capsules 37 mm (diameter) x 29 mm (height), as shown in the figure.



3. Plug in the machine. Turn the power switch to “I” to turn on the machine. All the button indicators start blinking.

CAUTION: *Never lift the capsule holder cover handle during brewing; otherwise, the coffee capsule will be ejected into the capsule collection tray.*

4. Place a cup on the drip grid under the dispensing spout.
5. Once all button indicators are steady, press the  or  button to start extracting. The corresponding indicator will blink. Once dispensing stops, all indicators become steady.




Button	Quantity
	approx. 40 ml
	approx. 70 ml

NOTES:


- *To stop the coffee flow, press the corresponding button once. To resume, press the button again*
- *The machine will shift to standby mode and all button indicators will go off after 4 minutes of no operation.*
- *If the water level in the water tank reaches below minimum while brewing, all button indicators will start blinking rapidly. Refill the water tank with water, then press any button. Press the corresponding brew button to resume the operation.*

6. Lift capsule holder cover handle to eject the capsule into the capsule collection tray.
7. Turn the machine off and disconnect the power supply when not in use.





Preparing Cappuccino

1. Remove milk tank by sliding it towards the  marked on the milk tank cover. Fill milk tank with fresh milk (standard refrigerator temperature of 4-8°C) up to the  level line. Replace milk tank cover, then slide milk tank back into the machine following the  direction marked on the milk tank cover.
2. Plug in the machine. Turn the power switch to "I" to turn on the machine. All the button indicators start blinking.



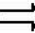 
CAUTION: *Never lift the capsule holder cover handle during brewing; otherwise, the coffee capsule will be ejected into the capsule collection tray.*


3. Once all button indicators are steady, press the  button to start frothing milk (with heating). The corresponding indicator will blink. Once frothing is finished, all indicators become steady.
4. Prepare espresso following the steps in the previous section
5. Pour the frothed milk on top of the espresso prepared.

Preparing Latte

1. Remove milk tank by sliding it towards the  marked on the milk tank cover. Fill milk tank with fresh milk (standard refrigerator temperature of 4-8°C) up to the  level line. Replace milk tank cover, then slide milk tank back into the machine following the  direction marked on the milk tank cover.
2. Once all button indicators are steady, press the  button to start frothing milk (with heating). The corresponding indicator will blink. Once frothing is finished, all indicators become steady.
3. Pour the frothed milk into a latte glass. Place the glass under the dispensing spout and prepare espresso (refer to section on **Preparing Espresso**).

Cold Frothing

1. Remove milk tank by sliding it towards the  marked on the milk tank cover. Fill milk tank with fresh milk (standard refrigerator temperature of 4-8°C) up to the  level line. Replace milk tank cover, then slide milk tank back into the machine following the  direction marked on the milk tank cover.

2. Once all button indicators are steady, press the  button to start frothing (without heating). The corresponding indicator will blink. Once frothing is finished, all indicators become steady.

Low Temperature Protection

When the ambient temperature reaches below -5°C , the Latte button indicator will blink in red and blue. Once ambient temperature reaches above -5°C , the machine will resume normal operation.


CARE AND CLEANING

Cleaning the appliance regularly will ensure a long life and proper functioning of the appliance.

1. Turn off and unplug the unit from the outlet. Allow the unit to cool completely before cleaning.
2. Remove capsule collection tray by sliding it outwards. Empty the capsule collection tray, rinse with water, dry using a clean cloth then slide it back in place.
3. Remove drip tray and drip grid. Rinse with water. Dry using a clean cloth then put them back in place.
4. Rinse the milk tank, milk tank lid and whisk with water. Let dry before reassembling.

5. Remove the water tank and discard any remaining water. Dry thoroughly before placing back into position at the back of the machine.
6. Clean dispensing outlet using a clean, damp cloth.
7. Wipe housing with a soft damp cloth. Do not use abrasive cleaners or scouring pads, as they will scratch the finish.

Descaling

1. Fill removable water tank with a solution of fresh water and household descaler (ratio of 4:1) or a solution of water and citric acid (ratio of 100:3), up to the MAX level.
2. Plug in the machine. Switch the power button to "I" to turn on the machine. All the button indicators start blinking.
3. Place a cup on the drip grid under the dispensing spout.
4. Once all button indicators are steady, press the  button to allow water to flow. The corresponding indicator will blink. Once dispensing stops, all indicators become steady.
5. Turn the machine off. Leave the solution to work for about 20 minutes.
6. Turn on the machine. Repeat step 4 until the solution in the water tank runs out.
7. Remove the water tank, rinse well and fill with fresh, clean water up to the MAX level.

8. Repeat step 4 until the water the solution in the water tank runs out.

WARRANTY TERMS AND CONDITIONS

ONE-YEAR LIMITED WARRANTY ON PARTS AND LABOR

BAUMANN LIVING provides a warranty to the original purchaser of this product against defects in materials and workmanship for one year. If a product covered by this warranty is determined to be defective within the warranty period, **BAUMANN LIVING** will repair or replace the defective part with a new or remanufactured part free of charge subject to terms and conditions stated herein.

To obtain warranty service, proof of purchase in the form of a sales invoice or copy thereof is required to show that a product is within the warranty period. If any one of the documents cannot be produced, corresponding fees for labor and replacement parts will be charged.

Parts and Labor

There will be no charge for parts and labor during the warranty period. Replacement parts or units may be new or recertified and are upon **BAUMANN LIVING's** option and sole discretion. Replacement parts and units are warranted for the remaining portion of the original warranty. Our decision on all questions relating to complaints as a result of defects, either workmanship or materials, shall be conclusive and you shall agree to abide by such decision. Any unit or defective part that have been replaced shall become **BAUMANN LIVING's** property. After the lapse of this warranty, a charge will be made on all labor and replacement of parts.

Types of Services

Defective Products must be sent to any **BAUMANN LIVING** service center to obtain warranty service. **BAUMANN LIVING** is neither responsible for transportation costs to the service center nor **BAUMANN LIVING** will cover return shipping to the customer. Product returns to **BAUMANN LIVING** service centers must utilize either the original carton box and shipping material or packaging that affords an equal degree of protection.

For home service, the transportation fee of **BAUMANN LIVING** service personnel will be charged to the customer, depending on the location. Our service personnel reserve all rights to refuse to attend to any equipment installed in an inaccessible location or any other hazardous situation.

LIMITATIONS AND EXCLUSIONS

BAUMANN LIVING one-year limited warranty only covers defects in materials and workmanship; however, this warranty does not cover the following:

1. Damage resulting from accidents, transport, misuse, abuse, alteration, tampering, or failure of the purchaser to follow normal operating procedures outlined in the user's manual.
2. Damage caused by negligence and poor maintenance.
3. Defects or damage due to spillage of food/liquids or improper usage of electrical supply or electrical circuit, major fluctuations in voltage, exposure to rain or moisture, wrong fuel or oil used.
4. Damage, losses, and defects as a result of fire, flood, or other Acts of God.

5. Normal wear-and-tear, corrosion, rusting, or stains.
6. Defects & damage arising from improper testing, operation, usage of the wrong component, demonstration, maintenance, installation, adjustment, or any alteration or modification of any kind.
7. Scratches & damage to the outer surface areas and externally exposed parts that are due to normal customer use.
8. General maintenance & routine servicing.
9. Claims for damaged/missing parts after 7 days from the date of purchase.
10. If any part or parts of the unit are replaced with a part or parts not supplied or approved by us, or if the unit has been dismantled or repaired by any person other than a **BAUMANN LIVING** authorized technician.
11. Any equipment/product which has its serial number removed or made illegible/tampered with.
12. If the warranty card is altered, defaced, or erased in any manner whatsoever.
13. If the unit is used for purposes other than household use, such as commercial use.

The one (1) year for the mainboard and control PCB, motor, heating element, boiler and power supply. However, this warranty does not cover parts (i.e. accessories, filter, glass carafe, heating and grill plates, wire racks, drip tray, glass and plastic jar, blades, cutter, baskets, glass bowl, handle, trays, fuse, coffee holder, water and milk tank, silicon tubes, belts, gaskets, rubber connectors, gears, glass door, bulb, handle, interior and exterior casing) that are subject to wear and tear, rust, stains, or corrosion.

This one-year limited warranty does not cover Products sold **“AS IS”**, **“FACTORY RECTIFIED”**, or by a non-authorized reseller.

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED OR DESCRIBED ABOVE. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE PERIOD OF TIME SET FORTH ABOVE. **BAUMANN LIVING’S** TOTAL LIABILITY FOR ANY AND ALL LOSSES AND DAMAGES RESULTING FROM ANY CAUSE WHATSOEVER INCLUDING **BAUMANN LIVING’S** NEGLIGENCE, ALLEGED DAMAGE, OR DEFECTIVE GOODS, WHETHER SUCH DEFECTS ARE DISCOVERABLE OR LATENT, SHALL IN NO EVENT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

BAUMANN LIVING SHALL NOT BE RESPONSIBLE FOR LOSS OF USE, COMMERCIAL LOSS, LOST REVENUE OR LOST PROFITS, OR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES. THIS WARRANTY IS SUBJECT TO CHANGE WITHOUT NOTICE.

IMPORTANT: Please present sales invoice as proof of purchase whenever you require our service during the warranty period.

www.baumannliving.com