



360° smokeless infrared grill

Enjoy smoke-free, oil-free grilling for the whole family



BM-KRD145A
INSTRUCTIONS MANUAL

www.baumannliving.com

TABLE OF CONTENTS

IMPORTANT SAFEGUARDS	3
PARTS AND FEATURES	6
USING YOUR INFRARED GRILL	7
CLEANING AND MAINTENANCE	8
WARRANTY TERMS AND CONDITIONS	10

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Before using, check that your outlet voltage corresponds to the voltage stated on the rating label of the appliance.
2. Use a separate plug for the appliance. Do not overload power socket.
3. Place appliance on flat surface or table. Do not let cord hang over edge of table or counter, or touch hot surface.
4. Do not place on or near a hot gas or electric burner, or in a heated oven.
5. If the appliance is operated on a non-heat resistant surface, place a heat-proof mat under the appliance before use.
6. Do not touch the appliance during operation to prevent injury and burns. Approach the appliance only once it is cooled. Keep children away from the appliance to prevent injuries.
7. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or any individual lacking experience and knowledge, unless they have been given supervision or instruction by a person responsible for their safety.
8. Children should be supervised to ensure that they do not play with the appliance.

9. If the power cord is damaged or the appliance malfunctions, do not attempt to disassemble, repair or modify the appliance. The appliance must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
10. Do not use a damaged power cord or power socket to avoid electrocution, short-circuit or fire hazards.
11. Do not immerse, spray or splash the appliance directly with any liquid during cleaning. During operation, the appliance must not come into contact with water or any other liquid.
12. Do not touch the power socket or the switch with wet hands; otherwise, there may be a risk of electrocution.
13. When cleaning, separate the grill pan from the unit body. Dry before re-use.
14. To disconnect, remove plug from wall outlet. Always hold the plug and never pull the cord.
15. Do not move the appliance while in operation. This may result in spilling of hot oil that can cause scalding.
16. Do not use aluminum foil or cling film. The heat emitted from the infrared heating element may set alight the aluminum foil or the cling film which may cause a fire hazard.
17. Do not stare directly at the heating element (infrared lamp) for a prolonged period as this may cause temporary disorientation or dizziness.
18. During operation or shortly after operation, the appliance

gets very hot. Take care to prevent scalding. Do not place any objects that are prone to deformation or combustion.

19. During operation, turn the burner head 45 degrees to the left or right when flipping, adding or retrieving food.
20. The fan will work for another 5 minutes after the appliance is switched off. Do not unplug the appliance until the fan stops completely.
21. Do not block the vent of the appliance.
22. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
23. Do not leave the appliance unattended while it is operating.
24. The use of attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
25. Do not use appliance for other than intended use.
26. Do not use outdoors.

**SAVE THESE INSTRUCTIONS.
FOR HOUSEHOLD USE ONLY. NOT FOR COMMERCIAL USE.**

PARTS AND FEATURES



- 1 – Arm
- 2 – Grill Pan
- 3 – Base
- 4 – Power OFF/
Temperature Knob
- 5 – Vent
- 6 – Burner Head
- 7 – Heating Element (hidden)
- 8 – Oil Drain
- 9 – Oil Reservoir Slot



USING YOUR INFRARED GRILL

NOTE: *When using the product for the first time, the appliance may emit some smoke and odor. This is normal and should disappear by the second or third use.*

1. Place the appliance on a steady surface.
2. Position the grill pan over the base, making sure it is properly inserted into the opening on the base of the appliance.
3. Place lid over the oil reservoir, making sure that the ▲ marked on the lid is aligned with the ▼ on the oil reservoir. A 'click' can be heard if the oil reservoir is properly covered with the lid.

Insert the oil reservoir all the way into the oil reservoir slot at the base of the appliance. Make sure that the ▲ marked on the oil reservoir is pointing upwards. If the oil reservoir is not properly inserted, oil will spill during the grilling process.

4. Turn the Power OFF/Temperature knob to desired setting. Allow pan to preheat for 5 minutes.
5. Place food on grill pan and cook until desired doneness.

NOTES:

- *Temperature can be adjusted at any time.*
- *To turn, add or retrieve food, slowly move the burner head away from the grill plate. The burner head can swivel 45° to the right or to the left. For safety, the heating is stopped when the head*

is moved away. Heating resumes when the head is moved back into position over the grill pan.

- *Do not use aluminum foil or cling film during cooking.*
 - *Refrain from grilling meat and seafood at the same time. Liquid and moisture from the seafood may mix with fat from the meat that may cause oil to splatter.*
 - *The appliance can get very hot during operation. Take care to prevent burns.*
6. After grilling, turn the Power OFF/Temperature knob to OFF.
- IMPORTANT:** *The burner head fan will continue to run for another 5 minutes after the grill has been turned off. Do not unplug from outlet until after the fan has stopped.*
7. Disconnect the plug from the power outlet.

CLEANING AND MAINTENANCE

1. Before cleaning, make sure that the appliance has completely cooled down.
2. Remove the grill pan from the main body. After clearing away any food residue on the grill pan, rinse or soak in warm water to dissolve any grease. Wipe with a soft sponge or cloth afterwards. Do not use any abrasive agents for cleaning to avoid damaging the non-stick coating.

3. Remove the drip tray from underneath the base. Discard excess oil collected, then rinse with water and mild detergent. Let dry thoroughly.
4. Wipe the main body with a soft, damp cloth. DO NOT submerge the appliance in water or any other liquid.
5. The infrared heating element does not need any cleaning. But you may use cotton swab to remove any dirt from the air vent.
6. When appliance is not in use, store in a cool, dry place.

WARRANTY TERMS AND CONDITIONS

ONE-YEAR LIMITED WARRANTY ON PARTS AND LABOR

BAUMANN LIVING provides a warranty to the original purchaser of this product against defects in materials and workmanship for one year. If a product covered by this warranty is determined to be defective within the warranty period, **BAUMANN LIVING** will repair or replace the defective part with a new or remanufactured part free of charge subject to terms and conditions stated herein.

To obtain warranty service, proof of purchase in the form of a sales invoice or copy thereof is required to show that a product is within the warranty period. If any one of the documents cannot be produced, corresponding fees for labor and replacement parts will be charged.

Parts and Labor

There will be no charge for parts and labor during the warranty period. Replacement parts or units may be new or recertified and are upon **BAUMANN LIVING's** option and sole discretion. Replacement parts and units are warranted for the remaining portion of the original warranty. Our decision on all questions relating to complaints as a result of defects, either workmanship or materials, shall be conclusive and you shall agree to abide by such decision. Any unit or defective part that have been replaced shall become **BAUMANN LIVING's** property. After the lapse of this warranty, a charge will be made on all labor and replacement of parts.

Types of Services

Defective Products must be sent to any **BAUMANN LIVING** service center to obtain warranty service. **BAUMANN LIVING** is neither responsible for transportation costs to the service center nor **BAUMANN LIVING** will cover return shipping to the customer. Product returns to **BAUMANN LIVING** service centers must utilize either the original carton box and shipping material or packaging that affords an equal degree of protection.

For home service, the transportation fee of **BAUMANN LIVING** service personnel will be charged to the customer, depending on the location. Our service personnel reserve all rights to refuse to attend to any equipment installed in an inaccessible location or any other hazardous situation.

LIMITATIONS AND EXCLUSIONS

BAUMANN LIVING one-year limited warranty only covers defects in materials and workmanship; however, this warranty does not cover the following:

1. Damage resulting from accidents, transport, misuse, abuse, alteration, tampering, or failure of the purchaser to follow normal operating procedures outlined in the user's manual.
2. Damage caused by negligence and poor maintenance.
3. Defects or damage due to spillage of food/liquids or improper usage of electrical supply or electrical circuit, major fluctuations in voltage, exposure to rain or moisture, wrong fuel or oil used.
4. Damage, losses, and defects as a result of fire, flood, or other Acts of God.

5. Normal wear-and-tear, corrosion, rusting, or stains.
6. Defects & damage arising from improper testing, operation, usage of the wrong component, demonstration, maintenance, installation, adjustment, or any alteration or modification of any kind.
7. Scratches & damage to the outer surface areas and externally exposed parts that are due to normal customer use.
8. General maintenance & routine servicing.
9. Claims for damaged/missing parts after 7 days from the date of purchase.
10. If any part or parts of the unit are replaced with a part or parts not supplied or approved by us, or if the unit has been dismantled or repaired by any person other than a **BAUMANN LIVING** authorized technician.
11. Any equipment/product which has its serial number removed or made illegible/tampered with.
12. If the warranty card is altered, defaced, or erased in any manner whatsoever.
13. If the unit is used for purposes other than household use, such as commercial use.

The one (1) year warranty covers the mainboard and control PCB, motor, heating element, boiler and power supply. However, this warranty does not cover parts (i.e. accessories, filter, glass carafe, heating and grill plates, wire racks, drip tray, glass and plastic jar, blades, cutter, baskets, glass bowl, handle, trays, fuse, coffee holder, water and milk tank, silicon tubes, belts, gaskets, rubber connectors, gears, glass door, bulb, handle, interior and exterior casing) that are subject to wear and tear, rust, stains, or corrosion.

This one-year limited warranty does not cover Products sold **"AS IS"**, **"FACTORY RECTIFIED"**, or by a non-authorized reseller.

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED OR DESCRIBED ABOVE. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE PERIOD OF TIME SET FORTH ABOVE. **BAUMANN LIVING'S** TOTAL LIABILITY FOR ANY AND ALL LOSSES AND DAMAGES RESULTING FROM ANY CAUSE WHATSOEVER INCLUDING **BAUMANN LIVING'S** NEGLIGENCE, ALLEGED DAMAGE, OR DEFECTIVE GOODS, WHETHER SUCH DEFECTS ARE DISCOVERABLE OR LATENT, SHALL IN NO EVENT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

BAUMANN LIVING SHALL NOT BE RESPONSIBLE FOR LOSS OF USE, COMMERCIAL LOSS, LOST REVENUE OR LOST PROFITS, OR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES. THIS WARRANTY IS SUBJECT TO CHANGE WITHOUT NOTICE.

IMPORTANT: Please present sales invoice as proof of purchase whenever you require our service during the warranty period.

www.baumannliving.com