

**BAUMANN
LIVING**

2-in-1 tabletop griddle with hot pot

For meals made and enjoyed together



BM-HY6316

INSTRUCTIONS MANUAL

www.baumannliving.com

TABLE OF CONTENTS

IMPORTANT SAFEGUARDS	3
PARTS AND FEATURES	5
BEFORE FIRST USE	6
HOW TO OPERATE	6
CLEANING AND MAINTENANCE	8

IMPORTANT SAFEGUARDS

Before using the electrical appliance, the following basic precautions should always be followed, including the following:

1. Read all instructions before using.
2. Ensure that the voltage range shown on the appliance rating label corresponds to the main power supply's voltage.
3. This appliance is suitable for normal household use only and not for commercial use.
4. This product must not be left unattended while it is connected to the main supply.
5. Use the appliance only on a level working surface.
6. Do not operate the appliance with a damaged power cord or power plug. Return the appliance for examination, adjustments, or repair.
7. The use of extra attachments not recommended by the manufacturer may cause fire, electrical shock, or injury.
8. Unplug the unit when not in use and whenever you clean or move the unit.
9. To disconnect the appliance, grip power plug and pull from power outlet. Never yank on power cord.
10. Do not connect this appliance to an external timer switch or separate remote-control system.
11. The heating element surface is subject to residual heat after use. Heating element may remain hot after the appliance is

turned off.


12. Only authorized service personnel should be allowed to undertake repairs on electrical appliances. Repairs undertaken by unauthorized persons may result in damage to the appliance and/or accidents or injury to the user.
13. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
14. This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction.
15. Children must be supervised to ensure that they do not play with the appliance.
16. This appliance is intended to be used in households and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

PARTS AND FEATURES



CAUTION: HOT SURFACE. To indicate that the marked item can be hot and should not be touched without taking care.

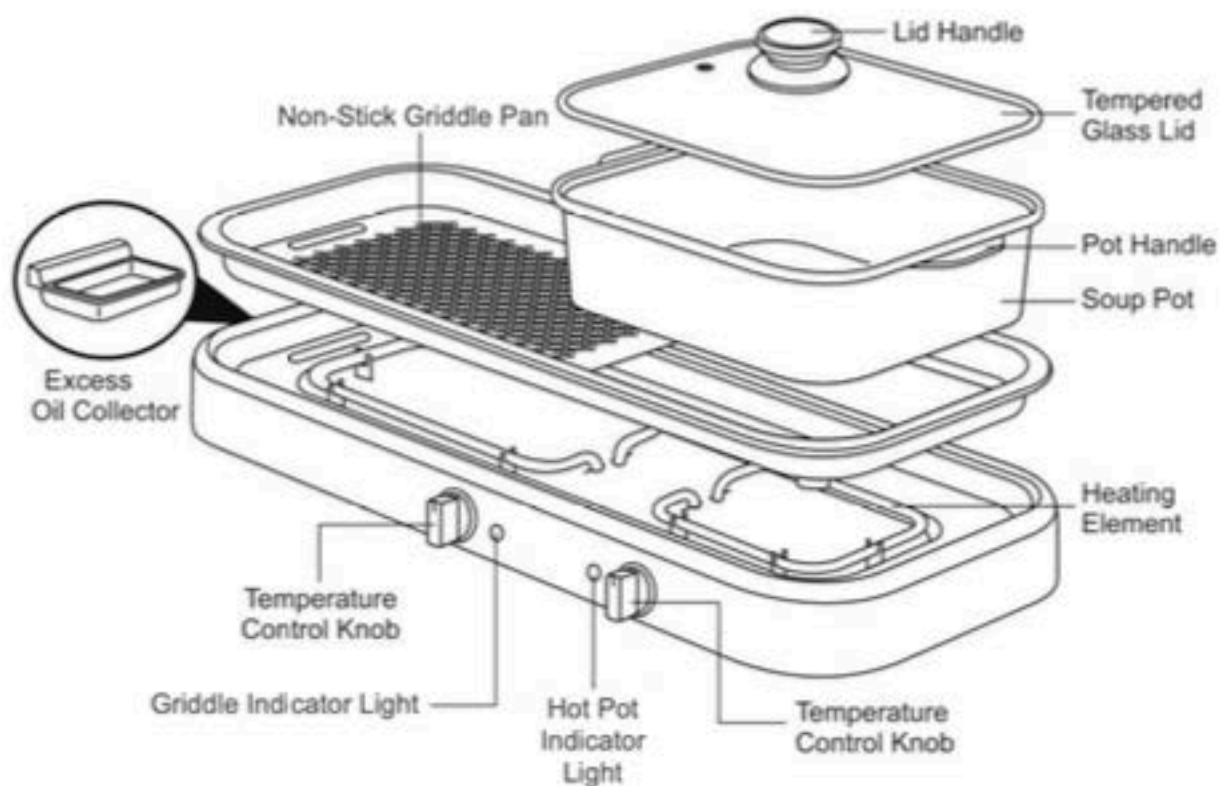

BEFORE FIRST USE

- Before using for the first time, wash the soup pot, glass lid and non-stick griddle pan with mild soapy water and dry thoroughly before use.
- Connect the power cord to a wall outlet.
- Run the unit at high temperature for a few minutes to burn off any residue. Some smoke and odor may be emitted; this is normal.

Important note: Please position griddle pan correctly onto the heating element for proper operation.

HOW TO OPERATE

1. Place unit on a flat and sturdy surface.
2. Connect the power cord to a power outlet.
3. To use the Griddle function, turn the corresponding temperature control knob function to desired setting; the griddle indicator light will come on. Once the temperature setting has been reached, the griddle indicator light will go off.

To use the Hot Pot function, turn the corresponding temperature control knob function to desired setting; the hot pot indicator light will come on. Once the temperature setting has been reached, the hot pot indicator light will go off.

4. After cooking, make sure both temperature control knobs are at the "—" position. Then remove the power cord from the power outlet.

Notes:

- *Always pour water or soup into the soup pot first before turning on the unit. Pouring water or soup while the unit is heating may cause water or soup to splash and consequently cause scalding.*
- *You may adjust the temperature anytime while cooking.*
- *Always use a wooden spatula for stirring or cooking so as not to damage the non-stick surface of the griddle and hot pot.*

CAUTION!

- This appliance should always be plugged into a dedicated outlet separate from other operating appliances. Do not operate if the power outlet is overloaded with other appliances. Do not use multi-way adaptors.
- Do not touch hot surfaces. Use oven mitts and hold by the handles while the appliance is hot. Always place appliance on a heat-resistant surface.
- Never move the appliance containing hot liquid or oil.

CLEANING AND MAINTENANCE

- Always disconnect the power cord from the power outlet before cleaning.
- Always allow your appliance to cool completely before cleaning.
- Never immerse the appliance completely in water or any other liquids.
- Wash excess oil collector, non-stick griddle pan and soup pot, and glass lid with soapy lukewarm water and dry thoroughly. Do not scrub the griddle pan and soup pot as it may damage the non-stick coating. Use non-abrasive and non-metallic cleaning materials only.
- Occasionally wipe the exterior surface with a mild and damp cloth. Never use a corrosive cleaner.