

**BAUMANN
LIVING**

cooking blender

Blend and cook in one versatile appliance



BM-PBJ7210

INSTRUCTIONS MANUAL

www.baumannliving.com

TABLE OF CONTENTS

IMPORTANT SAFEGUARDS	3
PARTS AND ACCESSORIES	8
Control Panel	9
BEFORE FIRST USE	9
USING YOUR COOKING BLENDER	10
Manual Blending.....	10
Pulse Blending.....	11
Blending Preset Programs	12
Blending with a Preset Program	13
Reheat or Keep Warm	14
Overheat Shut-off Protection.....	14
CLEANING AND CARE	15
General Cleaning.....	15
Pulse Function Cleaning	16
Cleaning the Blending Base	16
TROUBLESHOOTING	17

IMPORTANT SAFEGUARDS

Operate only in accordance with intended use as described in this manual. When using electrical appliances, basic safety precautions should always be followed including the following:

1. Use the appliance only for its intended purpose. Improper use may result in an electric shock, fire or serious injury.
2. Before connecting the appliance to the power supply, check that the voltage indicated on the appliance (underside of the jar and power base) corresponds with the voltage in your home. If this is not the case, do not use the appliance and contact the retail outlet immediately.
3. The cable has a short design to prevent accidents. Do not use an extension cord.
4. This blender is for household use only. It is not suitable for commercial, industrial or outdoor use.
5. This appliance is intended to be used in households and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
6. Do not use a broken, chipped, or cracked blender jar.
7. Do not use broken, cracked, or loose blade assembly.

8. Do not operate the blender with no ingredients or water inside the jar.
9. Do not use the blender for hard food such as bones, shelled nuts or shelled seafood, as this may damage the blades or motor of the appliance.
10. Do not attempt to remove or replace the jar while the motor is running.
11. Ensure the lid is properly closed and the feed cap is in place before each use. Do not open the lid when the appliance is switched on.
12. **WARNING** - Never place your fingers, hands or utensils inside the blender jar. If necessary, insert the stirring rod through the feed cap for assistance during blending.
13. Do not move the appliance when it is switched on or touch any moving components, as this may cause an accidental injury.
14. Always unplug the appliance immediately after use and before cleaning and storing.
15. Only use the blender with the blender base supplied.
16. The use of accessories or fittings other than the original parts supplied with this appliance may result in an injury, fire or damages and will void the warranty.
17. Do not immerse the appliance or electrical parts of the appliance in water or any other liquids. Never place them under running water (see **CLEANING AND CARE**).
18. To prevent spillages, do not fill the blender above the 1750mL/56oz (MAX) marking for cold preset programs or above the 400mL/48oz making for hot preset programs.

19. RISK OF BURNS - During a hot preset program, the lid will emit hot steam and may spill hot liquid if overfilled. Take care and avoid direct contact.
20. HOT SURFACES - This appliance contains a heating function. Surfaces (including non-functional surfaces) may get hot when the appliance is in use. Only handle the appliance using the handles and buttons provided. Always allow the appliance to cool down completely before cleaning.
21. This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction.
22. Children must be supervised to ensure that they do not play with the appliance.
23. Never leave the appliance unattended while it is switched on.
24. DANGER OF BURNS - The scalding hazard remains long after the water or liquid has boiled. Keep the blender and the power cord away from the edge of tables or countertops and out of the reach of children.
25. DANGER OF ELECTROCUTION! Do not expose the appliance or electrical parts of the appliance to dripping or splashing water.
26. DANGER OF ELECTROCUTION! - Do not touch or operate the appliance with wet hands or while standing on a wet floor.

27. The blades of the jar are very sharp. Never touch the inside of the jar or place any objects in the jar while the blades are operating.
28. Care should be taken when handling the sharp cutting blades, emptying the jar and during cleaning.
29. Do not connect this appliance to an external timer or remote control system.
30. To unplug, hold and pull the plug head. Do not pull on the cord.
31. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner.
32. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly quality person in order to avoid a hazard.
33. Use only spare parts supplied by the manufacturer or an authorized service center.
34. Do not under any circumstances attempt to repair the appliance. For servicing and repairs, contact the retail outlet, the manufacturer or an authorized service center.
35. **RISK OF SUFFOCATION! KEEP OUT OF REACH CHILDREN** - Keep all packaging materials out of the reach of babies and children.

Installation Location

1. Do not place on or near a hot gas or electric burner, or in a heated oven.
2. Place the appliance at least 30cm away from other kitchen appliances.
3. Never connect the power cable to any mobile object.
Always place the blender on a stable, flat, dry and heat-resistant surface.
4. Do not use outdoors.
5. Never allow the power cord to hang over the edge of a worktop or table or to touch any hot surface.
6. Do not allow the power cable to touch any sharp edges or corners.
7. Before using the appliance, ensure that the worktable is clean and free from grease and dirt.
8. To reduce the risk of electric shock, plug the power cord into a grounded (earthed) electrical outlet that is easily accessible.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

PARTS AND ACCESSORIES



1- Feed cap

2- Jar lid

3- Blending jar

4- Handle

5- Built-in collar with blade
Assembly

6- Blender base

7- LED display


8- Control panel

9- Pusher

10- Measuring cup

11- Cleaning brush

Control Panel

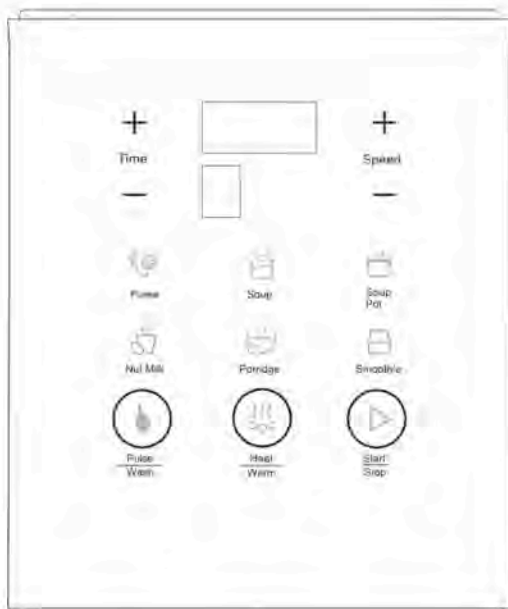

BEFORE FIRST USE

1. Remove all packaging from the appliance.
2. Unpack all parts and check for damage that may have occurred during transport. If any parts are damaged or missing, do not use the appliance and return it to your retail outlet immediately.
3. Clean the appliance before first use (see CLEANING AND CARE).
4. The blender may emit some smoke and release a slight odor during the first use. This is normal and does not indicate that the appliance is faulty.


USING YOUR COOKING BLENDER

Manual Blending

Blend continuously for up to 06:00 minutes.

1. Remove the jar from the blender base.
2. Remove the lid and add recipe ingredients to the jar.
 - Cut ingredients into small pieces not exceeding 2 cm.
 - Measure ingredients according to the recipe using the small measuring cup.
 - Add fresh water, chicken or vegetable broth according to the recipe. To prevent spillages, do not exceed the 1400mL/48oz marking if choosing a hot preset program, or the 1750mL/56oz MAX marking if choosing a cold preset program.
3. Place the lid firmly on the jar (see picture) and twist clockwise until the handle of the lid is aligned with the handle of the jar. Insert the feed cap onto the lid and lock it into place.

Note: *Ensure the lid is properly locked into place. The blender is fitted with a safety feature and will not operate if the lid is not properly closed.*

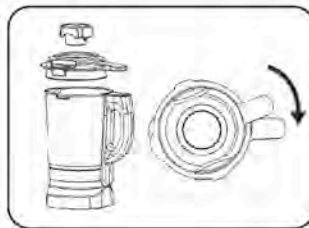

4. Ensure the blender is unplugged from the wall socket. Place the jar on the power base, making sure the jar is seated correctly. Do not twist the jar.
5. Plug the blender to the wall socket. The blender will turn ON with a beeping sound and enter Standby Mode. The display will blink "----" and the Start/Stop button will light up.
6. Press the Start/Stop button. The display will show "00:00" (mm:ss)
7. Press the Time +/- button to set the blending time.
8. Press the Speed +/- button to set the blending speed.
9. Press the Start/Stop button to start blending. You may also press the Start/Stop button at any time to stop the
10. Once finished, the blender will beep and stop.
11. Press the Start/Stop button to return to Standby Mode.

Pulse Blending

Use the Pulse function to blend foods that only require short bursts of power (e.g. nuts or drinks containing frozen fruits).

1. Follow Steps 1 to 6 in **Manual Blending**.
2. Press and hold the Pulse/Wash button to pulse blend. Release to stop blending. Pulse intermittently.
3. Press the START/STOP button to return to Standby Mode.

Note: *To avoid overheating, do not blend continuously for more minutes at a time. Let the motor rest for 6 minutes before continuing.*

Blending Preset Programs

Preset Program	Method	Time	Speed	Use
 Puree	Cold	2 mins	8 and 4	Fruits, vegetables
 Soup	Hot	15 mins	2 and 4	Chunky, creamy or broth-based soups
 Soup Pot	Hot	45 mins (including cooking)	No blending	Long, simmering soups
 Nut Milk	Hot	23 mins	3 and 8	Almond, cashew, hazelnut, soy
 Porridge	Hot	24 mins	1 and 8	Rice porridge
 Smoothie	Hot	1 min 10 secs	8 and 4	Fresh or frozen fruits

CAUTION! During a hot preset program, the lid will emit hot steam and may spill hot liquid if overfilled. DO NOT open the lid when the blender is operating. Press the Start/Stop button to cancel or stop the program if required.

Blending with a Preset Program

1. Follow Steps 1 to 6 in **Manual Blending**.
2. Select a Preset Program (see BLENDING PRESET PROGRAMS).
3. Press the Start/Stop button again to confirm. The blending will start immediately. The display will start countdown showing the remaining time of the program.
 - To add ingredients during the blending process, remove the feed cap and add the ingredients into the jar. Use the pusher if necessary.
 - DO NOT remove the lid during blending, as the built-in lid safety feature will automatically stop the program.

Note: To stop or cancel an ongoing program at any time, press the Start/Stop button. Select a preset program to start again.

WARNING! DO NOT insert your hand or any sharp or pointed object into the jar during blending, as this may result in serious personal injury or damage the appliance.

4. Once the Preset Program is complete, the blender will beep and stop. The display will show "00:00" to indicate end of the program.
5. Press the Start/Stop button to return to Standby Mode. Unplug the blender from the wall socket immediately after use. To remove the jar from the base, grasp the handle and lift up. Do not twist the jar. Turn the lid anti-clockwise to unlock and remove.

WARNING! The lid emits hot steam after cooking. Let the jar sit for a few minutes. Carefully remove the lid or the feed cap to prevent scalding. Wear nonslip heat resistant gloves if required.

6. Pour out the contents of the jar and season to taste.

7. Clean the blender after use (see CLEANING AND CARE).

Reheat or Keep Warm

Prepare soups and hot drinks in advance, and then use this function to reheat or keep them warm:

- Press the Heat/Warm button to re-heat or keep warm.
- Press the Heat/Warm button again to cycle through the temperature options (60°C, 70°C, 80°C, 90°C, 100°C).
- Press the Start/Stop button to return to Standby Mode.

Overheat Shut-off Protection

- The blender has a built-in overheat protection mechanism. When the blender reaches a certain temperature or after 6 minutes of continuous blending, it will automatically stop and lock itself to prevent overheating.
- Let the blender rest for 30 minutes. If the blender cannot be turned ON after 30 minutes, contact an authorized service center.

CLEANING AND CARE

CAUTION: Always unplug the appliance from the wall socket and let it cool down before cleaning.

- Do not immerse the blender base, jar collar or power cord in water or other liquids, or allow moisture to come into contact with these parts.

Never use solvents, chemical or abrasive cleaning agents, wire brushes, sharp objects or scouring pads to clean the unit.

General Cleaning

- Clean the blender thoroughly before first use and before preparing food.
- Clean the blender after each use, and after storing for a long period of time.
- **CAUTION:** Remove the jar from the base for cleaning. The blades inside the jar are very sharp. Wear protective gloves when touching the blades. Use the brush provided to clean the blades.
- **IMPORTANT** - DO NOT attempt to remove the glass jar from the built-in collar.
- The glass jar, handle, cooking plate and collar form one complete unit.
- Clean the interior of the jar with a cloth and warm soapy water and rinse well.
- Wipe the exterior of the jar with a soft damp cloth. DO NOT immerse or rinse the collar.

- Wash the lid, feed cap, measuring cup and pusher in warm, soapy water.
- Rinse well and allow to dry.

Pulse Function Cleaning

To quickly clean the jar, fill the jar half-full with a warm dish detergent solution. Close the lid and the feed cap.

- Press the Pulse button for 1 minute to clean the jar and the blades (see **Pulse Blending** section). Press the Start/Stop button to return to Standby Mode and unplug the blender.
- Remove the jar, rinse the interior well and allow it to dry.

Cleaning the Blending Base

Ensure the blender base is unplugged.

- Never immerse the blender base in water or other liquids.
- Wipe the blender base with a soft cloth moistened with water or a mild dish detergent solution. Wipe clean and dry thoroughly.

TROUBLESHOOTING

Problem	Possible Cause	Solution
The power indicator/LED display does not turn on.	<ul style="list-style-type: none">• The power plug is not properly inserted into outlet.• The power cord is damaged.• Lid is not fully closed.	<ul style="list-style-type: none">• Ensure the plug is properly inserted into the mains socket.• Inspect the power cord for signs of damage.• Place the lid on the pitcher and press down firmly, then turn the lid clockwise until it is aligned with the jar handle.
The power indicator/LED display is on but the blender is not working.	The START button was not pressed after selecting the preset program or function.	Press the START button after selecting the preset program or function.
One of the buttons does not work.	The blender system crashed due to a short power outage or short power disconnection.	Unplug the blender from the power socket for 3 minutes to reset the system. Plug the blender and try again.
The food cannot be blended.	Contents are too thick.	<ul style="list-style-type: none">• Add liquid thin the recipe.• Use the pusher to agitate contents and ease blending.• Use Pulse to break up chunks.

	The power voltage is too low.	Use a household voltage stabilizer.
The food sticks to the bottom.	The cooking plate inside the jar is not clean.	Unplug the blender from the power socket and remove the jar. Clean the interior of the jar thoroughly and try again (see CLEANING AND CARE).
	The wrong hot/cold program was selected.	Select the correct hot/cold preset program.
E1	The food pieces are too large.	Unplug the blender from the power socket. Ladle out the food pieces from the jar, cut into 2cm pieces (or smaller) and return to the jar.
	There is too much food or liquid in the jar.	Unplug the blender from the power socket. Reduce the amount of solid and/or liquid ingredients in the jar.
	The blender crashed.	
	There is water on the coupler surface or bottom of the jar.	Unplug the blender. Clean and wipe dry the bottom of the jar and the surface of the blender base.

E2	The jar was unexpectedly removed during the blending process without powering off.	Unplug the blender from the power socket for 3 minutes to reset the system. Plug the blender and try again.
	The blender overheated due to continuous blending with an empty jar.	
	The blender crashed.	
	There is water on the coupler surface or bottom of the jar.	Unplug the blender. Clean and wipe dry the bottom of the jar and the surface of the blender base.
E3	The blender overheated due to continuous blending with an empty jar.	Unplug the blender from the power socket for 3 minutes to reset the system. Plug the blender and try again.
	The blender crashed.	
	There is water on the coupler surface or bottom of the jar.	Unplug the blender. Clean and wipe dry the bottom of the jar and the surface of the blender base.

E4	The blender crashed.	Contact our after-sales customer service for assistance.
	There is water on the coupler surface or bottom of the jar.	Unplug the blender. Clean and wipe dry the bottom of the jar and the surface of the blender base.