



# food dehydrator

Wholesome, home-made snacks for the whole family



**BM-TA2000ABCB**  
**INSTRUCTIONS MANUAL**

[www.baumannliving.com](http://www.baumannliving.com)



# TABLE OF CONTENTS

IMPORTANT SAFEGUARDS.....	3
PARTS AND FEATURES.....	5
BEFORE FIRST USE .....	5
BEFORE FIRST USE .....	6
USING YOUR FOOD DEHYDRATOR .....	6
CLEANING AND MAINTENANCE.....	8

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and/or injury to persons, including the following:

1. Do not touch hot surfaces. Use handles.
2. Do not immerse cord, plug, or housing in water or other liquid.
3. Closely supervise children near the dehydrator.
4. Unplug when not in use, and before cleaning. Allow to cool completely before putting on or taking off parts.
5. Do not use dehydrator if it is damaged, not working, or if the cord or plug is damaged. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
6. Using third-party parts or accessories may cause injuries.
7. Do not use outdoors.
8. Do not place on a stove, near gas or electric burners, or in a heated oven.
9. Be extremely cautious when moving the dehydrator or removing trays if they contain hot liquid.
10. To disconnect, turn off the dehydrator, then remove plug from wall outlet.
11. Keep the dehydrator away from flammable materials (curtains, tablecloths, etc). Use on a flat, stable, heat-resistant surface away from heat sources and liquids.
12. Do not store anything on top of your dehydrator while in use.



13. Do not clean housing with metal scouring pads. Metal fragments can break off the pad and touch electrical parts, creating a risk of electric shock.
14. Do not use where aerosol (spray) products are being used.
15. Do not run the dehydrator for more than 48 hours at a time. After 48 hours, unplug and allow to cool for 2 hours before using again.
16. Avoid contact with moving parts. Never place any object into the openings in the screen protecting the dehydrator fan.
17. Only use the dehydrator as directed in this manual.

**SAVE THESE INSTRUCTIONS**



**FOR HOUSEHOLD USE ONLY**

# PARTS AND FEATURES


Temperature knob      Timer knob

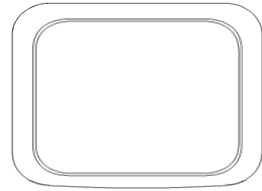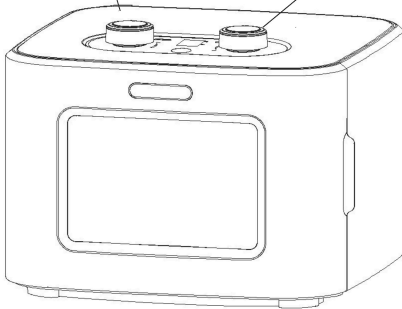

1 x Drip tray

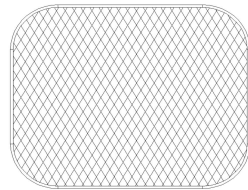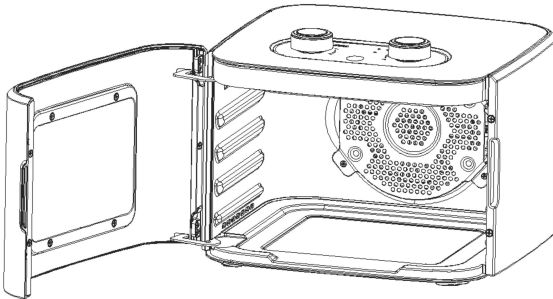

4 x Mesh tray

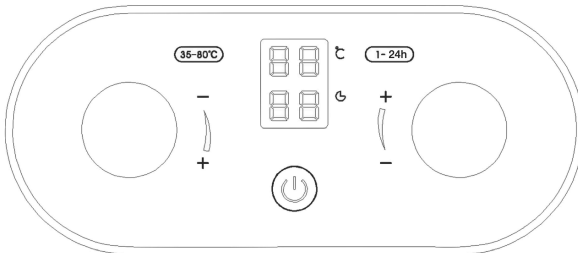


Control panel



## BEFORE FIRST USE


1. Remove all packaging from your dehydrator and its accessories.
2. Clean all parts of the unit according to section on “Cleaning and Maintenance.”
3. Place the dehydrator on a solid, level surface. Plug in. Place the trays inside the dehydrator.
4. Run the dehydrator for 30 minutes at any temperature, without adding any food. Make sure that the room has sufficient ventilation in case the dehydrator produces any smoke or smells. This is normal.
5. Rinse the trays with water. Dry all parts.

## USING YOUR FOOD DEHYDRATOR

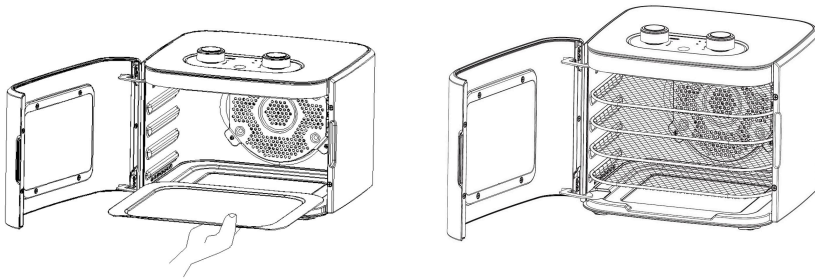1. Open the food dehydrator door. Insert drip tray at the bottom. Place food on mesh trays. Rearrange the trays to fit thicker food items. Avoid overloading the trays or overlapping food. Close food dehydrator door.



2. Plug in. The dehydrator will beep, and the display will show "==".
3. Press the  button and the display will show the default temperature of 35 (°C) and 06 (hours). Only the time will blink on the display.  
**Note:** If there is no operation within 10 seconds, the time will stop blinking and the unit will start working according to the default temperature and time.
4. Turn the temperature knob to adjust the temperature (35 to 80°C). Turn towards "+" to increase, and "-" to decrease temperature by 5° increments.
5. Turn the timer knob to adjust the time (1 to 24 hours). Turn towards "+" to increase, and "-" to decrease time by 1 hour increments.
6. Press the  button to start dehydrating. The dehydrator will start heating. The temperature and time on the display will stay lit and the timer countdown will start.
7. When the timer finishes, the display will show "==" and heat will turn off. The dehydrator will beep 5 times. The fan will continue to work until the internal temperature reaches below 45°C.

**Note:** While the unit is in operation, pressing the  button for 3 seconds will turn off the heat and the unit will return to standby mode. The display shows "==".



## CLEANING AND MAINTENANCE

1. Unplug the dehydrator and allow it to cool before cleaning.
2. Use a soft dry cloth to clean the internal cavity.
3. Soak trays in hot, soapy water for easy removal of food residue.  
Rinse and wash the trays with clean water.  
**Note:** Do not clean any part of the dehydrator with abrasive chemicals, as this will damage the surface.
4. Clean the dehydrator housing with a damp cloth.
5. Dry all parts before storing or using the dehydrator.