



Thank you for purchasing the StopBox® - handgun retention device. Before using the StopBox® please read carefully all the warnings and safety precautions included in this manual.

## TABLE OF CONTENTS

1. Description
2. Specifications
3. Warnings and Safety Precautions
4. Locking and Unlocking
5. Changing the Combination
6. Trouble Shooting
7. Maintenance
8. Warranty

### 1. Description

The StopBox® is a portable instant-access handgun retention device that does not use batteries, electronics or external keys. The StopBox® hand gesture code lock is instinctive to use in the dark and under stress. Secure your firearm without sacrificing accessibility when you need it the most.

### 2. Specifications

- Black Polycarbonate-ABS enclosure
- Soft foam lining to hold your handgun in place
- Combination adjustable instinctive lock feature
- Rubber feet for surface grip
- Fits most full-size handguns including a weapon light

### 3. Warnings and Safety Precautions

You should seek proper firearm safety training before owning and using a firearm.

Never leave a loaded firearm unattended.

The StopBox® is intended for retaining your firearm, aiding in restricting immediate unintentional access and is not intended to be left unattended.

Never allow children to play with or handle the StopBox®.

The StopBox® is NOT a safe. You shall determine the suitability of the StopBox® to your specific situation and needs.

Regularly inspect the StopBox® for damage or wear. If the StopBox® is damaged or not functioning properly stop using immediately and replace it.

**CAUTION: USE ONLY PURE SILICONE LUBRICANT!** (I.e. Silicone WD-40) Many lubricant additives will attack the plastic materials in the StopBox® causing cracking and failure.

**ALWAYS** follow the four rules of gun safety.

1. Treat every gun as if it is loaded, even if it is not.
2. Always keep your finger off the trigger until you are ready to fire.
3. Never point a gun at something you are not willing to destroy.
4. Always know your target and what is beyond it.


### 4. Locking and Unlocking

**To Unlock the StopBox®**

1. Index your hand on the corner of the enclosure and align your fingers with the 5 finger actuators.

2. Press and hold the pinky and index finger actuators simultaneously. Note: pinning the StopBox® down with your palm will keep it from moving.

3. While applying downward pressure on the enclosure press the Thumb Lock and lift open.

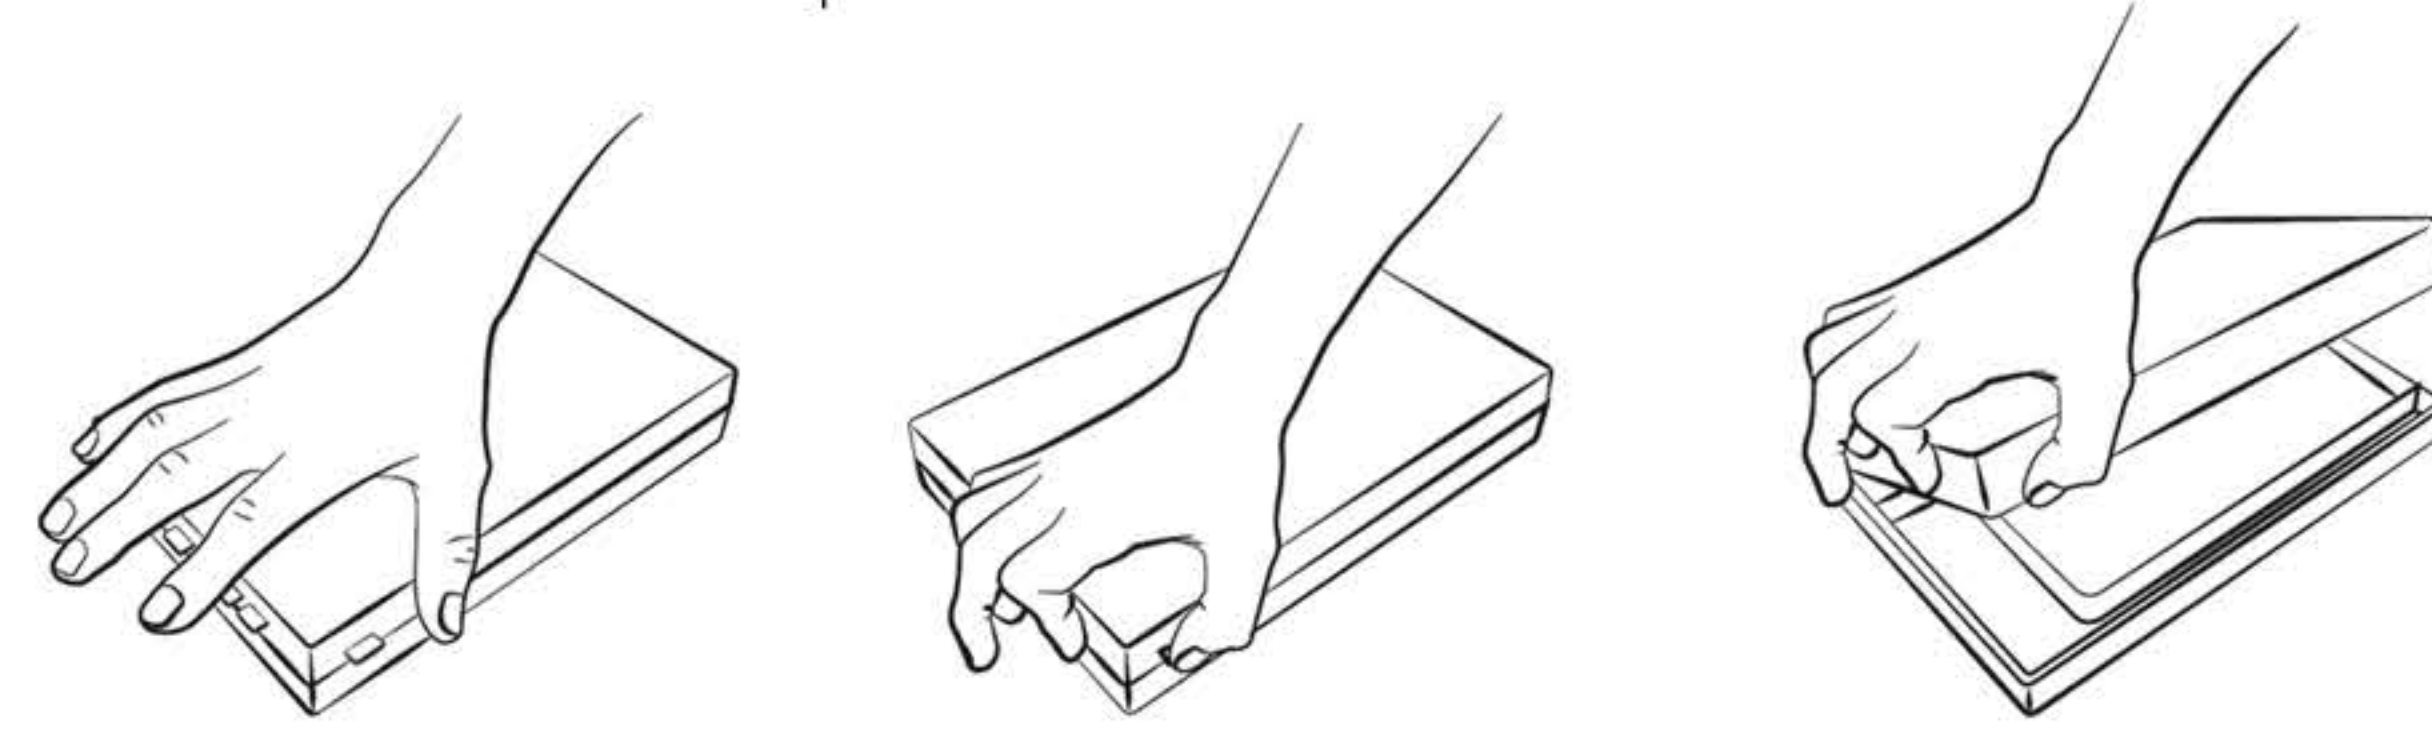

The combination by default is set as the pinky and index finger but can be changed to fit your needs. There are six configurable combinations with the included hardware. For an additional nine combinations the Actuator Accessory Pack can be purchased at [www.StopBoxUSA.com](http://www.StopBoxUSA.com)

**To Lock the StopBox®**

Make sure any contents are within the inside barriers then firmly press the center of the enclosure lid shut. **IMPORTANT:** Make sure both locks have successfully engaged. If only one side of the StopBox® is locked the other can be easily pried open. Visually check that there is equal gap at both ends of the enclosure and that the enclosure is secure.

11. Slide the Lock Bar to the side and then down to connect the slot on the Lock Bar to the pin on the Thumb Lock.

12. Carefully reinstall all three mounting screws with their corresponding washers as shown. **IMPORTANT:** the large washer is to be installed nearest to the end of the Lock Bar.



13. Test the functionality of the assembly. Note: the assembly is working correctly when the Lock Bar is held locked back while open and will automatically lock when the enclosure lid is closed.

Visit [www.StopBoxUSA.com](http://www.StopBoxUSA.com) for step by step instruction videos.

### 6. Trouble Shooting

If the Thumb Lock is not springing back into place when the StopBox® is closed, open and insure the Lock Bar springs are properly installed as shown.



### 7. Maintenance

Periodically check that all screws are tightly fastened.

If springs become weak replace them by following the disassembly steps in Section 5. Replacement parts can be ordered at [www.StopBoxUSA.com](http://www.StopBoxUSA.com)

### 5. Changing the Combination

**Caution:** Finger actuators are under spring compression force, keep pointed in a safe direction! Wear safety glasses while changing the combination.

**Caution:** Do not over tighten the screws! Do not use a powered screw driver when reinstalling screws. Gently hand tighten only until the screw head is snug to the surface.

1. Remove the Lock Bar by carefully unscrewing the three mounting screws using size #1 Philips screw driver.



2. Remove the Thumb Lock by carefully unscrewing the two mounting screws and lifting the small end of Thumb Lock up and sliding out of the holes.



3. Remove the finger actuator assembly by carefully unscrewing the two mounting screws. Using both thumbs press the inside ledge forward and tilt the chassis up as shown. Remove the chassis carefully while the finger actuators are retained in the actuator assembly.



4. There are two types of actuators; "Normally Locked" which must be pressed to unlock the StopBox® and "Normally Unlocked" which are NOT pressed to unlock the StopBox®. Carefully remove actuators intended to be changed by pressing them up away from the chassis.

5. Replace actuators to set the new desired combination. New actuators must be captured by the chassis by pressing the actuator in and then down. **IMPORTANT:** ensure the Finger Actuator springs are properly retained as shown and not bound up.



6. While holding the chassis, carefully guide the actuators through the enclosure holes. Press the chassis forward and down to lock into place.



7. Carefully reinstall the two chassis mounting screws and verify the functionality and smooth operation of all actuators. Note: no washers are used.

8. Reinstall the Thumb Lock with the four locking pins facing down. Angle the Thumb Lock with the small end higher and slide it into the hole in the enclosure. Once the Thumb Lock is slid all the way in, press the Thumb Lock gently down to align the pins with the slots on the actuators. Wiggle actuators while pressing the Thumb Lock down if necessary. If Thumb Lock is difficult to install or move, verify all actuators are installed properly. Reinstall the screws with two small washers.

9. Inspect Lock Bar springs to ensure they are properly captured.



10. Align the Lock Bar spring guide pins to the enclosure spring capturing mounts.



**BE PROTECTED  
& KEEP IT PROTECTED**



If you have any questions, comments or concerns please contact us at: [support@stopboxusa.com](mailto:support@stopboxusa.com)

For more information visit [www.StopBoxUSA.com](http://www.StopBoxUSA.com)

Proudly made in the USA

### 8. Warranty

**Limited Lifetime Manufacturer's Warranty:** StopBox USA, LLC (StopBox USA) is proud of the workmanship of the product you have just purchased. StopBox USA warrants that each new StopBox® will be free from defects in material and workmanship for the lifetime of the original purchaser. If there is a defect in either materials or workmanship during your lifetime, we will repair or replace your StopBox® at no cost to purchaser.

StopBox USA's obligation under the Limited Lifetime Manufacturer's Warranty is limited to the repair (including labor) or replacement of any product that proves to be defective. Claims shall be made under this warranty by calling 509-919-4600, emailing [support@stopboxusa.com](mailto:support@stopboxusa.com) or writing to StopBox USA, 918 N Lake Rd Spokane Valley, WA 99212.

StopBox USA takes seriously its obligation to stand behind its product with this warranty as long as the StopBox® is properly cared for as instructed in the Instructions Manual. The warranty does not apply to the StopBox® or parts that have been misused, neglected or subjected to unusual or extreme conditions and/or environments, or to unreasonable wear and tear. Changing or modifying the StopBox® in ways that affect its intended use will void this warranty.

**Limitation of Remedies:** In no case shall StopBox USA be liable for any special, incidental, or consequential damages based upon breach of warranty, breach of contract, negligence, strict tort, or any other legal theory. Such damages include, but are not limited to, loss of profits, loss of savings or revenue, loss of the contents of the StopBox®, loss of use of the StopBox® or any associated equipment, cost of capital, cost of any substitute equipment, facilities or services, downtime, the claims of third parties including customers, and injury to property.


**No Other Warranties:** This agreement is understood to be the complete and exclusive agreement between the parties, superseding all prior agreements, oral or written, and all other communications between the parties relating to the subject matter of this agreement. No employee of StopBox® or any other party is authorized to make any warranty in addition to those made in this agreement.

THIS WARRANTY PERTAINS ONLY TO THE STOPBOX® ITSELF, AND DOES NOT EXTEND TO THE CONTENTS OF THE STOPBOX®.

**Disclaimer of Warranty:**

THE ABOVE WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH EXTENDS BEYOND THE WARRANTY SPECIFIED ABOVE, AND IN NO EVENT SHALL THIS WARRANTY BE DEEMED TO COVER INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND.

Venue and Choice of Law: Any claims arising from this limited warranty shall be resolved in the State of Washington and Washington law will apply to any dispute.

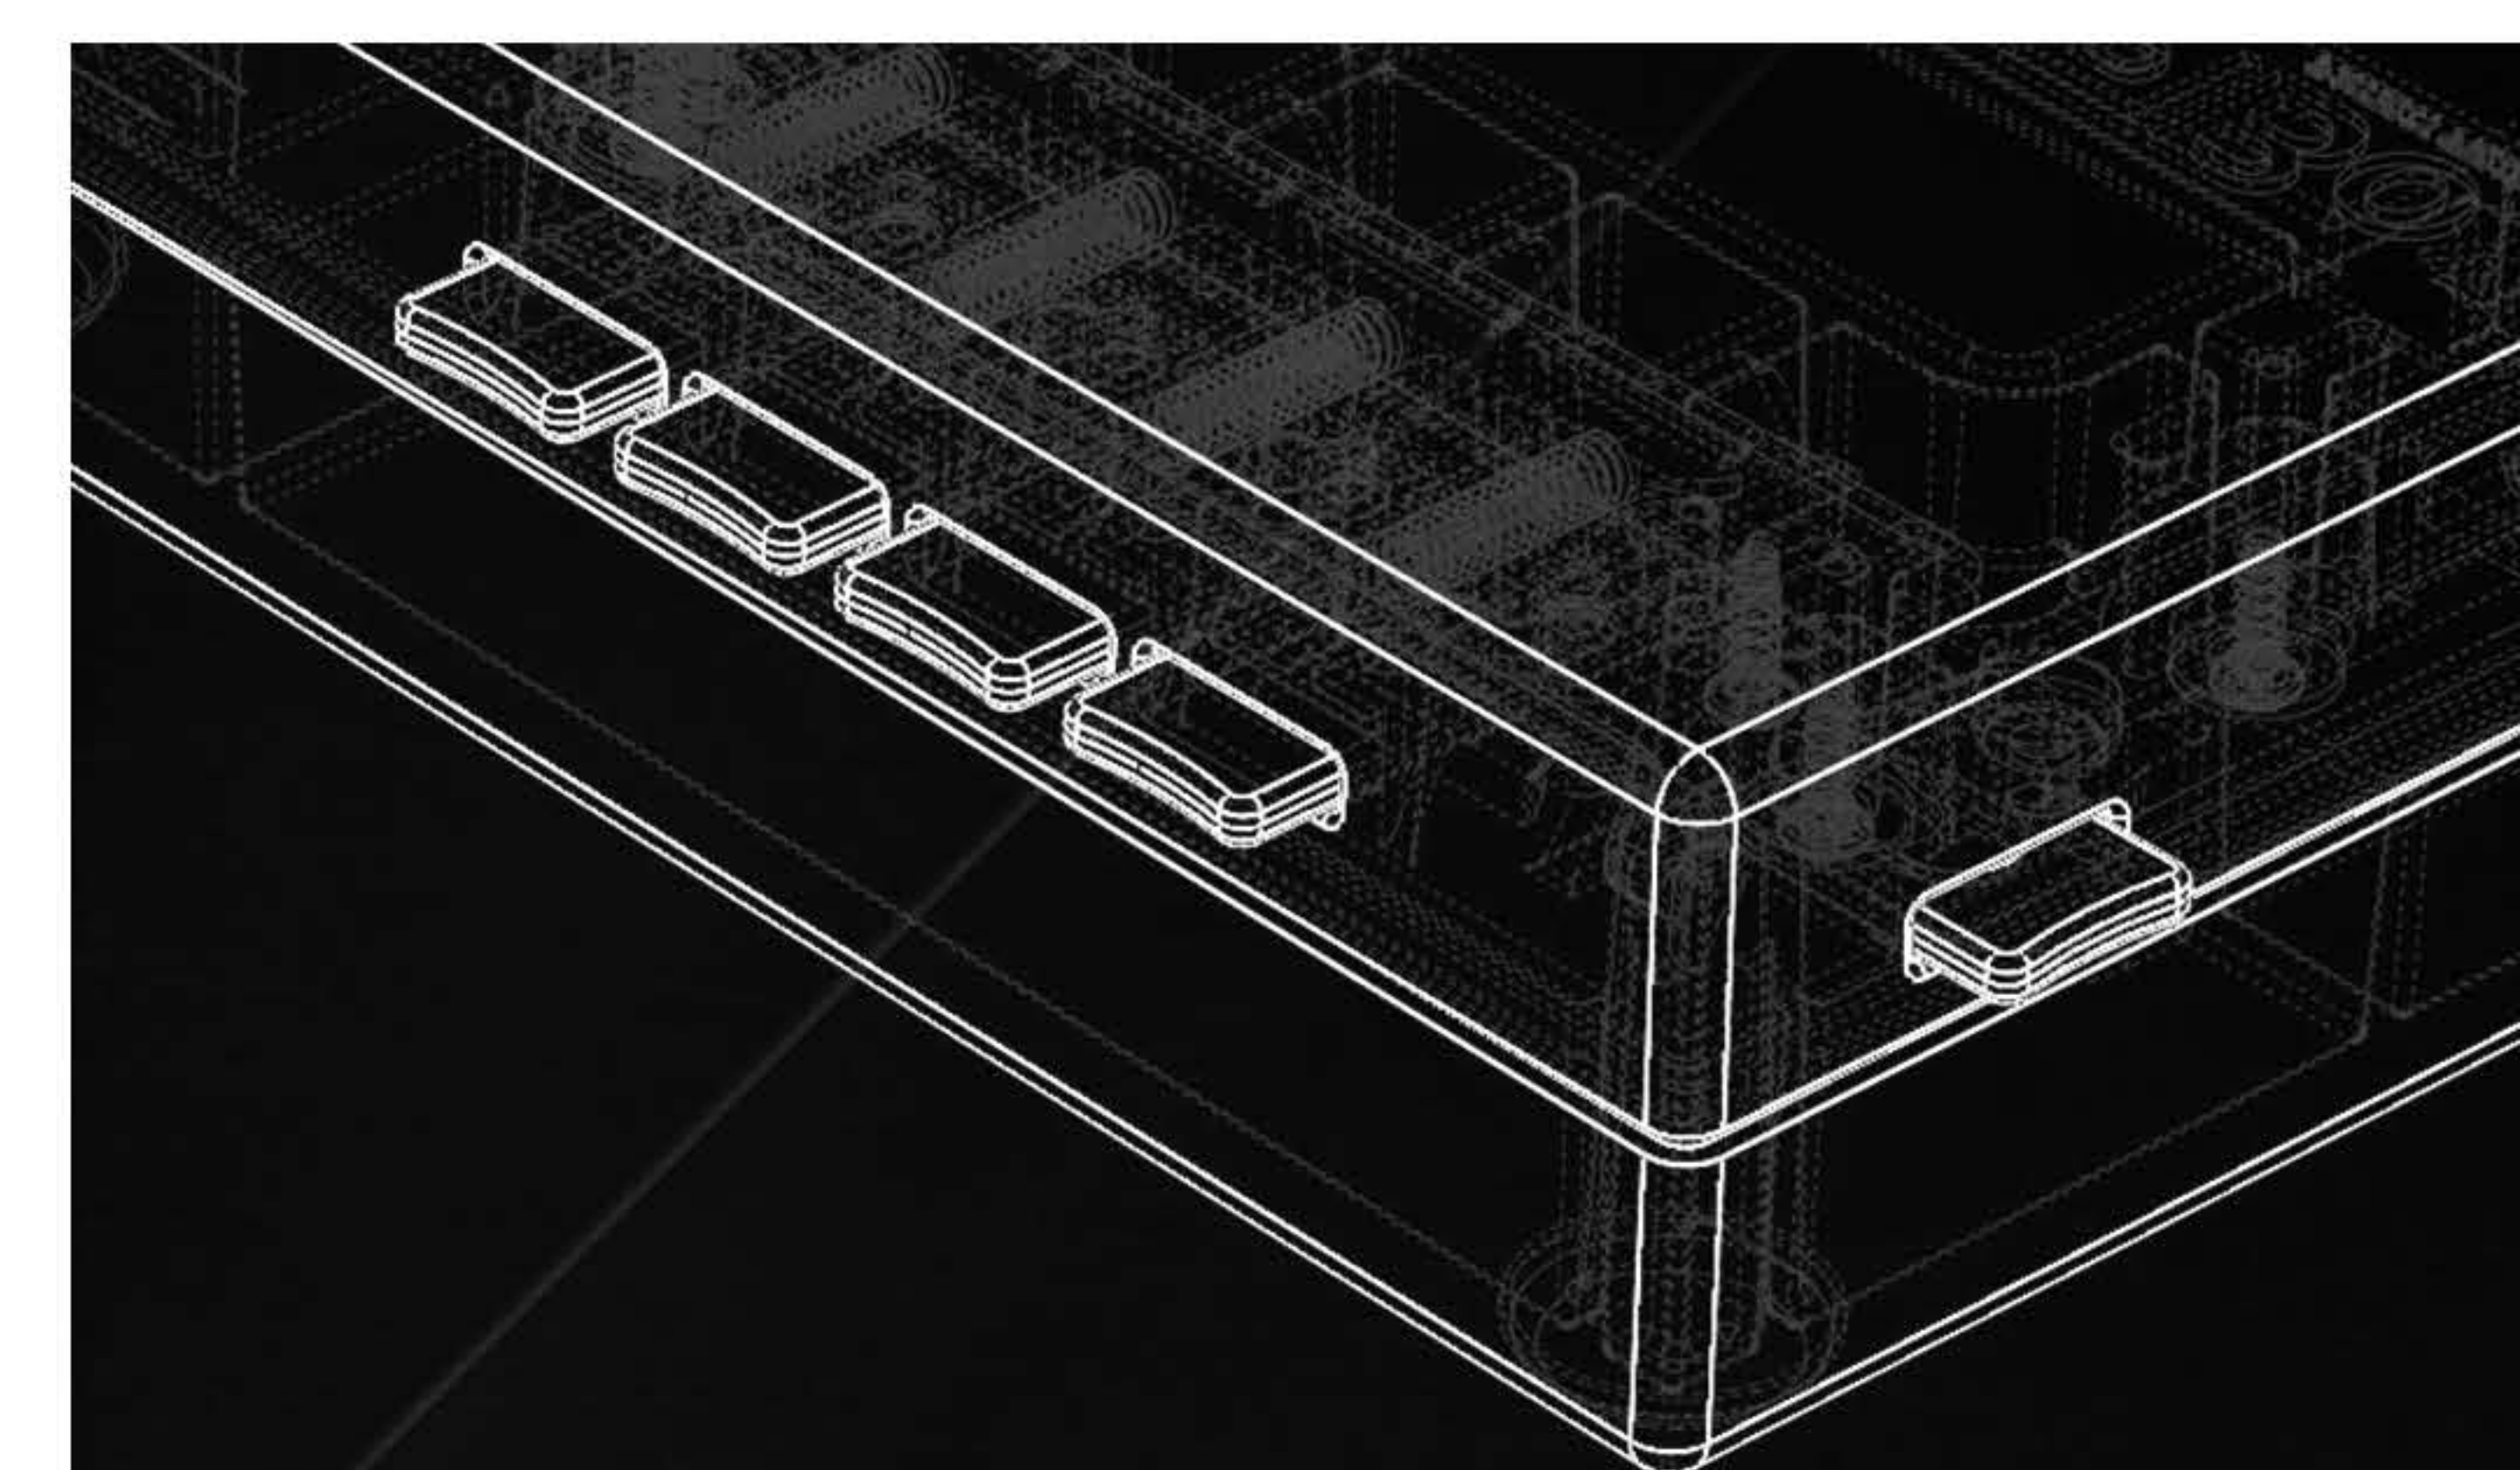

**STOPBOX**  
Instructions Manual

**ATTENTION!**

Prior to using the StopBox® you must fully read and comply with all instructions and warnings of the product in the Instructions Manual. The StopBox® is intended for retaining firearms, and failure to fully read and comply with all instructions and warnings of this product could result in a firearm falling into the hands of someone other than the owner – such as a child or unwanted guest.

Failure to comply with the instructions and warnings of the StopBox® Instructions Manual could ultimately result in severe bodily injury or death. Do not place a firearm within the StopBox® until you have fully read all instructions and warnings contained in the Instructions Manual and any other manuals or documentation that accompany the product.

StopBox USA, LLC shall not be liable for any injury, loss or damage, direct or consequential arising out of the use of, or the inability to use the StopBox®. You shall determine the suitability of the StopBox® before intended use and you assume all risk and liability whatsoever in connection therewith.

FAILURE TO COMPLY WITH THE STOPBOX® INSTRUCTIONS MANUAL, OR ANY OTHER MANUALS OR DOCUMENTATION THAT ACCOMPANY THIS PRODUCT WILL RESULT IN THE LIMITED WARRANTY CONTAINED HEREIN TO BECOME VOID. ADDITIONALLY, THE LIMITED WARRANTY CONTAINED HEREIN WILL BECOME VOID IF YOU (1) SUBJECT THE STOPBOX® TO ANYTHING BEYOND ORDINARY AND INTENDED USE, (2) MODIFY, ALTER OR DECONSTRUCT THE STOPBOX®, OR (3) USE THE STOPBOX® IN VIOLATION OF ANY APPLICABLE LOCAL, STATE OR FEDERAL RULES, LAWS OR REGULATIONS.