

Jetson

BIKE TO GO

24"



- USER MANUAL -
MODEL#: JBTG24

WARNINGS & GENERAL INFORMATION


FOR YOUR SAFETY...

- This product is intended for adults. Always drive defensively, and watch out for potential obstacles that may catch your wheel or cause you to swerve suddenly.
- Always check any local laws or regulations which may affect where the Jetson 24" Bike to Go can be used. This product is intended to be used on private property.
- Ride at your own risk and use common sense. Any rider that is unable to fit comfortably on the vehicle should not attempt to ride it. All decisions on who can ride the Jetson 24" Bike to Go should be made based on their maturity, skill, and ability to follow the rules.
- Keep this product away from small children. It is intended for use by people who are, at a minimum, comfortable and competent when operating the Jetson 24" Bike to Go .
- The Jetson 24" Bike to Go is designed for one rider. Never carry passengers, and do not attach the Jetson 24" Bike to Go to other objects.
- This product was manufactured for performance and durability, but is not impervious to damage. Aggressive riding can over-stress and damage the Jetson 24" Bike to Go. The rider assumes all responsibility and risk associated with high-stress activity.
- Keep your fingers and other body parts away from the wheels and all other moving components when operating the Jetson 24" Bike to Go . Only activate the speed control when you are on the Jetson 24" Bike to Go and in a safe environment suitable for riding.
- Do not wear headphones or use a cell phone while operating the Jetson Bike to Go.
- Do not operate the Jetson 24" Bike to Go in wet or icy weather, and never immerse the product in water. The components can be damaged by water and create other unsafe conditions.
- Avoid excessive speeds when riding downhill, as it increases the risk of accident and injury. Avoid wet, slick, bumpy, uneven or rough surfaces while using the Jetson 24" Bike to Go . Never risk damaging surfaces such as carpet and flooring by using the product indoors.
- Do not ride at night, or when visibility is limited.
- Always wear proper protective equipment, such as a helmet, elbow pads, and knee pads. Athletic shoes with rubber soles are best for riding the Jetson 24" Bike to Go .
- Never operate the product barefooted or in sandals, and keep shoelaces tied and out of the wheels, motor, and drive system.
- Riding with improperly adjusted brakes or worn brake pads is dangerous and can result in serious injury or death.
- Applying brakes too hard or too suddenly can lock up a wheel, which could cause you to lose control and fall. Sudden or excessive application of the front brake may pitch the rider over the handlebars, which may result in injury or death.

UNBOXING

After opening the box, please carefully remove the bicycle and all the accessories slowly to avoid scratching the frame. Please check the carton for loose parts before discarding.

OVERVIEW

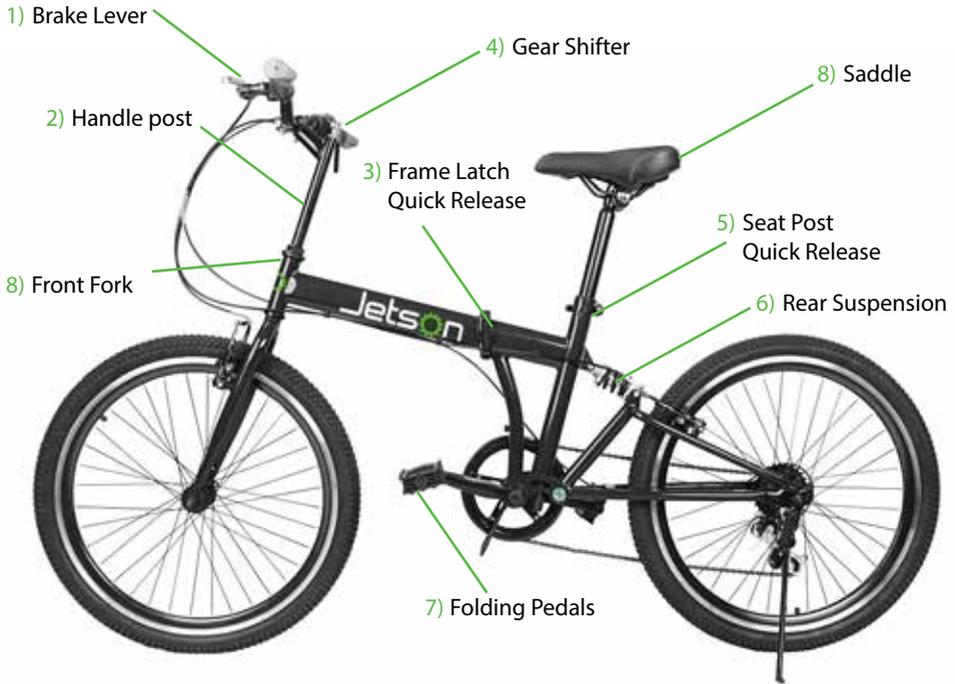

UNFOLDING AND PUTTING TOGETHER YOUR BICYCLE

Unfolding:

- 1) After removing the bicycle from the box, please unfold the bicycle out by its frame.
- 2) When the frame is fully extended out, please 'lock' the bicycle with the out Quick Release to secure the bike - [See image above '3) Frame Latch']

Attaching Handlebar:



- 1) Insert the handlebar post [Image 2 above] into the front fork tube [Image 8 above]



- 2) Adjust to your preferred height, while at the same time keeping it within the "minimum insertion line."



- 3) Then use the 'handle bar post quick release' to tighten and secure by turning clockwise.

ATTACHING PEDALS

The Bike to Go is equipped with foldable bicycle pedals. Each bicycle pedal has an “R” for Right and an “L” for Left marked on the pedal. Please make sure that the correct pedal is prepared to be attached to the correct side. In order to attach pedals, you will need to use a wrench and turn towards the front fork in order to tighten. Always check pedals are securely tightened prior to riding.

*** Please note, attempting to attach incorrect pedal side will strip the crank threads.

SADDLE POSITION

Correct saddle adjustment is an important factor in getting the most performance and comfort from your bicycle. If the saddle position is not comfortable for you, it is highly recommended that you adjust it. To check for the correct saddle height: Sit on the saddle, place one heel on a pedal, then rotate the crank until the pedal with your heel on it is in the down position and the crank arm is parallel to the seat tube.

If your leg is not completely straight, your saddle needs to be adjusted. If your hips must rock for the heel to reach the pedal, the saddle is too high. If your leg is bent at the knee with your heel on the pedal, the saddle is too low.

Once the saddle is at the correct height, make sure that the seat post does not project from the frame beyond its “Minimum Insertion” or “Maximum Extension” mark.

The saddle can be adjusted up and down from the seat post quick release, and angled from underneath the seat post. After adjusting saddle, please make sure that all adjustments are tightened prior to riding.

BRAKES

Your Bike to Go is equipped with a front and rear V Brake. It’s very important to learn and remember which brake lever controls what brake. Your bike will come already set and adjusted so that the left brake lever controls the rear brake. The right lever controls the front brake. Make sure your hands can reach and squeeze the brake levers.

All brake blocks are provided with grooves that indicate the wear on each block. When the grooves are worn down to a flat surface, replace the blocks (in pairs) immediately. Brake pads should be 1 to 2mm from rim. If brake pads are less than that, they are too tight, and if the brakes are not tight enough, by applying pressure it will not brake properly.

LIMITED 1 YEAR WARRANTY

TO QUALIFY FOR WARRANTY SERVICE:

1. You must present a copy of the sales receipt from an approved retail partner within 90 days of purchase.
2. This product can not be used for rental or commercial use.
3. This product can not be used for competition.

LIMITATIONS OF LIABILITY

- This Limited 1 Year Warranty is non-transferable after the Product's initial sale.
- No unapproved modifications can be made to the Product, its performance or otherwise, in order for this Limited 1 Year Warranty to remain in effect.
- No reimbursement is provided for towing, loss of time, loss of use, inconvenience, incidental or consequential damages.
- Warranty is void if weather related water damage is determined. Owner is responsible for storage and protection from weather.
- Jetson® makes no warranty with respect to products or trade accessories not made by Jetson®, including, but not limited to, motors, tires, wheels and batteries, such products or trade accessories, such items being subject to the original manufacturer's warranty, if any.
- This Limited 1 Year Warranty does not cover minor surface blemishes, rips, tears, or other cosmetic damages due to normal use, or other intentional or unintentional damage to the Product.
- This Limited 1 Year Warranty will not cover any damage which results from the application of improper cleaners, solvents or chemicals to the Product, water damage, smoke or soot, or from exposure to salt-water, sea breeze or salt.
- This Limited 1 Year Warranty will not cover any damage which results from aging, such as fading of paint, deterioration of plated surfaces, deterioration of rubber or plastics, or rusting.
- This Limited 1 Year Warranty does not cover improper repair or misdiagnosis of problem.
- This Limited 1 Year Warranty covers only parts and labor due to manufacturer defect.
- Damage due to misuse or neglect, use other than as specified in the Owner's Manual, or use under abnormal conditions are not covered by this Limited 1 Year Warranty.

OWNER'S WARRANTY RESPONSIBILITIES

As the vehicle owner, you are responsible for the performance of the required maintenance. You should maintain a record of all maintenance performed your vehicle and retain all receipts covering maintenance on your vehicle. You may be denied a warranty claim solely because of your failure to ensure the performance of all scheduled maintenance or lack of maintenance records or receipts. As the vehicle owner, you should be aware that you may be denied your warranty coverage if your vehicle or a part has failed due to abuse, neglect, improper maintenance, or unapproved modifications. For any issue regarding your Jetson® product, call toll free (888) 976-9904.



PRODUCT REGISTRATION

Please complete and mail this card within 10 days of purchase.

NAME: _____

AGE: _____

ADDRESS: _____

CITY, STATE, ZIP: _____

EMAIL: _____

HOME PHONE: _____ WORK PHONE: _____

PURCHASE DATE: _____ PURCHASED FROM: _____

SERIAL NUMBER: _____

PRODUCT: _____

GENDER: _____ OCCUPATION: _____

IS THIS YOUR FIRST JETSON PRODUCT? _____

OTHER SIMILAR PRODUCT OWNED BEFORE: _____

HOW DID YOU HEAR ABOUT THE JETSON® 24" BIKE TO GO ?

Complete this form and mail it to:

Attention: Product Registration
Jetson Bikes
1 Rewe Street
Brooklyn, NY 11211

Jetson

WWW.JETSONBIKE.COM