

Jetson



E-POCKET

-MANUAL-

TABLE OF CONTENTS

A.	Introduction	3
B.	Included in the Box	4
C.	Features and Specs	5
D.	Unfolding the E-Pocket	6
E.	Folding the E-Pocket	8
F.	Adjusting the Handlebar	10
G.	Operating the E-Pocket	10
H.	Safe Driving	12
I.	Charging the Battery	13
J.	Care and Maintenance	14
K.	Safety Warnings	16
L.	Warranty	18
M.	Product Registration	19

INTRODUCTION


Congratulations on your new Jetson E-Pocket Folding Electric Scooter! The E-Pocket is an innovative and fun personal transportation device, ready to take on everyday use. Before your first ride, check whether the wheels are damaged, or parts are loose. If there are any abnormalities, please contact Jetson Customer Support at 1-(888) 976-9904 or email us at customerservice@jetsonbike.com.

This product manual can help you understand, use, and maintain your E-Pocket. In order to avoid danger caused by collisions, falls, and loss of control, please use caution and learn how to ride the E-Pocket safely. Jetson and authorized dealers cannot be held liable for injury or damage caused from riding the E-Pocket. Users ride at their own risk.

The rider is responsible for consequences caused by violating warnings or improper operations.

If you want to return this product for any reason, be sure to first call or email us before taking it back to the store so we can assist you.

INCLUDED IN THE BOX

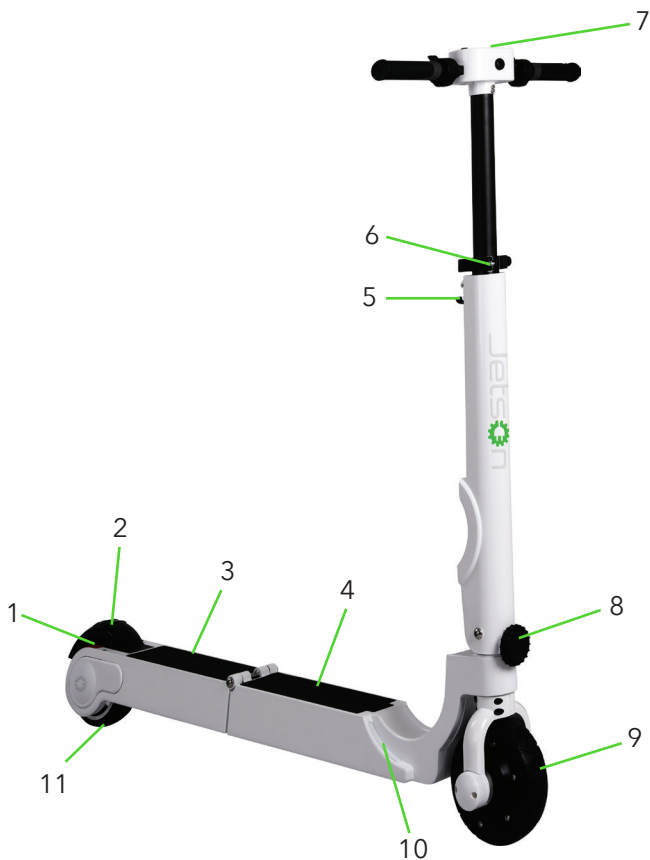

1. Taillight

2. Rear Foot Brake

3. Rear Half of Deck

4. Front Half of Deck

5. Stem Clip

6. Stem Clamp


7. Handlebar

8. Folding Lever

9. Front Tire

10. Deck Lights

11. Rear Wheel

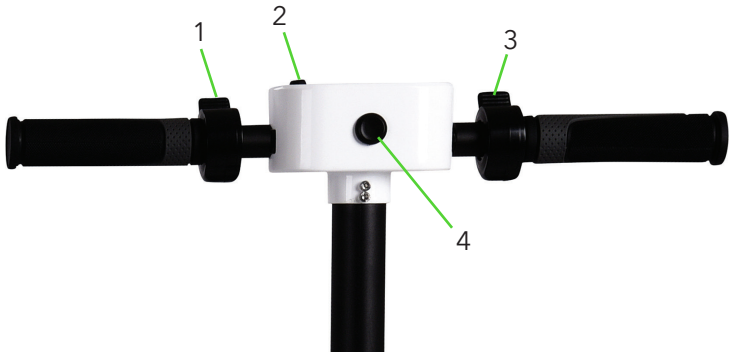

1. Thumb Throttle
2. Power Button

3. E-Brake
4. Folding Button

FEATURES AND SPECS

MODEL: E-POCKET

WHEEL SIZE: 5.5"

MAX SPEED: 18 MPH

MAX RANGE: 20 MILES

BATTERY TYPE: LITHIUM ION

BATTERY RATED VOLTAGE: 36V, 7.8Ah

PRODUCT DIMS: 37" x 17.75" x 42"

(FOLDED) 25" x 5" x 9.5"

MOTOR TYPE: HUB

MOTOR: 200 WATT

CHARGER: 110-240V

CHARGE TIME: 2-3 HOURS

PRODUCT WEIGHT: 24.2 LBS

WEIGHT LIMIT: 220 LBS


RECOMMENDED AGE: 13+

UNFOLDING THE E-POCKET

1. Release the Stem Clip and lift the Handlebars away from the Deck until the Stem is fully extended. Tighten the Folding Lever at the base of the Stem by turning it clockwise. Make sure the Stem is tight and secure.



2. Unfold the Deck by lifting the Rear Wheel up and away from the Deck. Fully extend the Deck. Use the Locking Lever underneath the Deck to secure.

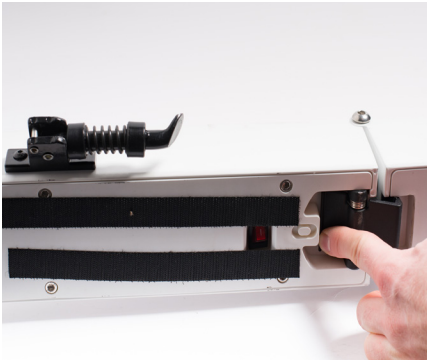

3. Unfold the Handlebars by lifting both Folding Buttons on the Handlebar. Open the Handles out and away from each other until they lock into place.

Lift both
Folding
Buttons




FOLDING THE E-POCKET

1. Fold the Handlebars by lifting both Folding Buttons on the Handlebar. Bring the Handles in towards each other until they lock into place.

Lift both
Folding
Buttons



2. First, make sure the kickstand is up. Then, loosen the Folding Lever underneath the Deck and lift the Rear Wheel up, towards the top of the Deck. The rear half of the Deck should rest flat on the front half of the Deck.

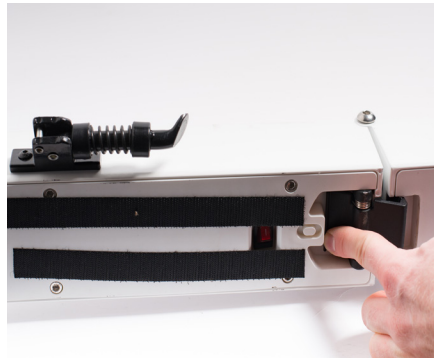




3. Lower the Handlebar all the way. Then, loosen the Folding Lever at the base of the Stem by turning it counter-clockwise. Do not loosen this Folding Lever all the way, just enough so you can lower the Stem. Lower the Handlebars and Stem down. Secure with the Stem Clip.



ADJUSTING THE HANDLEBAR

To adjust the Handlebar, open the Stem Clamp and lift or lower the Handlebar to suit your height. Tighten the Stem Clamp and make sure the Handlebar is secure.

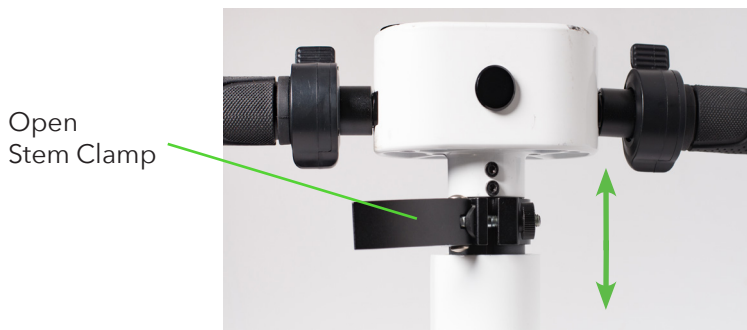


OPERATING THE E-POCKET

TURNING THE E-POCKET ON AND OFF

To turn the E-Pocket on, first make sure the Power Switch under the Deck is on. Then, press and hold the Power Button for 3 seconds.

To turn the E-Pocket off, first make sure the E-Pocket is not in motion. Then, press and hold the Power Button for 3 seconds.

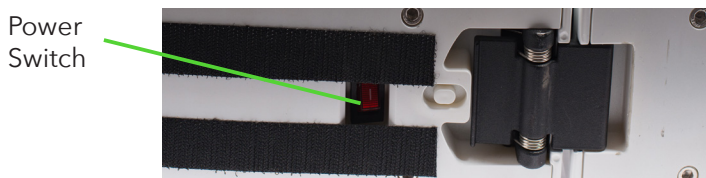

LED DISPLAY

The LED Display shows Speed, Distance, and Battery Life. Please charge the E-Pocket once it displays low battery (below 20%).




TURNING THE LIGHTS ON AND OFF

To turn the Lights on, click and hold the Power Button for about 1 second. One click will turn the Lights on. Another click will turn the Lights off. You can also turn the Lights off by turning the E-Pocket off.

USING THE THUMB THROTTLE

To start riding, press down on the Thumb Throttle. Get accustomed to the acceleration of the throttle.

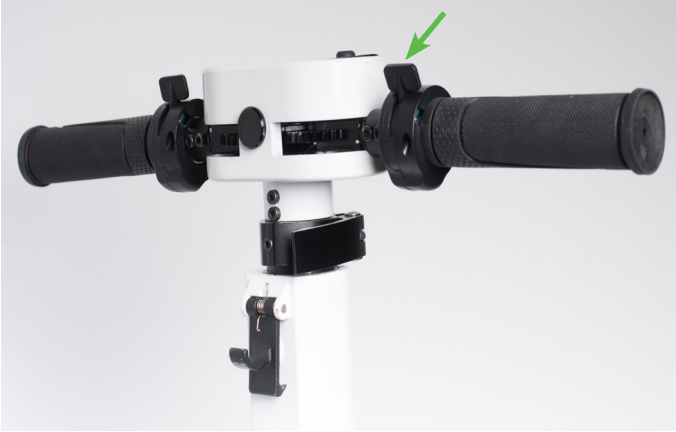

HOW TO APPLY THE BRAKE

To stop, release the Thumb Throttle and press on the E-Brake. You can also use the Rear Foot Brake to come to a stop.



SAFE DRIVING

Helmet: Most serious injuries that occur while riding are head injuries. This could be prevented by wearing a helmet.

Elbow and Knee Pads: For added protection, always wear elbow and knee pads when riding your E-Pocket, to prevent any serious injuries.

Get to know the E-Pocket before riding it. Test your control over it. Make your turns slowly and cautiously, and give yourself stopping distance. It is recommended you practice your first ride on the E-Pocket in an open space with no obstacles in your way.

DRIVING TECHNIQUE

Foot Position - Before riding put your foot as close as possible to the front section of the scooter, and your other foot on the ground. Make sure that your driving route is clear. To start riding, boost yourself forward (as on non-motorized scooters) with your foot that is on the ground. Immediately after boosting yourself forward, slowly press the thumb throttle downwards, and tilt your body forward so you don't fall backwards during acceleration. Please do not push the thumb throttle all the way down, get accustomed to the acceleration of the throttle. Avoid putting your body pressure on the handlebars in acceleration and deceleration. Keep one foot behind the other (it's more comfortable to place one foot forward and the other one turned at 70-90°). This will help you gain more stability.

PLEASE NOTE: Riding, like most sports, involves risk of injury and damage. By choosing to ride the E-Pocket the responsibility and all inherent risk is on you. It is crucial that you know, understand and act according to safety rules.

Turns - The turns on the E-Pocket are commanded by the direction you turn the Handlebar/Front Wheel in. Before turning, look both ways to make sure your path is clear.

Braking - To come to a stop, press down on the E-Brake. Be careful not to press the E-Brake too fast, as it may cause too sudden a stop or jerking motion. You may also use the Rear Foot Brake to come to a stop.

CHARGING THE BATTERY

Your E-Pocket comes with a built-in rechargeable lithium ion battery. Always use the provided charger only. The Charging Port is located on the left side of the E-Pocket near the rear wheel. Please remember to cover the Charging Port when you are done charging. Before your first ride you must fully charge the E-Pocket - charge for 4 hours for the first 3 times you use it. For every ride after, charge your E-Pocket until it is fully charged, and NOT LONGER. Do not leave any chargers plugged in overnight, or leave it plugged in past the charge time.

1. Plug one end of the power cord into a grounded AC outlet and the other into the E-Pocket's Charging Port. The red charging light on the charger unit will turn on.
2. The red light will turn green once fully charged. Recharge the E-Pocket after each use.

(Please note: Always plug the charger into the wall first before the device. If the wall outlet doesn't have power and you plug the charger into the device first, it will light green, even if the battery is not full. So always plug into the wall first to make sure there is power.)


THE CHARGER OFFERS A CHARGING STATUS ON THE TOP OF THE CHARGER:

CHARGING LIGHT RED: Battery is charging.

CHARGING LIGHT GREEN: Charging is complete.

Don't use the E-Pocket if the battery emits strange odors, overheats, or begins leaking. If the battery does leak, do not touch any leaking materials, as the battery contains dangerous substances. Do not open the battery and do not insert anything into the battery.

Only use the provided charger for the E-Pocket. Do not charge the battery if it has over-discharged. It should be discarded for your safety. Do not turn on the E-Pocket while it is charging.

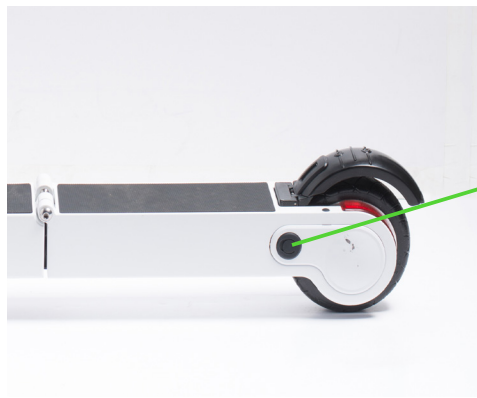

Charging Port

CARE AND MAINTENANCE

DRIVING RANGE

The average range of the E-Pocket is 20 miles. However, a lot of factors will affect how far you can go per charge:

- Driving surface: A smooth, flat surface will increase driving distance.
- Weight: More weight means less distance.
- Ambient temperature: Please ride and store the E-Pocket under recommended temperature, which will increase its longevity and driving distance.
- Maintenance: Timely battery charging and maintenance will increase driving distance.
- Speed and driving style: Maintaining a moderate speed will increase distance. Frequent starting and stopping, acceleration, and deceleration will reduce it.

SPEED LIMIT

The top speed of the E-Pocket is 18 mph.

WEIGHT LIMIT

The maximum load is 220 lbs. Going above the maximum weight limit can cause injury or damage the E-Pocket.

CLEANING THE E-POCKET

To clean the E-Pocket carefully wipe with a damp cloth, then dry with a dry cloth. Do not use water to clean the E-Pocket, as the electrical and electronic systems may get wet, resulting in personal injury or malfunction of the E-Pocket.

BATTERY

- Keep the E-Pocket away from fire and excessive heat.
- To avoid damage to the battery, never subject the E-Pocket to intense physical shock, severe vibration, or impact.
- Protect the E-Pocket from water or moisture.
- Never disassemble the E-Pocket or its battery.
- If there are any issues with the battery, please contact Jetson Customer Support at 1-(888) 976-9904 or email us at customerservice@jetsonbike.com.

STORAGE

- If you plan on storing the E-Pocket for a substantial period of time, please make sure you fully charge the battery before storing. The battery should be fully charged once a month after this.
- To protect against dust, cover the E-Pocket.
- Store the E-Pocket indoors, in a dry place and at a suitable temperature.
- You should bring the E-Pocket into a warm environment (above 50 degrees Fahrenheit) for charging.
- Do not leave the E-Pocket plugged into the charger for long periods of time.

SAFETY WARNINGS

Here are some useful tips to make sure you always have a safe ride:

- Children, the elderly, and pregnant women should not use the E-Pocket.
- Do not ride after drinking or taking prescription medication.
- Do not carry items when riding.
- Prior to each ride, inspect each part of the E-Pocket to ensure it has been maintained correctly and is functioning properly.
- Always give way to pedestrians.
- Always comply with local traffic laws and regulations. Remember, the E-Pocket is a motor vehicle, and is treated as such by local law enforcement. You can and will be arrested for drunk driving. Many cities have restrictions on where you can drive motor vehicles, as well as additional restrictions on driving non-automobiles on streets and highways.
- Be alert to things in front and far away from you.
- Make sure your feet are always placed securely on the deck.
- The E-Pocket cannot be ridden by more than one person. Only one person can ride at a time.
- When you ride the E-Pocket along with other riders, always keep a safe distance to avoid a collision.
- When turning, be sure to maintain your balance.
- Do not allow distractions when riding, such as answering the phone or engaging in any other activities.
- Avoid riding in the rain or on smooth surfaces such as snow or ice.
- Do not ride on roads with obstacles (such as litter, small stones, etc.).
- Avoid riding in narrow spaces or on steep slopes.
- Avoid riding around flammable gas, steam, liquid, or dust that could cause fire.
- Never operate the product barefooted and keep shoelaces tied.
- Riding with improperly adjusted brakes is dangerous and can result in serious injury or death.
- Applying brakes too hard or too suddenly can lock up a wheel, which could cause you to lose control and fall. Sudden or excessive application of the brake may pitch the rider over the handlebars, which may result in injury or death.

CALIFORNIA WARNING

This product contains chemicals, including lead, which are known to the state of California to cause cancer, birth defects, and other medical conditions.

MODIFICATIONS

Do not attempt to disassemble, modify, repair, or replace the E-Pocket or any components of the unit without instruction from Jetson Customer Support. This will void any warranty, and can lead to malfunctions which may cause injury.

ADDITIONAL OPERATION CAUTIONS

Do not lift the E-Pocket off the ground while it is on and the wheels are in motion. This can result in freely spinning wheels, which may cause injury to yourself or others nearby. Do not jump on or off the E-Pocket, and do not jump while using it. Always keep your feet firmly planted on the deck while in operation. Always check the battery charge before using.

LIMITED 1 YEAR WARRANTY

TO QUALIFY FOR WARRANTY SERVICE:

1. You must present a copy of the sales receipt from an approved retail partner within 90 days of purchase.
2. This product cannot be used for rental or commercial use.
3. This product cannot be used for competition.

LIMITATIONS OF LIABILITY

- This Limited 1 Year Warranty is non-transferable after the product's initial sale.
- No unapproved modifications can be made to the product, its performance or otherwise, in order for this Limited 1 Year Warranty to remain in effect.
- No reimbursement is provided for towing, loss of time, loss of use, inconvenience, incidental or consequential damages.
- Warranty is void if weather related water damage is determined. Owner is responsible for storage and protection from weather.
- Jetson® makes no warranty with respect to products or trade accessories not made by Jetson®, including, but not limited to, motors, tires, wheels, and batteries, such products or trade accessories, such items being subject to the original manufacturer's warranty, if any.
- This Limited 1 Year Warranty does not cover minor surface blemishes, rips, tears, or other cosmetic damages due to normal use, or other intentional or unintentional damage to the product.
- This Limited 1 Year Warranty will not cover any damage which results from the application of improper cleaners, solvents or chemicals to the product, water damage, smoke or soot, or from exposure to saltwater, sea breeze or salt.
- This Limited 1 Year Warranty will not cover any damage which results from aging, such as fading of paint, deterioration of plated surfaces, deterioration of rubber or plastics, or rusting.
- This Limited 1 Year Warranty does not cover improper repair or misdiagnoses of problems.
- This Limited 1 Year Warranty only covers parts due to manufacturer defect.
- Damage due to misuse or neglect, use other than as specified in the Owner's Manual, or use under abnormal conditions are not covered by this Limited 1 Year Warranty.

OWNER'S WARRANTY RESPONSIBILITIES

As the device's owner, you are responsible for the performance of the required maintenance. You may be denied a warranty claim solely because of your failure to ensure the performance of all scheduled maintenance. As the owner, you should be aware that you may be denied your warranty coverage if your device or a part has failed due to abuse, neglect, improper maintenance, or unapproved modifications. For any issue regarding your Jetson® product, call toll free 1-(888) 976-9904, or email customerservice@jetsonbike.com.

PRODUCT REGISTRATION

Please complete and mail this card within 10 days of purchase or go to <https://www.ridejetson.com/product-registration>.

Name: _____

Address: _____

City, State, Zip: _____

Email: _____

Home Phone: _____ Gender: _____

Purchase Date: _____ Purchased From: _____

Serial Number: _____

Is this your first Jetson product?: _____

Other similar product owned before: _____

- Why did you buy this product?:
- For myself
 - For my child
 - For my grandchild
 - Gift for someone else (adult)
 - Gift for someone else (child)

How did you hear about the Jetson E-Pocket?: _____

Complete this form and mail it to:

Attention: Product Registration
Jetson Electric Bikes
1 Rewe Street
Brooklyn, NY 11211

Jetson



E-POCKET