

# Jetson



## FLEX

BALANCE BIKE TO KICK SCOOTER

-MANUAL-



# TABLE OF CONTENTS

A.	Introduction	4
B.	Included In The Box	5
C.	Features and Specs	5
D.	Assembly	6
E.	Balance Bike to Kick Scooter	8
F.	How to Apply the Brake	9
G.	Kick Scooter to Balance Bike	9
H.	How to Ride	9
I.	Safety Warnings	11
J.	Warranty	13
K.	Product Registration	14

## INTRODUCTION

 
Congratulations on your new Jetson Flex! The Flex is an innovative and fun 2-in-1 Balance Bike to Kick Scooter, ready to take on everyday use. Before your first ride, check whether the wheels are damaged, or parts are loose. If there are any abnormalities, please contact Jetson Customer Support at 1-(888) 976-9904 or email us at [customerservice@jetsonbike.com](mailto:customerservice@jetsonbike.com).

This product manual can help you understand, use, and maintain your Flex. In order to avoid danger caused by collisions, falls, and loss of control, please use caution and learn how to ride the Flex safely. Jetson and authorized dealers cannot be held liable for injury or damage caused from riding the Flex. Users ride at their own risk.

The rider is responsible for consequences caused by violating warnings or improper operations.

If you want to return this product for any reason, be sure to first call or email us before taking it back to the store so we can assist you.

## INCLUDED IN THE BOX

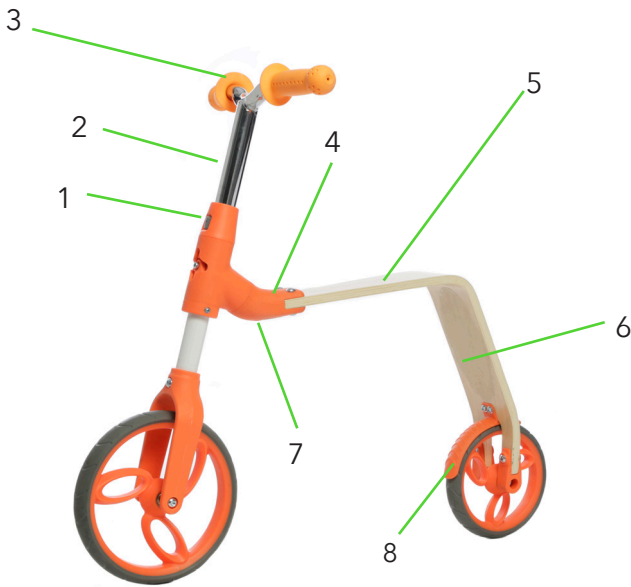

- |                     |                         |
|---------------------|-------------------------|
| 1. Handlebar Button | 5. Seat                 |
| 2. Stem             | 6. Deck (Scooter)       |
| 3. Handlebar        | 7. Push Button          |
| 4. Elbow            | 8. Rear Brake (Scooter) |

## FEATURES AND SPECS

 
- Weight Limit: 55 lbs
- Product Weight: 6 lbs
- Recommended Age: 3+
- Wheel Material: Plastic
- Wheels Size: Front - 9" Back - 7"
- Rear Foot Brake (Scooter)
- Removable Handlebar
- 2-in-1 Balance Bike to Kick Scooter

## ASSEMBLY

To assemble the Flex, you will need to connect the Elbow and the Seat.

First, slide the Seat into the Elbow. Align the holes in the Elbow and the Seat. Then, place the Small Bolt through the bottom hole of the Elbow and the Long Bolt through the top of the Elbow. Turn the Small Bolt until it is tight and secure using the provided tools.

Please Note: When the Push Button is on the bottom of the Elbow, it is in bike mode.

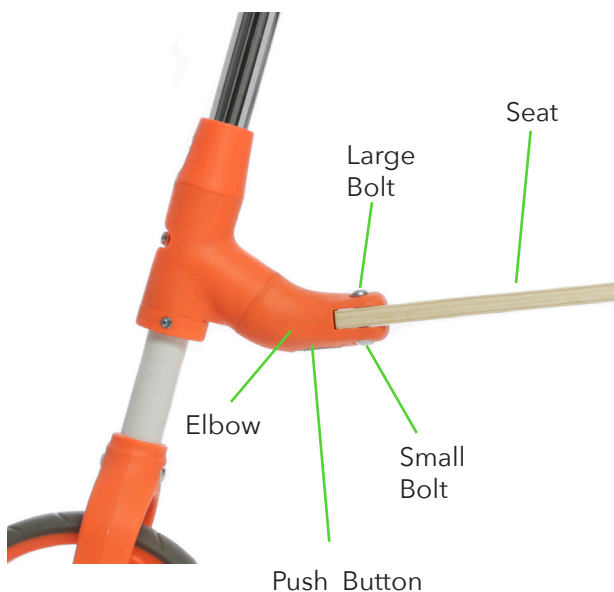

## ATTACHING THE HANDLEBAR

To attach the Handlebar, press the Handlebar Button located at the front of the Stem in while sliding the Handlebar Stem into place. Make sure the Handlebar is tight and secure.

If you plan on storing the Flex, you can remove the Handlebar to make it easier to store.

To remove the Handlebar, press the Handlebar Button in while pulling up on the Handlebar.



## BALANCE BIKE TO KICK SCOOTER

To change the Flex from a Balance Bike to Kick Scooter, press the Push Button on the Elbow and spin the Elbow in either direction until you hear it click and lock into place. **Please note: You will need to press the Push Button in and slide it forward.**



 
Push Button  
to Spin the  
Elbow





## HOW TO APPLY THE BRAKE

To apply the brake, press down on the Rear Brake with your back foot. Please Note: The Rear Brake can only be used when the Flex is a Kick Scooter.

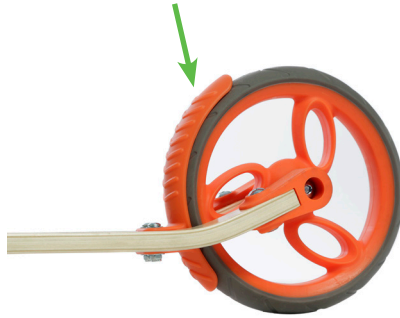

## KICK SCOOTER TO BALANCE BIKE

To change the Flex from a Kick Scooter to Balance Bike, press the Push Button on the Elbow and spin the Elbow in either direction until you hear it click and lock into place.



## HOW TO RIDE

Balance Bike - Start standing with the Balance Bike between both legs, feet flat on the ground, and both hands firmly holding onto the Handlebar. Sit on the Seat with your feet still flat on the ground. You can propel yourself forward with either leg by pushing off the ground. The Balance Bike is meant to work on balance and control skills and build confidence.

Kick Scooter - Before riding, put your foot as close as possible to the front of the Deck, and your other foot on the ground. Make sure that your riding route is clear. To start riding, boost yourself forward with your foot that is on the ground. Keep one foot behind the other, (it's more comfortable to place one foot forward and the other one turned at 70-90°). It will help you gain more stability.

## SAFETY WARNINGS

Here are some useful tips to make sure you always have a safe ride:

- This product is suitable for children age 3+, and for use on private property and closed courses. Always ride defensively, and watch out for potential obstacles that may catch your wheel or cause you to swerve suddenly.
- The Flex should always be used under adult supervision.
- Always check any local laws or regulations which may affect where the Flex may be used.
- Ride at your own risk and use common sense. Any rider that is unable to fit comfortably on the product should not attempt to ride it. All decisions on who is allowed to ride the Flex should be made based on their maturity, skill, and ability to follow the rules.
- The Flex is designed for one rider. Never carry passengers, and do not attach the Flex to other objects.
- This product was manufactured for performance and durability, but is not impervious to damage. Jumping and aggressive riding should be avoided under all circumstances. The rider assumes all responsibility and risk associated with high-stress activity.
- Keep your fingers and other body parts away from all other moving components when operating the Flex. Keep your hands on the handlebars at all times.
- Do not wear headphones or use a cell phone while operating the Flex.
- Do not operate the Flex in wet or icy weather, and do not immerse the product in water.
- Avoid excessive speeds when riding downhill, as it increases the risk of accident and injury. Avoid wet, slick, bumpy, uneven or rough surfaces while using the Flex.
- Do not ride at night, or when visibility is limited.
- Always wear proper protective equipment, such as a helmet, elbow pads, and knee pads. Athletic shoes with rubber soles are best for riding the Flex.
- Never operate the product barefooted or in sandals, and keep shoelaces tied and away from the wheels.
- The brake may become hot while operating the kick scooter, do not touch the brake with your bare skin.
- Make sure all screws are tightened, and all clamps and locks are properly secured before riding.

## MODIFICATIONS

Do not attempt to disassemble, modify, repair, or replace the Flex or any components of the unit without instruction from Jetson Customer Support. This will void any warranty, and can lead to malfunctions which may cause injury.

## ADDITIONAL OPERATION CAUTIONS

Do not lift the Flex off the ground while it is on and the wheels are in motion. This can result in freely spinning wheels, which may cause injury to yourself or others nearby. Do not jump on or off the Flex, and do not jump while using it. Always keep your feet firmly planted on the pedals or foot rest while in operation. Always check battery charge before using.

# LIMITED 1 YEAR WARRANTY

## TO QUALIFY FOR WARRANTY SERVICE:

1. You must present a copy of the sales receipt from an approved retail partner within 90 days of purchase.
2. This product cannot be used for rental or commercial use.
3. This product cannot be used for competition.

## LIMITATIONS OF LIABILITY

- This Limited 1 Year Warranty is non-transferable after the product's initial sale.
- No unapproved modifications can be made to the product, its performance or otherwise, in order for this Limited 1 Year Warranty to remain in effect.
- No reimbursement is provided for towing, loss of time, loss of use, inconvenience, incidental or consequential damages.
- Warranty is void if weather related water damage is determined. Owner is responsible for storage and protection from weather.
- Jetson® makes no warranty with respect to products or trade accessories not made by Jetson®, including, but not limited to, motors, tires, wheels, and batteries, such products or trade accessories, such items being subject to the original manufacturer's warranty, if any.
- This Limited 1 Year Warranty does not cover minor surface blemishes, rips, tears, or other cosmetic damages due to normal use, or other intentional or unintentional damage to the product.
- This Limited 1 Year Warranty will not cover any damage which results from the application of improper cleaners, solvents or chemicals to the product, water damage, smoke or soot, or from exposure to saltwater, sea breeze or salt.
- This Limited 1 Year Warranty will not cover any damage which results from aging, such as fading of paint, deterioration of plated surfaces, deterioration of rubber or plastics, or rusting.
- This Limited 1 Year Warranty does not cover improper repair or misdiagnoses of problems.
- This Limited 1 Year Warranty only covers parts due to manufacturer defect.
- Damage due to misuse or neglect, use other than as specified in the Owner's Manual, or use under abnormal conditions are not covered by this Limited 1 Year Warranty.

## OWNER'S WARRANTY RESPONSIBILITIES

As the device's owner, you are responsible for the performance of the required maintenance. You may be denied a warranty claim solely because of your failure to ensure the performance of all scheduled maintenance. As the owner, you should be aware that you may be denied your warranty coverage if your device or a part has failed due to abuse, neglect, improper maintenance, or unapproved modifications. For any issue regarding your Jetson® product, call toll free 1-(888) 976-9904, or email [customerservice@jetsonbike.com](mailto:customerservice@jetsonbike.com).

# PRODUCT REGISTRATION

Please complete and mail this card within 10 days of purchase or go to <https://www.ridejetson.com/product-registration>.

Name: \_\_\_\_\_

Address: \_\_\_\_\_

City, State, Zip: \_\_\_\_\_

Email: \_\_\_\_\_

Home Phone: \_\_\_\_\_ Gender: \_\_\_\_\_

Purchase Date: \_\_\_\_\_ Purchased From: \_\_\_\_\_

Serial Number: \_\_\_\_\_

Is this your first Jetson product?: \_\_\_\_\_

Other similar product owned before: \_\_\_\_\_

- Why did you buy this product?:
- For myself
  - For my child
  - For my grandchild
  - Gift for someone else (adult)
  - Gift for someone else (child)

How did you hear about the Jetson Flex?: \_\_\_\_\_

\_\_\_\_\_

Complete this form and mail it to:

**Attention: Product Registration  
Jetson Electric Bikes  
1 Rewe Street  
Brooklyn, NY 11211**



# Jetson



## FLEX

BALANCE BIKE TO KICK SCOOTER