

JETSON


Remix Jetkart[®] + All-Terrain Hoverboard.

A guide for your ride.

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

MODEL: JREMIX-BLK | JREMIX-BB

Designed in Brooklyn | Made in China

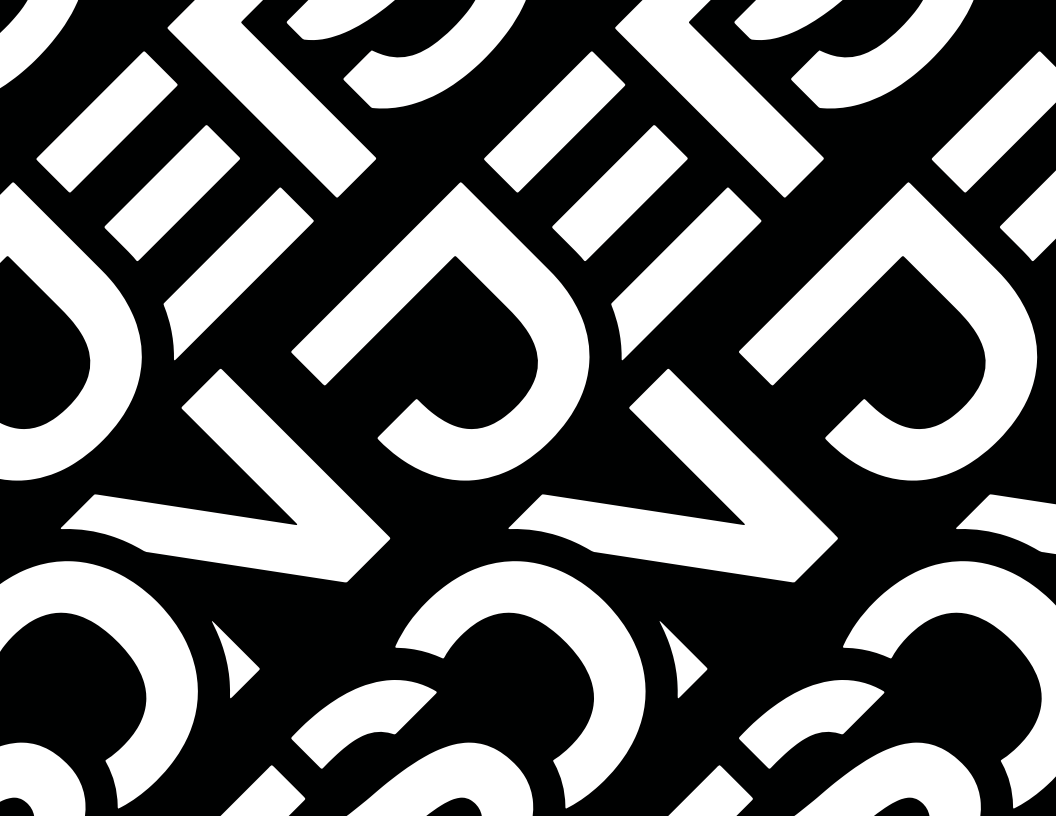

**Remember to be safe and,
most importantly, have fun!**

Table of Contents

Safety Warnings	4
What's in the Box	6
Specs & Features	8
Attaching the Seat	10
Inserting the Brackets	12
Attaching the Nose Cap	14
Inserting the Footrests	16
Adjusting the Footrest	18
Attaching the Hoverboard	20
Charging the Hoverboard	23
Indicator Lights	24
Connecting to Bluetooth®	25
Recalibrating the Hoverboard	26
Turning the Lights On	27
Getting on the Remix	29
Helmet Safety	30
Riding the Remix	31
Riding the Hoverboard	33
Care & Maintenance	35

Safety Warnings

- Before use, please read the user manual and safety warnings carefully, and make sure you understand and accept all the safety instructions. The user will be responsible for any loss or damage caused by improper use.
- Before each cycle of operation, the operator shall perform the preoperation checks specified by the manufacturer: That all guards and pads originally supplied by the manufacturer are in proper place and in serviceable condition; That the braking system is functioning properly; That any and all axle guards, chain guards, or other covers or guards supplied by the manufacturer are in place and in serviceable condition; That tires are in good condition, inflated properly, and have sufficient tread remaining; The area that the product is to be operated should be safe and suitable for safe operation.
- Components shall be maintained and repaired in accordance with the manufacturer's specifications and using only the manufacturer's authorized replacement parts with installation performed by dealers or other skilled persons.
- Warning against recharging non-rechargeable batteries.
- Don't allow hands, feet, hair, body parts, clothing, or similar articles to come in contact with moving parts, wheels, or drive train, while the motor is running.
- This product should not be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction (IEC 60335-1/A2:2006).
- Unsupervised children should not play with the product (IEC 60335-1/A2:2006).
- Adult supervision is required.
- The rider should not exceed 220 lb.
- Units shall not be operated to perform racing, stunt riding, or other maneuvers, which may cause loss of control, or may cause uncontrolled operator/passenger actions or reactions.
- Never use near motor vehicles.
- Avoid sharp bumps, drainage grates, and sudden surface changes. Scooter may suddenly stop.
- Avoid streets and surfaces with water, sand, gravel, dirt, leaves, and other debris. Wet weather impairs traction, braking, and visibility.
- Avoid riding around flammable gas, steam, liquid, or dust that could cause fire.
- Operators shall adhere to all of the manufacturer's recommendations and instructions, as well as comply with all laws and ordinances: Units without headlights shall be operated only with adequate daylight conditions of visibility, and; Owners shall be encouraged to highlight (for conspicuity) using lighting, reflectors, and for low-riding units, signal flags on flexible poles.
- Persons with the following conditions shall be cautioned not to operate: Those with heart conditions; Pregnant women; Persons with head, back, or neck ailments, or prior surgeries to those areas of the body; and persons with any mental or physical conditions that may make them susceptible to injury or impair their physical dexterity or mental capabilities to recognize, understand, and perform all of the safety instructions and to be able to assume the hazards inherent in unit use.
- Do not ride at night.
- Do not ride after drinking or taking prescription medication.
- Do not carry items when riding.
- Never operate the product barefooted.
- Always wear shoes and keep shoelaces tied.
- Make sure your feet are always placed securely on the deck.
- Operators always shall use appropriate protective clothing, including but not limited to a helmet, with appropriate certification, and any other equipment recommended by the manufacturer: Always wear protective equipment such as helmet, knee pads, and elbow pads.
- Always give way to pedestrians.
- Be alert to things in front and far away from you.
- Do not allow distractions when riding, such as answering the phone or engaging in any other activities.
- The product cannot be ridden by more than one person.

- When you ride the product along with other riders, always keep a safe distance to avoid a collision.
- When turning, be sure to maintain your balance.
- Riding with improperly adjusted brakes is dangerous and can result in serious injury or death.
- The brake may become hot while operating, do not touch the brake with your bare skin.
- Applying brakes too hard or too suddenly can lock up a wheel, which could cause you to lose control and fall. Sudden or excessive application of the brake may result in injury or death.
- If the brake loosens, please adjust with the hexagon wrench, or please contact Jetson Customer Care.
- Replace worn or broken parts immediately.
- Check whether all safety labels are in place and understood before riding.
- The owner shall allow the use and operation of the unit after a demonstration that such operators can understand and operate all components of the unit before use.
- Do not ride without proper training. Do not ride at high speeds, on uneven terrain, or on slopes. Do not perform stunts or turn abruptly.
- Recommended for indoor use.
- Prolonged exposure to UV rays, rain and the elements may damage the enclosure materials, store indoors when not in use.

California Proposition 65



This product can expose you to a chemical such as Cadmium that is known to the state of California to cause cancer or birth defects or other reproductive harm. For more information go to www.p65warnings.ca.gov/product

MODIFICATIONS

Do not attempt to disassemble, modify, repair, or replace the unit or any components of the unit without instruction from Jetson Customer Care. This will void any warranty, and can lead to malfunctions which may cause injury.

ADDITIONAL OPERATION CAUTIONS

Do not lift the product off the ground while it is on and the wheels are in motion. This can result in freely spinning wheels, which may cause injury to yourself or others nearby. Do not jump on or off the product, and do not jump while using it. Always keep your feet firmly planted on the foot rest while in operation. Always check the battery charge before using.

NOTICE OF COMPLIANCE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:



- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.

What's in the Box

1. FRAME
2. SEAT
3. HOVERBOARD
4. BRACKET (x2)
5. VELCRO STRAP (x2)
6. FOOTREST (x2)
7. NOSE CAP

HARDWARE / TOOLS INCLUDED FOR ASSEMBLY:

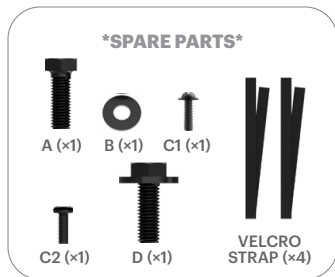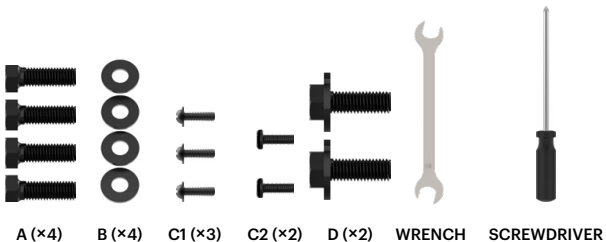

NOTE: ADULTS MUST ASSIST CHILDREN IN THE INITIAL ADJUSTMENT PROCEDURES OF THE PRODUCT.



PLEASE NOTE: IMAGES MAY NOT REFLECT EXACT APPEARANCE OF ACTUAL PRODUCT.

Specs & Features

REMIX JETKART®:

- PRODUCT WEIGHT: 16.5 LB
- DIMENSIONS: 46.7" (L) × 22.8" (W) × 14" (H)
- ADJUSTABLE LENGTH: MIN 34.6" | MAX 46.1"
- TIRE SIZE: 4"
- WEIGHT LIMIT: 220 LB
- RECOMMENDED AGE: 12+

REMIX HOVERBOARD:

- MAX SPEED: UP TO 9 MPH
- MAX RANGE: UP TO 12 MILES
- BATTERY: 25.2V, 4.0AH LITHIUM-ION
- MOTOR: 500W DUAL HUB MOTOR, (250W X 2)
- SPEAKER: 5.0 DYNAMIC BLUETOOTH® SPEAKER
- BLUETOOTH® RANGE: UP TO 33 FT
- PRODUCT WEIGHT: 13 LB
- PRODUCT DIMENSIONS: 24.4" × 7.7" × 7.4"
- TIRE SIZE: 6.4"
- CHARGER: UL LISTED, 100-240V
- CHARGE TIME: UP TO 4 HOURS
- CLIMBING ANGLE: UP TO 15°
- WEIGHT LIMIT: 220 LB
- RECOMMENDED AGE: 12+



1. Get Started

1.1 Attaching the Seat

- FLIP SEAT RIGHT SIDE UP AND MAKE SURE TO PLACE ON A SOFT SURFACE. ALIGN FRAME TO MATCH BOLT HOLES.
- PLACE WASHER (B) ONTO BOLT (A) AND THREAD BOLT INTO THE HOLE UNTIL FAIRLY TIGHT.
- REPEAT USING REMAINING 3 BOLTS AND 3 WASHERS.
- TIGHTEN WITH PROVIDED WRENCH.

NOTE: BE CAREFUL NOT TO OVER-TIGHTEN THE BOLTS. DOING SO MAY CAUSE THE SEAT TO CRACK.



- MAKE SURE SEAT IS SECURELY ATTACHED.



1.2 Inserting the Brackets

- INSERT RIGHT BRACKET INTO RIGHT SIDE OF THE REAR HORIZONTAL AXIS.
- SCREW BRACKET IN PLACE USING BOLT (D).
- INSERT LEFT BRACKET INTO LEFT SIDE OF THE REAR HORIZONTAL AXIS.
- SCREW BRACKET IN PLACE USING BOLT.

NOTE: BE CAREFUL NOT TO OVER-TIGHTEN THE BOLTS. DOING SO MAY CAUSE THE BRACKETS TO CRACK.






- MAKE SURE BRACKETS ARE SECURELY ATTACHED.

1.3 Attaching the Nose Cap

- SNAP NOSE CAP ONTO FRONT PLATE OF REMIX.
- SCREW (C1) NOSE CAP INTO PLACE VIA THE UNDERSIDE OF THE FRAME.

NOTE: DO NOT OVER-TIGHTEN THE NOSE CAP. DOING SO MAY CAUSE THE NOSE CAP TO CRACK.

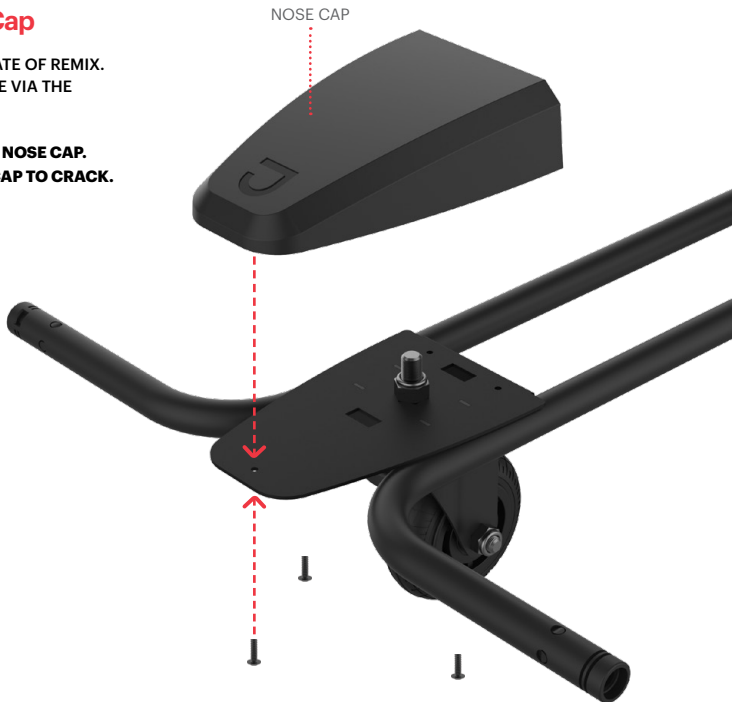


• MAKE SURE IT IS SECURELY ATTACHED.




1.4 Inserting the Footrests

- INSERT FOOTREST INTO EACH SIDE OF THE FRONT TUBE ON THE REMIX FRAME.
- ALIGN FOOTREST WITH SCREW HOLES ON THE FRONT TUBE.
- USING THE SMALL SCREW (C2) SUPPLIED, SCREW PEDALS IN PLACE.

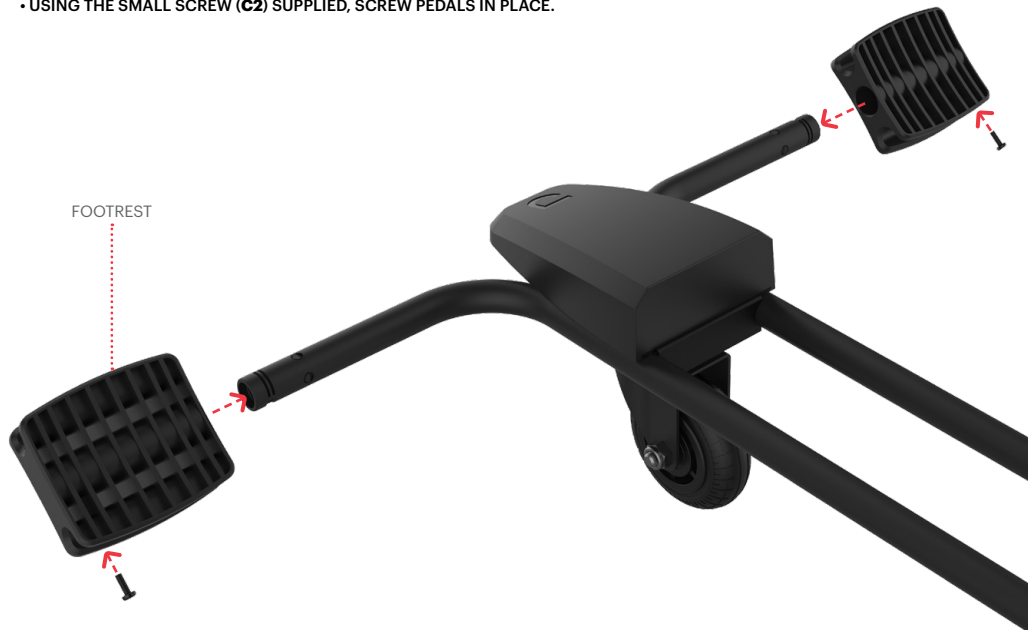

- MAKE SURE FOOTREST ARE SECURELY IN PLACE.

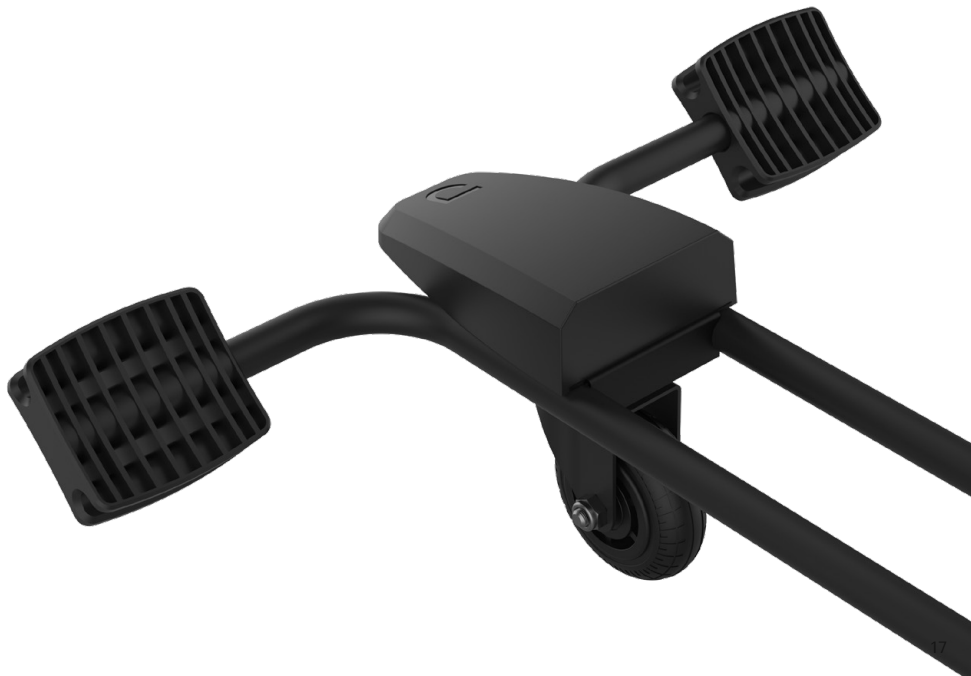

1.5 Adjusting the Footrest


OPEN CLAMP, THEN LOOSEN KNOBS.

NOTE: OVEREXTENDING THE FOOTREST CAN CAUSE THE FRONT WHEEL TO SHAKE.

SLIDE THE FOOTREST TUBES
TO DESIRED LENGTH

CLAMP

KNOB

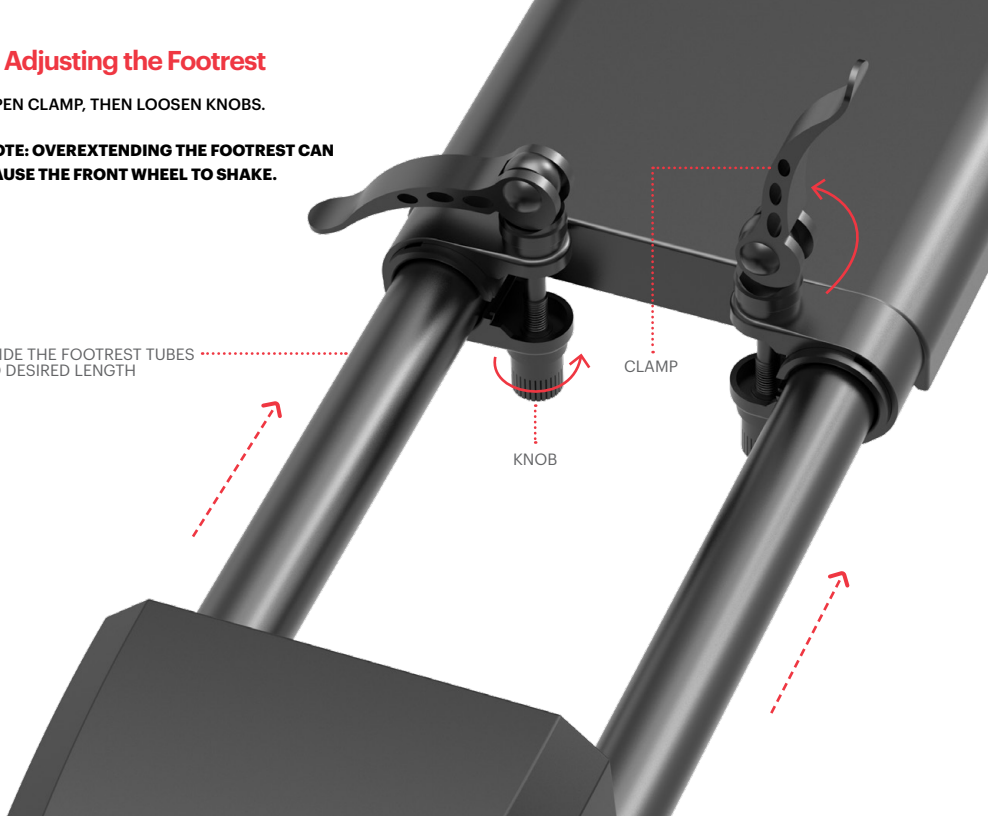


- SECURE FOOTREST IN PLACE BY CLOSING CLAMPS.
- FINALLY, TIGHTEN KNOBS.





1.6 Attaching the Hoverboard

- MAKE SURE SIDE OF HOVERBOARD WITH CHARGING PORT IS FACING OUT.
- HOVERBOARD MUST BE TURNED OFF BEFORE PLACING REMIX ON TOP OF IT.

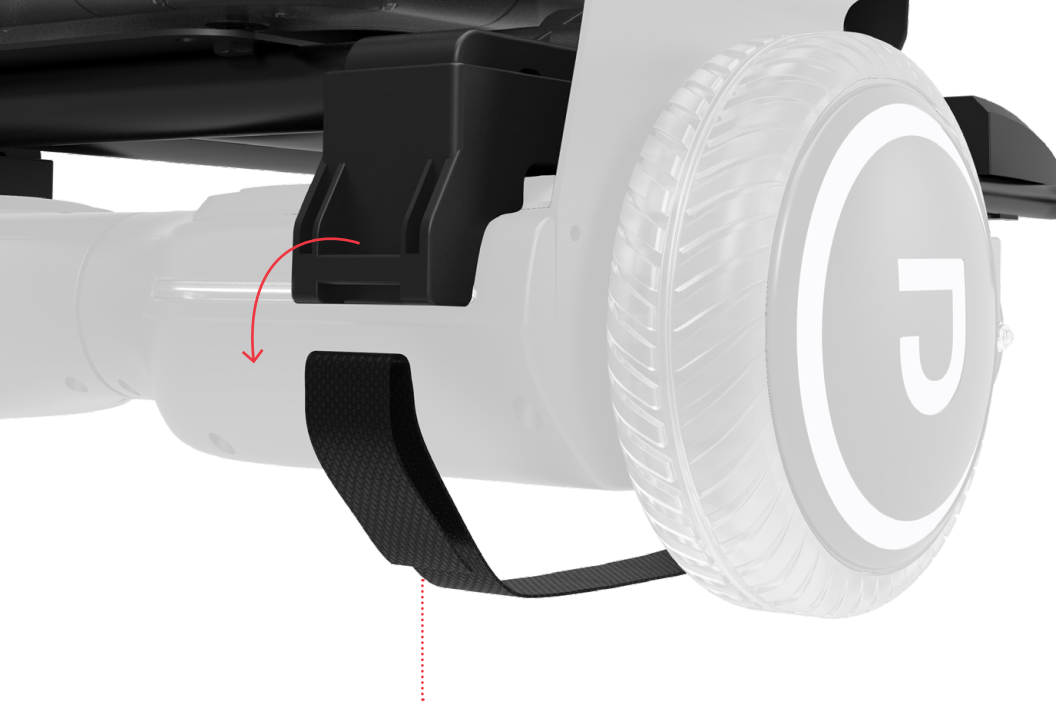

PULL THE VELCRO STRAPS TIGHT AND FOLD.




• **MAKE SURE HOVERBOARD IS SECURELY IN PLACE.**

1.7 Charging the Hoverboard


- ONLY USE THE INCLUDED CHARGER
- PLUG THE CHARGER INTO THE WALL BEFORE THE CHARGING PORT
- DON'T TURN ON THE REMIX HOVERBOARD WHILE IT'S CHARGING
- CHARGE THE BATTERY UNTIL IT IS FULLY CHARGED - UP TO 4 HOURS

● - CHARGING

● - CHARGE COMPLETE

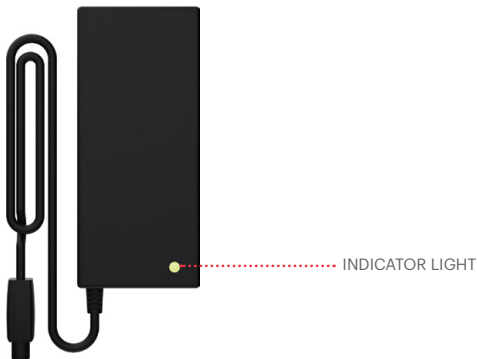

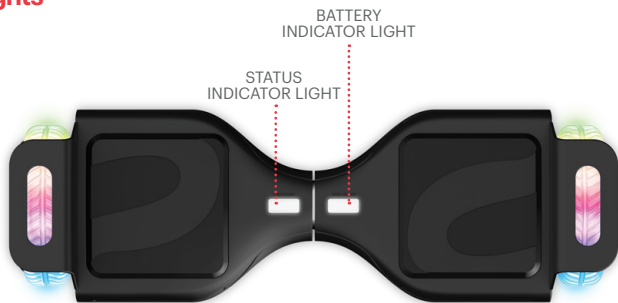

1.8 Indicator Lights



BATTERY INDICATOR LIGHT			
PERCENTAGE	< 20%	20-49%	50% +

***MUST CHARGE FOR 4 HOURS TO REACH 100% BATTERY LEVEL.**

WARNING: THE HOVERBOARD WILL AUTOMATICALLY SLOW DOWN AND TILT UP ONCE THE BATTERY POWER GOES BELOW 10% AS A SAFETY PRECAUTION.

STATUS INDICATOR LIGHT		
STATUS	LIGHTS UP BLUE WHEN YOU STEP ON THE HOVERBOARD. READY TO RIDE.	RECALIBRATE YOUR HOVERBOARD.

1.9 Connecting to Bluetooth®

THE HOVERBOARD COMES EQUIPPED WITH A BLUETOOTH® SPEAKER.


TO CONNECT TO YOUR BLUETOOTH® SPEAKER:

- TURN ON THE HOVERBOARD AND IT WILL BECOME DISCOVERABLE TO YOUR HANDHELD DEVICE.
- ACTIVATE YOUR BLUETOOTH® IN YOUR HANDHELD DEVICE'S SETTINGS.
- FIND THE HOVERBOARD IN YOUR HANDHELD DEVICE'S LIST AND SELECT IT.
- NOW YOU CAN PLAY YOUR MUSIC THROUGH THE HOVERBOARD.

THE BLUETOOTH® WORD MARK AND LOGOS ARE REGISTERED TRADEMARKS OWNED BY THE BLUETOOTH SIG, INC. AND ANY USE OF SUCH MARKS BY JETSON ELECTRIC BIKE LLC. IS UNDER LICENSE. OTHER TRADEMARKS AND TRADE NAMES ARE THOSE OF THEIR RESPECTIVE OWNERS.


1.10 Recalibrating the Hoverboard

HOLD POWER BUTTON FOR 5 SECONDS

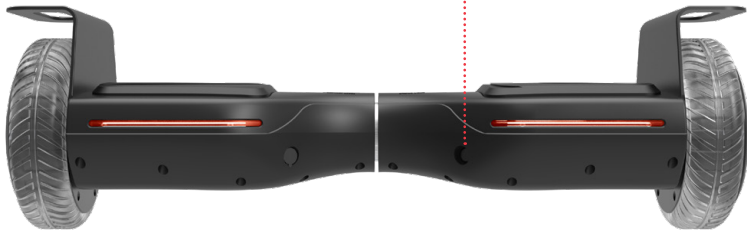

- PLACE POWERED OFF HOVERBOARD ON A FLAT SURFACE. HOLD THE POWER BUTTON FOR 5 SECONDS UNTIL TUNE IS COMPLETED.
- LET GO OF POWER BUTTON AND THEN PRESS IT AGAIN TO TURN HOVERBOARD OFF.
- TURN HOVERBOARD BACK ON; RECALIBRATION IS NOW COMPLETE.

* KEEP THE HOVERBOARD LEVELED, STILL, AND WITHOUT ANY WEIGHT ON IT DURING THE CALIBRATION PROCESS.

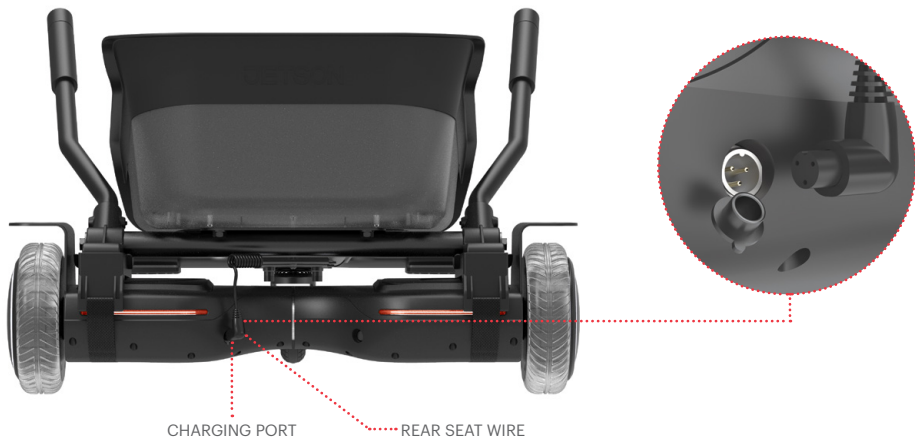

1.11 Turning the Lights On

- LEVEL THE SEAT AND HOVERBOARD BEFORE CONNECTING THE SEAT WIRE TO THE HOVERBOARD'S CHARGING PORT.
- MAKE SURE SIDE OF HOVERBOARD WITH CHARGING PORT IS FACING OUT.
- CONNECT THE REAR SEAT WIRE TO THE HOVERBOARD'S CHARGING PORT.
- POWER ON THE HOVERBOARD - THE LIGHTS WILL TURN ON ONCE THE HOVERBOARD AND THE SEAT WIRE ARE PLUGGED IN.
- THE DEFAULT LIGHTING MODE WILL DISPLAY WHEN THE REMIX AND HOVERBOARD ARE BOTH CONNECTED AND POWERED ON.
- SHORT PRESS THE POWER BUTTON TO SWITCH BETWEEN DIFFERENT LIGHTING EFFECTS.

PLEASE NOTE: THE CONNECTOR SHOULD ALWAYS BE CONNECTED WHILE RIDING.

2. Make Moves

2.1 Getting on the Remix

- PLACE THE REMIX ON A FLAT SURFACE WITH THE HOVERBOARD TURNED OFF.
- CAREFULLY SIT IN REMIX PLACING YOUR FEET ON THE FOOTREST.
- MAKE SURE THE HOVERBOARD IS LEVELED.
- TURN ON HOVERBOARD.

NOTE: DO NOT TURN ON THE HOVERBOARD BEFORE YOU SIT DOWN. IF THE HOVERBOARD IS NOT LEVELED WHEN YOU TURN IT ON, THE REMIX WILL GO FORWARD OR BACKWARD IMMEDIATELY.



2.2 Helmet Safety



**PROPER POSITIONING:
THE FOREHEAD IS COVERED
BY THE HELMET.**




**IMPROPER POSITIONING:
THE FOREHEAD IS EXPOSED.
COULD CAUSE SERIOUS INJURY.**


* WEAR A HELMET, APPROPRIATE CLOTHING, SHOES, AND SAFETY GEAR. AVOID CLOTHING THAT CAN GET CAUGHT INTO OR UNDER THE WHEELS. CLOSED-TOE, FLAT SHOES ARE RECOMMENDED. WEAR AN ASTM F1492 APPROVED HELMET AND PROTECTIVE GEAR TO PREVENT INJURY IN THE EVENT OF AN ACCIDENT.

2.3 Riding the Remix.


NOTE: TIGHTEN ALL SCREWS AND LOCKING NUTS BEFORE EACH RIDE.

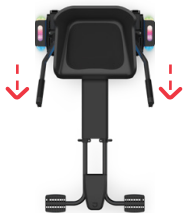

TO GO FORWARD - PUSH DOWN BOTH HANDLES

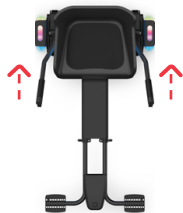


TO BRAKE / REVERSE - PULL UP BOTH HANDLES

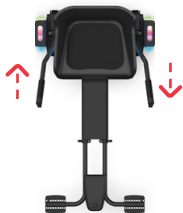

**TO TURN RIGHT - PUSH DOWN LEFT HANDLE,
PULL UP RIGHT HANDLE**



**TO TURN LEFT - PULL UP LEFT HANDLE,
PUSH DOWN RIGHT HANDLE**

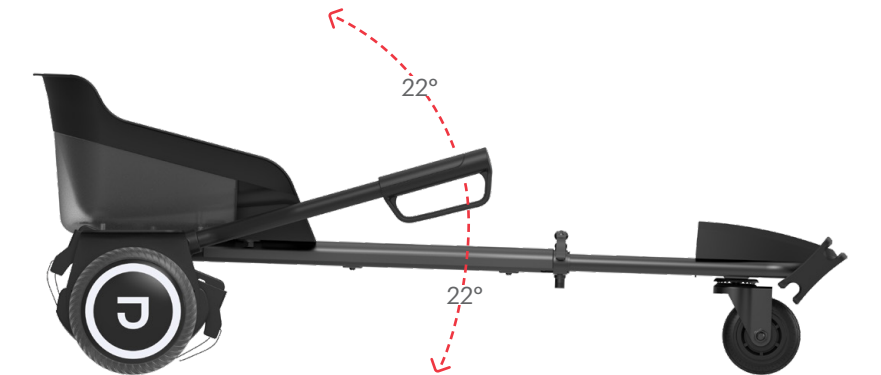

NOTE: DON'T PULL UP OR DOWN ON THE HANDLES TOO HARD AS IT MAY CAUSE DAMAGE TO LOCK. THE HANDLES WILL LOCK IN PLACE WHEN PULLED 22° UP AND 22° DOWN BASED ON NETURAL POSITION OF BRACKETS.

2.4 Riding the Hoverboard

NEUTRAL



TURN LEFT



TURN RIGHT



Care & Maintenance

RIDING RANGE

THE MAXIMUM RANGE IS 12 MILES. HOWEVER, MANY FACTORS WILL AFFECT HOW FAR YOU CAN GO PER CHARGE:

- DRIVING SURFACE: A SMOOTH, FLAT SURFACE WILL INCREASE DRIVING DISTANCE.
- WEIGHT: MORE WEIGHT MEANS LESS DISTANCE.
- TEMPERATURE: RIDE, STORE, AND CHARGE THE REMIX ABOVE 50°F.
- MAINTENANCE: TIMELY BATTERY CHARGING OF UP TO 4 HOURS PER CHARGE WILL INCREASE DRIVING DISTANCE.
- DRIVING STYLE: FREQUENT STARTING AND STOPPING WILL REDUCE DRIVING DISTANCE.

CLEANING THE REMIX

- TO CLEAN THE REMIX, CAREFULLY WIPE WITH A DAMP CLOTH, THEN DRY WITH A DRY CLOTH.
- DO NOT USE WATER TO CLEAN THE REMIX, AS THE ELECTRICAL AND ELECTRONIC SYSTEMS MAY GET WET, RESULTING IN PERSONAL INJURY OR MALFUNCTION OF THE REMIX.
- IF THE ELECTRIC PARTS OR BATTERY GET WET, DO NOT POWER ON THE REMIX. PLEASE CONTACT JETSON CUSTOMER CARE FOR ASSISTANCE.

BATTERY

- KEEP AWAY FROM FIRE AND EXCESSIVE HEAT.
- AVOID INTENSE PHYSICAL SHOCK, SEVERE VIBRATION, OR IMPACT.
- PROTECT FROM WATER OR MOISTURE.
- DO NOT DISASSEMBLE THE REMIX OR ITS BATTERY.
- CONTACT JETSON CUSTOMER CARE IF THERE ARE ANY ISSUES WITH THE BATTERY.

STORAGE

- FULLY CHARGE THE BATTERY BEFORE STORING. THE BATTERY SHOULD BE FULLY CHARGED ONCE A MONTH AFTER THIS.
- STORE THE REMIX INDOORS IN A DRY PLACE.
- COVER THE REMIX TO PROTECT AGAINST DUST.

ONE-YEAR GENERAL LIMITED WARRANTY

All new Jetson products, excluding parts and accessories, are warranted against defects in materials and workmanship for a period of one year from the date of original retail purchase when used in accordance with Jetson's user manuals (refer to ridejetson.com/support).

Under this warranty, you will be able to direct your claims to Jetson even in situations where you purchased the Jetson Product from one of our authorized retailers.

To read the full terms of our warranty, visit ridejetson.com/warranty.

Stay connected.

Be sure to follow **@ridejetson**
on social media to learn about fantastic offers,
giveaways, and all the latest Jetson news.



Loving your ride?

Then be sure to leave a review at ridejetson.com/reviews.
We can't wait to hear from you!

JETSON

#MakeMoves

Questions? Let us know.

support.ridejetson.com

To exercise your product's 1-year limited warranty
or inquire about warranty coverage, contact us directly.

US/CANADA 1-888-976-9904

UK +44 (0)33 0838 2551

Mex: +001 888 976 9904

Hours of Operation:

7 Days a Week, 10am-6pm

Imported by Jetson Electric Bikes LLC.

P.O. Box 320149, 775 4th Ave #2, Brooklyn, NY 11232

www.ridejetson.com



Made in China

Date Code: 03/2022