JETSON

Rhythm

Folding Electric Scooter.

A guide for your ride.

IMPORTANT: READ CAREFULLY AND RETAIN FOR FUTURE REFERENCE.

MODEL: JRHYTM-BLK



Jetson's top two riding rules:

Be safe. Have fun!

Contents

Safety Warnings	4
Warranty Coverage	7
Product Overview	8
Specs & Features	10
Online Resources	11
1. Getting Started	
Starting Notes	12
Unfolding & Folding the Rhythm	13
Attaching the Handlebar	18
Charging the Rhythm	21
Powering On and Off	23
2. Features & Functions	
Overview of the LCD Screen	24
Using the Headlight	25
Switching Speed Modes	26
Connecting with the Bluetooth Speaker	26
Checking the Battery Charge Level	27

Using the Bell	28
Using the Phone Holder	29
Using the Kickstand	30
3. Making Moves	
Riding Position	31
Starting and Accelerating	32
Braking	33
Turning	33
Using Cruise Control	34
Maximizing Speed & Riding Range	35
Helmet Safety	36
Care & Maintenance	37

Safety Warnings

- Before use, please read the user manual and safety warnings carefully, and make sure you understand and accept all the safety instructions. The user will be responsible for any loss or damage caused by improper use.
- Please check the drive system and frame before riding to ensure safety.
- Before each cycle of operation, the operator shall perform the preoperation checks specified by the manufacturer: That all guards and pads originally supplied by the manufacturer are in proper place and in serviceable condition; That the braking system is functioning properly; That any and all guards, chain guards, or other covers or guards supplied by the manufacturer are in place and in serviceable condition; That tires are in good condition, inflated properly, and have sufficient tread remaining; The area that the product is to be operated should be safe and suitable for safe operation.
- Components shall be maintained and repaired in accordance with the manufacturer's specifications and using only the manufacturer's authorized replacement parts with installation performed by dealers or other skilled persons.
- Don't allow hands, feet, hair, body parts, clothing, or similar articles to come in contact with moving parts, wheels, or drive train, while the scooter is in use.
- This product should not be used by children or persons with reduced physical, sensory or mental capabilities, or lack of
 experience and knowledge, unless they have been given supervision or instruction (IEC 60335-1/A2:2006).
- Unsupervised children should not play with the product (IEC 60335-1/A2:2006).
- Adult supervision is required.
- The rider should not exceed 220 lb.
- Never use near motor vehicle.
- Units shall not be operated to perform racing, stunt riding, or other maneuvers, which may cause loss of control, or may cause uncontrolled operator/passenger actions or reactions.
- · Avoid sharp bumps, drainage grates, and sudden surface changes. Scooter may suddenly stop.
- · Avoid streets and surfaces with water, sand, gravel, dirt, leaves, and other debris. Wet weather impairs traction, braking, and visibility.
- · Avoid riding around flammable gas, steam, liquid, or dust that could cause fire.
- Operators shall adhere to all of the manufacturer's recommendations and instructions, as well as comply with all laws and ordinances: Units without headlights shall be operated only with adequate daylight conditions of visibility, and; Owners shall be encouraged to highlight (for conspicuity) using lighting, reflectors, and for low-riding units, signal flags on flexible poles.
- · Do not ride at night.
- · Only ride the product with adequate daylight conditions for visibility.
- Persons with the following conditions shall be cautioned not to operate: Those with heart conditions; Pregnant women;
 Persons with head, back, or neck ailments, or prior surgeries to those areas of the body; and persons with any mental or physical conditions that may make them susceptible to injury or impair their physical dexterity or mental capabilities to recognize, understand, and perform all of the safety instructions and to be able to assume the hazards inherent in unit use.
- Do not ride after drinking or taking prescription medication.
- · Do not carry items when riding.

- Never operate the product while barefoot.
- · Always wear shoes and keep shoelaces tied.
- Make sure your feet are always placed securely on the deck/pedal.
- Operators shall always use appropriate protective equipment, including but not limited to: a helmet with appropriate certification, protective clothing, knee pads, and elbow pads.
- · Always give way to pedestrians.
- Be alert to things in front and far away from you.
- Do not allow distractions when riding, such as answering the phone or engaging in any other activities.
- The product cannot be ridden by more than one person.
- When riding the product along with other riders, always keep a safe distance to avoid a collision.
- · When turning, be sure to maintain your balance.
- Riding with improperly adjusted brakes is dangerous and can result in serious injury or death.
- Applying brakes too hard or too suddenly can lock up a wheel, which could cause you to lose control and fall. Sudden or
 excessive application of the brake may result in injury or death.
- If the brake loosens, please adjust with a hexagonal wrench, or please contact the Jetson Care Team.
- Replace worn or broken parts immediately.
- The area that the product is to be operated should be safe and suitable for safe operation.
- Check whether all safety labels are in place and understood before riding.
- The owner shall allow the use and operation of the unit after a demonstration that such operators can understand and operate all components of the unit before use.
- Use caution when changing the batteries. Do not change batteries near flammable materials. Remove batteries from the scooter when not in use for long periods of time.
- Prolonged exposure to UV rays, rain, and the elements may damage the enclosure materials. Store indoors when not in use.

MODIFICATIONS

Do not attempt to disassemble, modify, repair, or replace the product or any components of the unit without instruction from the Jetson Care Team. This will void any warranty, and can lead to malfunctions which may cause injury.

ADDITIONAL OPERATION PRECAUTIONS

- Do not lift the product off the ground while it is on and the wheels are in motion. This can result in freely spinning wheels, which may cause injury to yourself or others nearby.
- Do not jump on or off the product, and do not jump while using it.
- Always keep your feet firmly planted on the deck while in operation.
- The Consumer Product Safety Commission advises that the riding of small wheel diameter bicycles and scooters at excessive speeds can lead to instability and is not recommended.
- Always wear a properly fitted helmet when you ride your bicycle. Do not ride at night. Avoid riding in wet conditions.

MAINTENANCE PRECAUTIONS

For all maintenance repairs and needs beyond the capability of the consumer, which may include but not be limited to: such as proper maintenance of brakes, control cables, bearing adjustments, wheel adjustments, lubrication, reflectors, tires and handlebar and seat adjustments, please contact the Jetson Care Team for assistance at:

ridejetson.com/support US & Canada 1-(888) 976-9904

DISPOSAL OF USED BATTERY

Battery may contain hazardous substances which could endanger the environment and human health. This symbol marked on the battery and/or packaging indicates that used battery shall not be treated as municipal waste. Batteries should be disposed of at an appropriate collection point for recycling. By ensuring the used batteries are disposed of correctly, you will help prevent potential negative consequences for the environment and human health. The recycling of materials will help to conserve natural resources. For more information about recycling of used batteries, please contact your local municipality waste disposal service.

NOTICE OF COMPLIANCE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- · Increase the separation between the equipment and receiver.
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.

California Proposition 65 WARNING:

This product can expose you to chemicals including Cadmium, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to: www.P65Warnings.ca.gov.

Warranty Coverage

ONE-YEAR GENERAL LIMITED WARRANTY

Your new Jetson product is warranted against defects in materials and workmanship for a period of one year from the date of original retail purchase when used in accordance with Jetson's user manuals (refer to <u>ridejetson.com/support</u>). Under this warranty, you will be able to direct your claims to Jetson even in situations where you purchased the Jetson Product from one of our authorized retailers.

To read the full terms of our warranty, visit ridejetson.com/warranty.

Product Overview

- 1. HANDLEBAR
- 2. ACCELERATION THROTTLE
- 3. E-BRAKE
- 4. PHONE HOLDER
- 5. BELL
- 6. LCD SCREEN
- 7. FOLDING HOOK
- 8. HEADLIGHT
- 9. BLUETOOTH SPEAKER
- 10. FRONT WHEEL (WITH REFLECTORS)

- 11. FOLDING LATCH
- 12. DECK
- 13. REAR WHEEL (WITH REFLECTORS)
- 14. REAR BRAKE LIGHT
- 15. FOLDING LOOP
- 16. CHARGING PORT
- 17. KICKSTAND
- 18. CHARGER
- 19. CHARGING CABLE

HARDWARE & TOOLS INCLUDED FOR ASSEMBLY:





3MM ALLEN KEY

^{*} FULLY CHARGE THE BATTERY PRIOR TO FIRST USE.



NOTE: IMAGES MAY NOT REFLECT EXACT APPEARANCE OF ACTUAL PRODUCT.

Specs & Features

- PRODUCT UNFOLDED: 44.0"(L) × 18.5"(W) × 48.0"(H)
- PRODUCT FOLDED: 44.0"(L) × 18.5"(W) × 17.0"(H)
- DECK SIZE: 17.5"(L) × 5.0"(W)
- · WEIGHT LIMIT: 220 LBS
- · PRODUCT WEIGHT: 28 LBS
- RECOMMENDED AGE: 12+
- TIRE SIZE: 6.5"
- MAX SPFFD: 15 MPH
- · MAX RANGE: 12 MILES
- BATTERY: 36V. 6AH LITHIUM-ION
- MOTOR: 250W
- CHARGER: 42V, 1.5A
- · CHARGING TIME: UP TO 6 HOURS
- MAX CLIMBING ANGLE: 10°
- UL CERTIFICATION: 2272

Online Resources



Scan for our most updated Rhythm onboarding materials and support resources.

1. Getting Started

1.1 Starting Notes

- REMOVE ALL PACKAGING BEFORE BEGINNING ASSEMBLY.
- THE DIRECTIONS GIVEN IN THIS MANUAL—RIGHT, LEFT, FRONT/FORWARD, AND REAR/BACK—ARE ORIENTED AS THE
 RIDER WOULD SEE THEM WHEN STANDING ON THE SCOOTER. THE "RIGHT SIDE" OF THE SCOOTER, FOR EXAMPLE, IS
 THE SIDE WHERE THE RIDER'S RIGHT HAND WILL BE.

WARNING:

FAILURE TO COMPLY WITH THE FOLLOWING INSTRUCTIONS MAY RESULT IN INJURY TO THE CHILD OR OTHERS.

- KEEP SMALL PARTS AWAY FROM CHILDREN DURING ASSEMBLY.
- ACCESSORY MUST BE ASSEMBLED AND REMOVED BY AN ADULT.
- FREQUENTLY INSPECT THE PRODUCT FOR DAMAGE.

^{*} ADULTS MUST ASSIST CHILDREN IN THE ASSEMBLY AND INITIAL ADJUSTMENT PROCEDURES OF THE PRODUCT.

12 Unfolding & Folding the Rhythm

WHEN TO UNFOLD: FOR INITIAL HANDLEBAR ATTACHMENT AND RIDING WHEN TO FOLD: FOR STORAGE, CARRYING, AND TRANSPORT

TO UNFOLD:

1. PUSH THE FOLDING LOOP TOWARDS THE REAR OF THE SCOOTER TO RELEASE THE FOLDING HOOK.



2. GENTLY RAISE THE STEM UPWARDS UNTIL YOU HEAR A "CLICK," INDICATING THAT IT IS FULLY UPRIGHT. PRIOR TO ASSEMBLY, TAKE CARE TO RAISE THE SEMI-ATTACHED HANDLEBAR WITH THE STEM.



3. PRESS THE LOCKING LATCH IN TOWARDS THE FRAME TO LOCK THE STEM UPRIGHT.





TO FOLD:

PUSH THE TAB ON THE LOCKING LATCH UPWARDS AND PULL THE LATCH OPEN AND AWAY FROM THE STEM.

- 2. GENTLY LOWER THE STEM DOWN TOWARDS THE REAR WHEEL.
- 3. PUSH THE FOLDING LOOP FORWARD AND LOOP IT ONTO THE FOLDING HOOK, LOCKING THE SCOOTER INTO THE FOLDED POSITION.




1.3 Attaching the Handlebar

DEPENDING ON THE DATE OF PRODUCTION, THE WIRES ON YOUR SCOOTER WILL EITHER BE GROUPED INTO 1 SET (VERSION A) OR 2 SETS (VERSION B).

- 1. SLIDE THE HANDLEBAR BASE INTO THE STEM SUCH THAT THE FOLLOWING CONDITIONS ARE MET:
 - THE SIDE OF THE HANDLEBAR WITH THE LCD SCREEN IS POSITIONED ON THE SIDE OF THE SCOOTER ACCESSIBLE BY THE RIGHT HAND OF THE RIDER.
 - THE WIRES ARE CAREFULLY TUCKED INTO THE STEM TUBE AND NOT PINCHED BY THE HANDLEBAR WHILE IT IS BEING INSERTED.
 - THE 4 HOLES AT THE BASE OF THE HANDLEBAR ALIGN WITH THE 4 HOLES IN THE SIDES OF THE STEM AFTER THE HANDLEBAR BASE IS INSERTED INTO THE STEM.



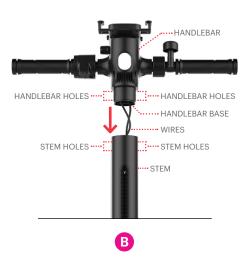

- 2. INSERT ONE SCREW THROUGH EACH SET OF ALIGNED HOLES BY TWISTING IT IN CLOCKWISE. USE THE ALLEN KEY TO TIGHTEN EACH SCREW.
- 3. CHECK THAT THE HANDLEBAR IS SECURE.





- 1. CONNECT THE CHARGING CABLE WITH THE CHARGER.
- 2. PULL THE RUBBER COVER ON THE CHARGING PORT OPEN.
- 3. PLUG THE CHARGING CABLE INTO THE WALL OUTLET AND THEN PLUG THE CHARGER INTO THE CHARGING PORT ON THE SCOOTER.
- 4. WHILE CHARGING, THE INDICATOR LIGHT ON THE CHARGER WILL ILLUMINATE IN RED; WHEN CHARGING IS COMPLETE, THE ILLUMINATION WILL TURN GREEN.
- 5. WHEN THE BATTERY IS FULLY CHARGED, UNPLUG THE CHARGER FROM THE CHARGING PORT.
- 6. CLOSE THE CHARGING PORT COVER.

IMPORTANT CHARGING NOTES:

- ONLY USE THE CHARGER INCLUDED WITH YOUR SCOOTER.
- NEVER POWER ON THE SCOOTER WHILE IT IS CHARGING.
- CHARGE YOUR SCOOTER INDOORS AND IN A DRY ENVIRONMENT WITH AN AIR TEMPERATURE OF AT LEAST 50°F.
- · DO NOT LEAVE YOUR SCOOTER CHARGING OVERNIGHT OR FOR EXTENDED PERIODS OF TIME.
- · CHARGE THE BATTERY TO 100%—ABOUT 6 HOURS.
- DO NOT ATTEMPT TO REMOVE OR DISASSEMBLE THE BATTERY.

CHARGING INDICATOR LIGHT ON THE CHARGER:



CHARGING COMPLETE



1.5 Powering On and Off

LONG-PRESS THE POWER BUTTON TO TURN THE RHYTHM ON AND OFF.



2. Features and Functions

21 Overview of the LCD Screen



IMPORTANT: IF AN ERROR CODE (EO-E8) APPEARS ON YOUR RHYTHM'S LCD SCREEN, CONTACT THE JETSON CARE TEAM FOR ASSISTANCE.

2.2 Using the Headlight

QUICK-PRESS THE LIGHT BUTTON TO TURN THE HEADLIGHT ON OR OFF.



2.3 Switching Speed Modes

THERE ARE 3 DIFFERENT SPEED MODES: E, N, AND S. WITHIN EACH SPEED MODE, THE RHYTHM CAN ONLY TRAVEL UP TO A DESIGNATED SPEED.

- E (BEGINNER/SLOW): MAXIMUM SPEED OF 4 MPH
- N (INTERMEDIATE): MAXIMUM SPEED OF 9 MPH
- · S (ADVANCED/FAST): MAXIMUM SPEED OF 15 MPH

TO CHANGE TO ANOTHER SPEED MODE, QUICK-PRESS THE POWER BUTTON UNTIL YOU SEE THAT SPEED MODE DISPLAYED ON THE LCD SCREEN.

NOTE: TO SWITCH THE DISPLAYED PACE MEASUREMENT FROM MPH TO KM/H, QUICK-PRESS THE POWER BUTTON TWO TIMES IN A ROW.

2.4 Connecting with the Bluetooth® Speaker

- 1. USE THE POWER BUTTON TO TURN ON THE RHYTHM.
- 2. IN THE SETTINGS SECTION OF YOUR PHONE OR HANDHELD DEVICE, MAKE SURE THAT BLUETOOTH® IS ENABLED.
- 3. FIND THE RHYTHM IN THE LIST OF RECOGNIZED DEVICES AND SELECT IT. YOU WILL HEAR THIS ANNOUNCEMENT: "BLUETOOTH® PAIRED."
- 4. STREAM MUSIC. RIDE. ENJOY!
- 5. WHEN YOU DISABLE BLUETOOTH® OR UNPAIR THE RHYTHM WITH YOUR HANDHELD DEVICE, YOU WILL HEAR THIS ANNOUNCEMENT: "BLUETOOTH® DISCONNECTED."

NOTE: TO CHANGE THE VOLUME, USE THE VOLUME CONTROLS ON YOUR PHONE.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, inc. And any use of such marks by Jetson Electric Bike LLC. is under license. Other trademarks and trade names are those of their respective owners.

2.5 Checking the Battery Charge Level

KEEP TABS ON YOUR RHYTHM'S CHARGE LEVEL WITH THE BATTERY INDICATOR BARS ON THE LCD SCREEN.

- 4 BARS: 76 100%
- 3 BARS: 50 75%
- 2 BARS: 25 49%
- 1 BAR: 0 25%; TIME TO PLUG IN AND POWER UP!



2.6 Using the Bell

USE THE BELL TO ALERT OTHER RIDERS AND PEDESTRIANS THAT YOU ARE NEAR. RING THE BELL BY FLICKING THE TAB DOWN FORCEFULLY WITH YOUR LEFT THUMB.



2.7 Using the Phone Holder

TO INSERT YOUR PHONE IN THE PHONE HOLDER:

- 1. WIDEN THE SIDE ARMS OF THE PHONE HOLDER BY PUSHING IN THE TABS UNDERNEATH THEM.
- 2. SLIDE PHONE INTO THE HOLDER FROM THE TOP SO THAT THE BOTTOM OF THE PHONE IS GRIPPED BY THE FEET OF THE HOLDER.
- 3. PUSH THE FEET OF THE HOLDER DOWN TO CLOSE THE ARMS AROUND THE PHONE. SECURING IT INTO PLACE.
- 4. SET YOUR PHONE AT AN IDEAL VIEWING ANGLE BY TILTING THE PHONE HOLDER UP OR DOWN.


TO RELEASE YOUR PHONE FROM THE PHONE HOLDER:

1. WIDEN THE ARMS BY PUSHING THE SIDE TABS.



2.8 Using the Kickstand

- TO LOWER THE KICKSTAND: PIVOT IT DOWN FROM THE SIDE OF THE SCOOTER DECK. TILT THE SCOOTER TO REST IT ON THE KICKSTAND.
- TO RAISE THE KICKSTAND: PIVOT THE KICKSTAND UPWARDS TOWARDS THE REAR WHEEL OF THE SCOOTER DECK.

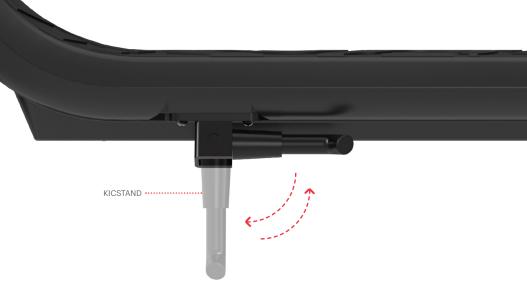


IMPORTANT: ALWAYS RAISE THE KICKSTAND BEFORE RIDING.

3. Making Moves

3.1 Riding Position

FOR THE BEST BALANCE AND STABILITY, RIDE WITH THE FRONT FOOT ON THE DECK POINTING DIRECTLY FORWARD AND THE BACK FOOT POINTING TO THE SIDE AT AN ANGLE.

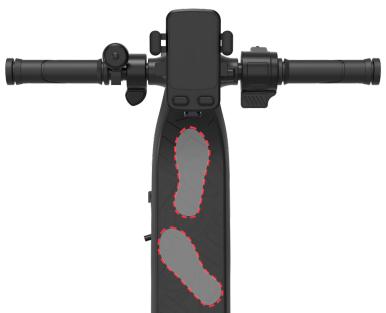

3.2 Starting and Accelerating

THE RHYTHM REQUIRES MOTION ACTIVATION TO START. PRIOR TO ENGAGING THE ACCELERATION THUMB THROTTLE, PLACE ONE FOOT ON THE GROUND AND PUSH TO PROPEL THE SCOOTER FORWARDS WITH TWO KICKS.



IMPORTANT ACCELERATION NOTES:

- TO AVOID SUDDEN BURSTS OF SPEED, PUSH GENTLY ON THE THROTTLE TO ACCELERATE.
- THE MORE YOU ENGAGE THE THROTTLE, THE FASTER THE RHYTHM WILL TRAVEL. THE MAXIMUM ACHIEVABLE SPEED
 AT ANY POINT WILL BE DETERMINED BY THE SPEED MODE IN WHICH THE SCOOTER IS SET.

з.з **Braking**

THE REAR BRAKE LIGHT WILL ILLUMINATE WHENEVER THE E-BRAKE IS ENGAGED TO ALERT OTHERS THAT YOU ARE DECELERATING.



IMPORTANT BRAKING NOTES:

- THE MORE YOU ENGAGE THE E-BRAKE, THE FASTER YOU WILL DECELERATE.
- TO AVOID ABRUPT STOPS, PRESS DOWN ON THE E-BRAKE GENTLY.

3.4 Turning

WHILE THE SCOOTER IS IN MOTION. ROTATE THE HANDLEBAR TO THE LEFT OR THE RIGHT.

IMPORTANT TURNING NOTES:

- ADJUST POSTURE AND SHIFT BODY WEIGHT WHILE MAKING TURNS TO MAINTAIN GOOD BALANCE.
- THE MORE YOU ROTATE THE HANDLEBAR, THE MORE THE FRONT WHEEL WILL SWIVEL AND THE SHARPER THE TURN WILL BE.

3.5 Using Cruise Control

WHEN CRUISE CONTROL IS ACTIVATED, YOUR SCOOTER WILL TRAVEL AT A PACE YOU CHOOSE WITHOUT ANY EFFORT FROM YOU.

TO ACTIVATE: HOLD YOUR DESIRED TRAVEL PACE STEADY AND THE THUMB THROTTLE STILL FOR 9 SECONDS. CRUISE CONTROL WILL KICK IN, AND YOU CAN RELEASE THE THROTTLE.

TO DEACTIVATE: PRESS THE THROTTLE OR ENGAGE THE BRAKE.

3.6 Maximizing Speed & Riding Range

THE HARDER THE MOTOR NEEDS TO WORK, THE FASTER YOUR BATTERY WILL DRAIN. IN IDEAL CONDITIONS, THE MAXIMUM MILEAGE THAT CAN BE ACHIEVED PER BATTERY CHARGE IS 12 MILES AND THE MAXIMUM SPEED 20 MPH.

THE FOLLOWING FACTORS WILL ALSO AFFECT SPEED AND RIDING RANGE. THEY INCLUDE:

- RIDING SURFACE: TRAVELING OVER A ROUGH SURFACE REQUIRES MOTOR POWER THAN RIDING ON A SMOOTH ONE. ROUGH SURFACES PROVIDE FRICTION THAT MAKES IT HARDER TO REACH MAXIMUM SPEED.
- CARRYING WEIGHT: MORE WEIGHT (RIDER PLUS CARGO) DECREASES
 ACHIEVABLE RANGE AND SPEED.
- RIDING STYLE: FREQUENT STARTING AND STOPPING DRAINS THE BATTERY QUICKER THAN STEADY RIDING AND WILL REDUCE THE ACHIEVABLE MILEAGE BEFORE THE BATTERY DRAINS.
- AIR TEMPERATURE: THE IDEAL TEMPERATURE FOR RIDING AND STORING THE COPPERHEAD IS BETWEEN 50 - 90°F (10 - 35°C).
- INCLINE: THE MOTOR HAS TO WORK HARDER TRAVELING UPHILL THAN ON FLAT STRETCHES OR DOWNHILL, AND WORKING AGAINST GRAVITY MAKES IT HARD TO HIT THE MAXIMUM ACHIEVABLE SPEED.
- BATTERY MAINTENANCE: TIMELY BATTERY CHARGING AFTER EVERY RIDE HELPS MAINTAIN BATTERY CAPACITY AND STRENGTH.



3.6 Helmet Safety

A HELMET SHOULD BE WORN BY THE RIDER AT ALL TIMES.



PROPER POSITIONING: THE FOREHEAD IS COVERED BY THE HELMET.



IMPROPER POSITIONING: THE FOREHEAD IS EXPOSED. A FALL COULD RESULT IN SERIOUS INJURY.

^{*} WEAR A HELMET, APPROPRIATE CLOTHING, SHOES, AND SAFETY GEAR. AVOID CLOTHING THAT CAN GET CAUGHT INTO OR UNDER THE WHEELS. CLOSED-TOE, FLAT SHOES ARE RECOMMENDED. WEAR AN ASTM F1492 APPROVED HELMET AND PROTECTIVE GEAR TO PREVENT INJURY IN THE EVENT OF AN ACCIDENT.

Care & Maintenance

TAKE GOOD CARE OF YOUR SCOOTER TO KEEP IT RIDING SMOOTHLY AND SAFELY. HERE'S HOW:

CLEANING YOUR SCOOTER

TO CLEAN THE RHYTHM, CAREFULLY WIPE WITH A DAMP CLOTH AND THEN DRY WITH A DRY CLOTH.

IMPORTANT: DO NOT APPLY WATER DIRECTLY TO THE RHYTHM, AS THE ELECTRICAL AND ELECTRONIC
SYSTEMS MAY GET WET, RESULTING IN A MALFUNCTION THAT COULD LEAD TO PERSONAL INJURY.

IF THE ELECTRIC PARTS OR BATTERY GET WET, DO NOT POWER ON THE RHYTHM. PLEASE CONTACT THE
JETSON CARE TEAM FOR ASSISTANCE.

HANDLING YOUR SCOOTER

- · KEEP AWAY FROM FIRE AND EXCESSIVE HEAT.
- AVOID INTENSE, DIRECT PHYSICAL IMPACT AND/OR SEVERE VIBRATION.
- · PROTECT FROM WATER OR MOISTURE.
- · DO NOT DISASSEMBLE THE RHYTHM OR ITS BATTERY.

STORING YOUR SCOOTER

- · FULLY CHARGE THE BATTERY BEFORE STORING.
- THE BATTERY SHOULD BE FULLY CHARGED ONCE A MONTH DURING EXTENDED PERIODS OF NON-USE.
- COVER THE RHYTHM TO PROTECT IT AGAINST DUST.
- STORE THE RHYTHM INDOORS AND IN A DRY PLACE, IN A DRY PLACE, AND AT A TEMPERATURE BETWEEN 50 AND 90° F.

Stay connected.

Be sure to follow @ridejetson on social media to learn about fantastic offers, giveaways, and all the latest Jetson news.



Loving your ride?

Then be sure to leave a review at ridejetson.com/reviews.

We can't wait to hear from you!



Questions? Let us know.

ridejetson.com/support ridejetson.com/chat

To exercise your product's 1-vear limited warranty or inquire about warranty coverage, contact us directly.

US/CANADA: 1-888-976-9904 MEX: +001 888 976 9904 UK: + 44 (0) 1355 241 222

Manufactured in Shenzhen, China Imported by Jetson Electric Bikes LLC. P.O. Box 320149, 775 4th Ave #2. Brooklyn, NY 11232









Made in China Date Code: 05/2023 Document Edition: v2.0

© 2023, JETSON. ALL RIGHTS RESERVED. Manufactured by JETSON ELECTRIC BIKES LLC. No portion of this document, including shape, copy, graphics, and design, may be reproduced or transmitted in any form or by any means.