JETSON

Rumble JetKart® + All-Terrain Hoverboard.

A guide for your ride.

IMPORTANT: READ CAREFULLY AND RETAIN FOR FUTURE REFERENCE.

MODELS: JKR2HB-BLK | JKR2HB-OS-BLK



Jetson's top two riding rules:

Be safe. Have fun!

Table of Contents

Safety Warnings	4
What's in the Box	6
Specs & Features	9
Warranty	9
Attaching the Handles	10
Attaching the Seat	12
Attaching the Brackets	13
Attaching the Footrest	15
Attaching the Hoverboard	17
Charging the Hoverboard	21
Understanding the Indicator Lights	22
Low Battery Alerts	23
Powering On and Off	23
Recalibrating the Hoverboard	24
Getting on the Rumble	25
Helmet Safety	26
Riding the Rumble	27
Riding the Hoverboard on its Own	28
Care & Maintenance	31

Safety Warnings

- Before use, please read the user manual and safety warnings carefully, and make sure you understand and accept all the safety instructions. The user will be responsible for any loss or damage caused by improper use.
- Before each cycle of operation, the operator shall perform the preoperation checks specified by the manufacturer: That all guards and
 pads originally supplied by the manufacturer are in proper place and in serviceable condition; That the braking system is functioning
 properly; That any and all axle guards, chain guards, or other covers or guards supplied by the manufacturer are in place and in
 serviceable condition; That tires are in good condition, inflated properly, and have sufficient tread remaining; The area that the product is
 to be operated should be safe and suitable for safe operation.
- Components shall be maintained and repaired in accordance with the manufacturer's specifications and using only the manufacturer's authorized replacement parts with installation performed by dealers or other skilled persons.
- Warning against recharging non-rechargeable batteries.
- Don't allow hands, feet, hair, body parts, clothing, or similar articles to come in contact with moving parts, wheels, or drive train, while the
 motor is running.
- This product should not be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction (IEC 60335-1/A2:2006).
- Unsupervised children should not play with the product (IEC 60335-1/A2:2006).
- · Adult supervision is required.
- The rider should not exceed 220 lb.
- Units shall not be operated to perform racing, stunt riding, or other maneuvers, which may cause loss of control, or may cause uncontrolled operator/passenger actions or reactions.
- Never use near motor vehicles.
- · Avoid sharp bumps, drainage grates, and sudden surface changes. Scooter may suddenly stop.
- · Avoid streets and surfaces with water, sand, gravel, dirt, leaves, and other debris. Wet weather impairs traction, braking, and visibility.
- · Avoid riding around flammable gas, steam, liquid, or dust that could cause fire.
- Operators shall adhere to all of the manufacturer's recommendations and instructions, as well as comply with all laws and ordinances:
 Units without headlights shall be operated only with adequate daylight conditions of visibility, and; Owners shall be encouraged to highlight (for conspicuity) using lighting, reflectors, and for low-riding units, signal flags on flexible poles.
- Persons with the following conditions shall be cautioned not to operate: Those with heart conditions; Pregnant women; Persons with head, back, or neck ailments, or prior surgeries to those areas of the body; and persons with any mental or physical conditions that may make them susceptible to injury or impair their physical dexterity or mental capabilities to recognize, understand, and perform all of the safety instructions and to be able to assume the hazards inherent in unit use.
- · Do not ride at night.
- · Do not ride after drinking or taking prescription medication.
- · Do not carry items when riding.
- Never operate the product barefooted.
- · Always wear shoes and keep shoelaces tied.
- Make sure your feet are always placed securely on the deck or footrests.
- Operators always shall use appropriate protective clothing, including but not limited to a helmet, with appropriate certification, and any
 other equipment recommended by the manufacturer: Always wear protective equipment such as helmet, knee pads, and elbow pads.
- · Always give way to pedestrians.
- Be alert to things in front and far away from you.
- Do not allow distractions when riding, such as answering the phone or engaging in any other activities.
- The product cannot be ridden by more than one person.

- When you ride the product along with other riders, always keep a safe distance to avoid a collision.
- When turning, be sure to maintain your balance.
- Riding with improperly adjusted brakes is dangerous and can result in serious injury or death.
- The brake may become hot while operating, do not touch the brake with your bare skin.
- Applying brakes too hard or too suddenly can lock up a wheel, which could cause you to lose control and fall. Sudden or excessive
 application of the brake may result in injury or death.
- If the brake loosens, please adjust with the hexagon wrench, or please contact the Jetson Care Team,
- · Replace worn or broken parts immediately.
- Check whether all safety labels are in place and understood before riding.
- The owner shall allow the use and operation of the unit after a demonstration that such operators can understand and operate all components of the unit before use.
- Do not ride without proper training. Do not ride at high speeds, on uneven terrain, or on slopes. Do not perform stunts or turn abruptly.
- · Recommended for indoor use.
- Prolonged exposure to UV rays, rain and the elements may damage the enclosure materials, store indoors when not in use.

California Proposition 65 **WARNING**:

This product can expose you to a chemical such as Cadmium that is known to the state of California to cause cancer or birth defects or other reproductive harm. For more information go to www.p65warnings.ca.gov/product

MODIFICATIONS

Do not attempt to disassemble, modify, repair, or replace the unit or any components of the unit without instruction from the Jetson Care Team. This will void any warranty, and can lead to malfunctions which may cause injury.

ADDITIONAL OPERATION PRECAUTIONS

Do not lift the product off the ground while it is on and the wheels are in motion. This can result in freely spinning wheels, which may cause injury to yourself or others nearby. Do not jump on or off the product, and do not jump while using it. Always keep your feet firmly planted on the foot rest while in operation. Always check the battery charge before using.

NOTICE OF COMPLIANCE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.

What's in the Box

- 1. SFAT
- 2. HANDLE (x2, RIGHT AND LEFT)
- 3. BRACKET (x2)
- 4. HOVERBOARD
- 5. JETKART FRAME (X2, FRONT AND REAR)
- 6. FOOTRESTS (x2) *PRE-ATTACHED TO FRAME
- 7. FRONT WHEEL *PRE-ATTACHED TO FRAME
- 8. VELCRO STRAP (x4, INCLUDING 2 SPARE)
- 9. CHARGER

HARDWARE & TOOLS INCLUDED:

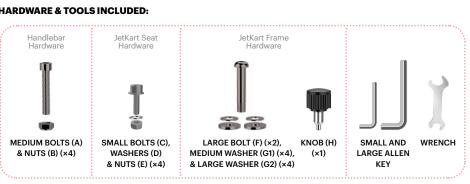

^{*} ADULTS MUST ASSIST CHILDREN IN THE ASSEMBLY AND INITIAL ADJUSTMENT PROCEDURES OF THE PRODUCT.



NOTE: IMAGES MAY NOT REFLECT EXACT APPEARANCE OF ACTUAL PRODUCT.



Specs & Features

HOVERBOARD:

- WEIGHT LIMIT: 220 LBS
- PRODUCT WEIGHT: 14 LBS
- TIRE SIZE: 6.5"
- MAX SPEED: 7 MPH
- MAX RANGE: 7 MILES
- BATTERY: 36V, 2.OAH LITHIUM-ION
- MOTOR: 300W
- CHARGER: 100-240V
- CHARGING TIME: UP TO 5 HOURS
- MAX CLIMBING ANGLE: 10°
- DIMENSIONS: 23.2"(L) × 7.3"(W) × 7.2"(H)
- RECOMMENDED AGE: 12+

JETKART®:

- WEIGHT LIMIT: 220 LBS
- PRODUCT WEIGHT: 12 LBS
- WHEEL SIZE: 4"
- DIMENSIONS: 29-36"(L) × 22"(W) × 13.7"(H)
- RECOMMENDED AGE: 12+

Warranty

ONE-YEAR GENERAL LIMITED WARRANTY

All new Jetson products, excluding parts and accessories, are warranted against defects in materials and workmanship for a period of one year from the date of original retail purchase when used in accordance with Jetson's user manuals (refer to <u>ridejetson.com/support</u>).

Under this warranty, you will be able to direct your claims to Jetson even in situations where you purchased the Jetson Product from one of our authorized retailers.

To read the full terms of our warranty, visit ridejetson.com/warranty.

1. Getting Started

1.1 Attaching the Handles

- SLIDE A HANDLE ONTO EACH BRACKET SO THAT THE HANDLE EXTENDS OVER THE END OF THE BRACKET THAT DOES NOT HAVE A NUT.
- ON THE SIDE OF THE BRACKET TOWARD WHICH THE HANDLE CURVES, INSERT A MEDIUM BOLT (A) INTO EACH OF THE TWO HOLES AND THROUGH TO THE OTHER SIDE OF THE BRACKET.
- TWIST A MEDIUM NUT (B) ONTO THE END OF EACH BOLT.





12 Attaching the Seat

- ALIGN HOLES IN SEAT TO THE FOUR MATCHING HOLES ON THE SEAT FRAME.
- INSERT A SMALL WASHER (D) ONTO EACH SMALL BOLT (C) AND THEN SLIDE A BOLT/WASHER COMBO THROUGH EACH HOLE IN THE TOP OF THE SEAT AND THE FRAME.
- TWIST A SMALL NUT (E) ONTO THE END OF EACH BOLT.
- TIGHTEN EACH BOLT USING THE SMALL ALLEN KEY.
- MAKE SURE THE SEAT IS SECURELY ATTACHED AND STABLE.

IMPORTANT: DO NOT OVER-TIGHTEN THE BOLTS.

OVER-TIGHTENING CAN CAUSE THE SEAT TO CRACK.




1.3 Attaching the Brackets


- POSITION THE TWO BRACKETS ON THE SIDE OF THE SEAT SO THAT THE HANDLES ARE POINTING TOWARDS THE FRONT AND BEND OUTWARDS AWAY FROM THE SEAT.
- PLACE ONE OF EACH LARGE WASHER (G1 THEN G2) ON THE END OF A LARGE BOLT (F) AND SLIDE THE BOLT/WASHER COMBO THROUGH THE OUTER HOLE OF THE BRACKET. PLACE ANOTHER ONE OF EACH WASHER (G2 THEN G1) ON THE END OF THE BOLT.
- INSERT THE END OF THE BOLT INTO THE TUBE IN THE FRAME UNDER THE SEAT.
- TIGHTEN THE BOLT USING THE LARGE ALLEN KEY.




- REPEAT WITH 2ND BRACKET ON THE OTHER SIDE OF THE SEAT.
- MAKE SURE THE BRACKETS ARE SECURELY ATTACHED AND THE HANDLES CAN BE MOVED UP AND DOWN EASILY.



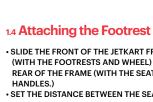

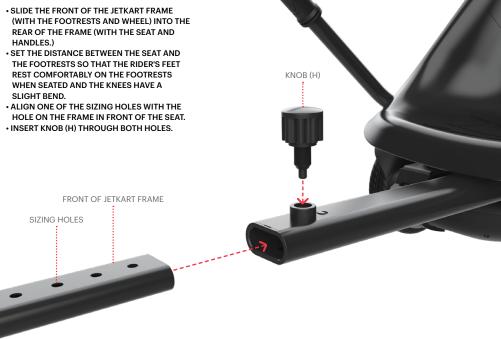



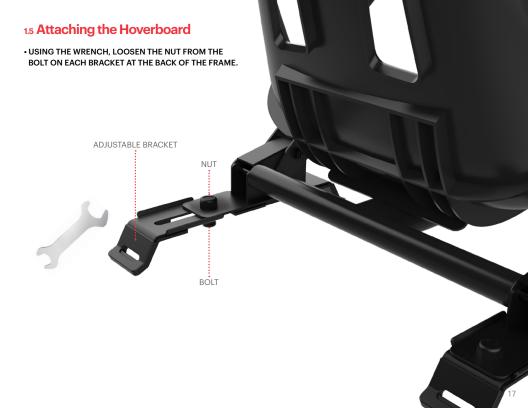

- MAKE SURE THE HOVERBOARD IS TURNED OFF DURING THE ATTACHMENT OF THE JETKART.
- POSITION THE HOVERBOARD UNDER THE SEAT SO THAT THE CHARGING PORT ON THE HOVERBOARD IS FACING OUTWARDS FROM THE REAR OF THE JETKART.

• IF NECESSARY, ADJUST THE SIZE OF BRACKETS TO THE WIDTH OF THE HOVERBOARD SO THAT THE BRACKETS HUG THE FRONT AND THE BACK OF THE HOVERBOARD.

HOVERBOARD -----

• RETIGHTEN NUTS WITH THE WRENCH TO SECURE EACH BRACKET.







1.6 Charging the Hoverboard

- ONLY USE THE INCLUDED CHARGER.
- PLUG THE CHARGER INTO THE WALL OUTLET BEFORE THE CHARGING PORT.
- DO NOT TURN ON THE HOVERBOARD WHILE IT IS CHARGING.
- CHARGE THE BATTERY UNTIL IT IS FULLY CHARGED—UP TO 5 HOURS.
- NEVER LEAVE THE HOVERBOARD CHARGING OVERNIGHT.


CHARGER INDICATOR LIGHT:

- CHARGING
- CHARGING COMPLETE





17 Understanding the Indicator Lights

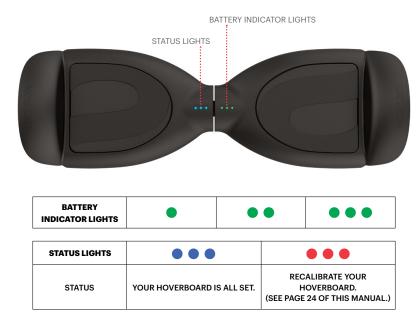

ALWAYS CHARGE BATTERY TO 100%—UP TO 5 HOURS.


1.8 Low Battery Alerts

WHEN THE HOVERBOARD BATTERY CHARGE NEARS DEPLETION, THE HOVERBOARD WILL ALERT YOU AS FOLLOWS:

- BELOW 9% CHARGE ONLY ONE BATTERY INDICATOR LIGHT WILL ILLUMINATE AND IT WILL BLINK CONTINUOUSLY AND MAKE A LONG BEEPING SOUND IN 2 SECOND INTERVALS.
- BELOW 4% CHARGE ONLY ONE BATTERY INDICATOR LIGHT WILL ILLUMINATE AND IT WILL BLINK CONTINUOUSLY AND MAKE CONTINUOUS BEEPING SOUNDS.


1.9 Powering On and Off

TO POWER THE HOVERBOARD ON OR OFF, QUICK-PRESS THE POWER BUTTON.

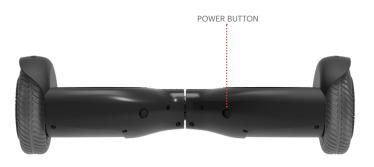

1.10 Recalibrating the Hoverboard

YOUR HOVERBOARD'S INTERNAL BALANCE MECHANISMS SOMETIMES NEED TO BE RESET, OR "RECALIBRATED."

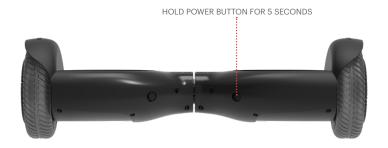

IF YOUR HOVERBOARD STARTS BEEPING, SPINNING, OR HAS RED STATUS INDICATOR LIGHTS, FOLLOW THESE RECALIBRATION STEPS.

- 1. POWER OFF THE HOVERBOARD AND PLACE IT ON A FLAT SURFACE.
 ROTATE THE FOOT PADS SO THAT THEY ARE PARALLEL TO THE GROUND AND ALIGNED WITH EACH OTHER.
- 2. PRESS IN THE POWER BUTTON FOR 5 SECONDS. YOU WILL HEAR A SHORT MUSICAL TUNE.
- 3. WHEN THE TUNE IS COMPLETE, RELEASE THE POWER BUTTON AND THEN PRESS IT AGAIN TO POWER THE HOVERBOARD OFF.
- 4. TURN HOVERBOARD BACK ON, RECALIBRATION IS NOW COMPLETE.
- * KEEP THE HOVERBOARD LEVELED AND STILL THROUGHOUT THE RECALIBRATION PROCESS.
- * WHILE RECALIBRATING, DO NOT LEAN ON OR PUT ANY WEIGHT ON THE HOVERBOARD.
- * IT CAN TAKE UP TO 3 RECALIBRATION ATTEMPTS TO ACHIEVE PROPER INTERNAL ALIGNMENT.

2. Making Moves

2.1 Getting on the Rumble

- PLACE THE RUMBLE ON A FLAT SURFACE WITH THE HOVERBOARD TURNED OFF.
- CAREFULLY SIT ON RUMBLE. PLACING YOUR FEET ON THE FOOTRESTS.
- MAKE SURE THE HOVERBOARD IS LEVELED.
- TURN ON THE HOVERBOARD.

IMPORTANT: DO NOT TURN THE HOVERBOARD ON BEFORE YOU SIT DOWN. IF THE HOVERBOARD IS NOT LEVELED WHEN YOU TURN IT ON. THE HOVERBOARD WILL MOVE AND PROPEL THE RUMBLE FORWARD OR BACKWARD.



2.2 Helmet Safety



PROPER POSITIONING: THE FOREHEAD IS COVERED BY THE HELMET.



IMPROPER POSITIONING: THE FOREHEAD IS EXPOSED. A FALL COULD RESULT IN SERIOUS INJURY.

^{*} WEAR A HELMET, APPROPRIATE CLOTHING, SHOES, AND SAFETY GEAR. AVOID CLOTHING THAT CAN GET CAUGHT INTO OR UNDER THE WHEELS. CLOSED-TOG, FLAT SHOES ARE RECOMMENDED. WEAR AN ASTM F1492 APPROVED HELMET AND PROTECTIVE GEAR TO PREVENT INJURY IN THE EVENT OF AN ACCIDENT.

2.3 Riding the Rumble.

IMPORTANT: ALWAYS CHECK THAT ALL BOLTS, THE KNOB, AND NUTS ARE TIGHTENED BEFORE EACH RIDE.



TO GO FORWARD - PUSH DOWN BOTH HANDLES.



TO TURN RIGHT - PUSH DOWN LEFT HANDLE WHILE PULLING UP RIGHT HANDLE.



TO BRAKE/REVERSE - PULL UP BOTH HANDLES.



TO TURN LEFT – PUSH DOWN RIGHT HANDLE WHILE PULLING UP LEFT HANDLE.

2.4 Riding the Hoverboard on its Own

- TO RIDE STRAIGHT FORWARD, APPLY EQUAL PRESSURE TO THE FRONT OF EACH FOOT PAD.
- TO RIDE BACKWARDS, APPLY EQUAL PRESSURE TO THE BACK OF EACH FOOT PAD.



• TO TURN LEFT, ROTATE YOUR HIPS SLIGHTLY TO THE LEFT, WHICH WILL ADJUST THE DISTRIBUTION OF PRESSURE ON THE FOOTPADS AND MOVE THE RIGHT WHEEL AROUND FASTER THAN THE LEFT, AFFECTING A LEFT TURN.



• TO TURN RIGHT, ROTATE YOUR HIPS SLIGHTLY TO THE RIGHT, WHICH WILL ADJUST THE DISTRIBUTION OF PRESSURE ON THE FOOTPADS AND MOVE THE LEFT WHEEL AROUND FASTER THAN THE RIGHT, AFFECTING A RIGHT TURN.



Care & Maintenance

MAXIMIZING RIDING RANGE

THE MAXIMUM RANGE PER BATTERY CHARGE IS 7 MILES.

HOWEVER, MANY FACTORS WILL AFFECT HOW FAR YOU CAN GO PER CHARGE:

- RIDING SURFACE: A SMOOTH, FLAT SURFACE WILL INCREASE RIDING DISTANCE.
- WEIGHT: MORE WEIGHT MEANS LESS DISTANCE.
- TEMPERATURE: RIDE, STORE, AND CHARGE THE HOVERBOARD ABOVE 50°F.
- MAINTENANCE: TIMELY BATTERY CHARGING AFTER EVERY RIDE WILL INCREASE RIDING DISTANCE.
- RIDING STYLE: FREQUENT STARTING AND STOPPING WILL REDUCE RIDING DISTANCE.
- RIDE ON A SMOOTH, FLAT SURFACE.

CLEANING

- TO CLEAN THE RUMBLE AND THE HOVERBOARD, CAREFULLY WIPE WITH A DAMP CLOTH AND THEN DRY WITH A DRY CLOTH.
- DO NOT APPLY WATER DIRECTLY TO THE HOVERBOARD, AS THE ELECTRICAL AND ELECTRONIC SYSTEMS MAY GET WET, WHICH COULD RESULT IN A MALFUNCTION OF THE HOVERBOARD THAT COULD LEAD TO PERSONAL INJURY.
- IF THE ELECTRIC PARTS OR BATTERY GET WET, DO NOT POWER ON THE HOVERBOARD. CONTACT THE JETSON CARE TEAM FOR ASSISTANCE.

CARING FOR THE HOVERBOARD BATTERY

- KEEP AWAY FROM FIRE AND EXCESSIVE HEAT.
- AVOID INTENSE PHYSICAL IMPACT AND/OR SEVERE VIBRATION.
- PROTECT FROM WATER OR MOISTURE.
- DO NOT DISASSEMBLE THE HOVERBOARD OR ITS BATTERY.
- CONTACT THE JETSON CARE TEAM. IF THERE ARE ANY ISSUES WITH THE BATTERY.

STORING THE RUMBLE AND HOVERBOARD

- FULLY CHARGE THE HOVERBOARD BATTERY BEFORE STORING. THE BATTERY SHOULD BE FULLY CHARGED ONCE A MONTH WHILE IN STORAGE.
- COVER TO PROTECT IT AGAINST DUST.
- STORE INDOORS AND IN A DRY PLACE.

Stay connected.

Be sure to follow @ridejetson on social media to learn about fantastic offers, giveaways, and all the latest Jetson news.



Loving your ride?

Then be sure to leave a review at ridejetson.com/reviews.

We can't wait to hear from you!



#MakeMoves

Questions? Let us know.

ridejetson.com/support ridejetson.com/chat

To exercise your product's 1-year limited warranty or inquire about warranty coverage, contact us directly.

US/CANADA: 1-888-976-9904 MEX: +001 888 976 9904 UK: +44 (0)33 0838 2551

Manufactured in Shenzhen, China Imported by Jetson Electric Bikes LLC. P.O. Box 320149, 775 4th Ave #2, Brooklyn, NY 11232

www.ridejetson.com







Made in China Date Code: 06/2022