




## **TABLE OF CONTENTS**

What's in the Box	1
Features & Specs	2
Charging the Battery	3
Indicator Lights	4
How to Recalibrate	5
Riding the Rogue	6
Care and Maintenance	7
Safety Warnings	8

#### **1. WHAT'S IN THE BOX**

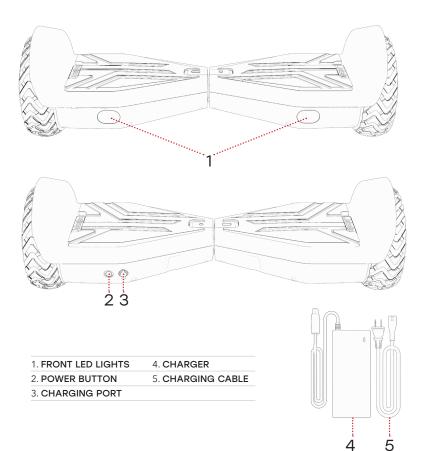

#### 2. FEATURES & SPECS


- Weight Limit: 220 lbs.
- Product Weight: 19.65 lbs.
- Recommended Age: 13+
- Tire Size: 6.5" All-Terrain Tires
- Max Speed: Up To 7 mph
- Max Range: Up To 7 Miles
- Battery: 29.4V, 4.0Ah Lithium-Ion
- Motor: 400W, Dual Hub Motor
- Charger: 100-240V
- Charge Time: Up To 2 Hours
- Climbing Angle: Up To 15°

#### **3. CHARGING THE BATTERY**


A FEW MUST-DO'S:

- Only use the included charger.
- Plug the charger into the wall before the Charging Port.
- Don't turn on the Rogue while it's charging (it needs its rest).
- Charge the battery until it is fully charged, and no longer.
- Cover the Charging Port when you are done.
- Remember to have fun!

CHARGING INDICATOR ON THE CHARGER: Red Light: Battery is charging. Green/ Blue Light: Charging is complete.

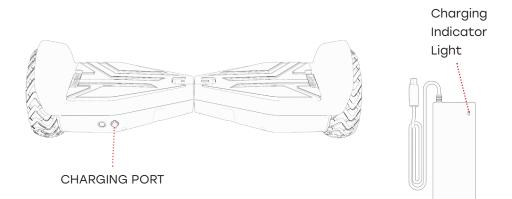

#### **4. INDICATOR LIGHTS**

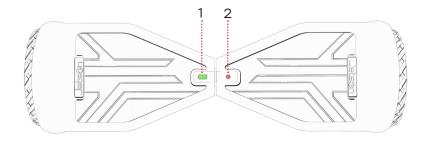


1. Battery Indicator Light:

- Green light Over 50% power.
- Yellow light 49-20% power.
- Red light Less than 20% power. Time to charge!

# Warning: If the battery power goes below 10%, the Rogue will automatically turn off as a safety precaution.

**2.** Status Indicator Light - If the Status Indicator Light turns red or if you are having issues with the Rogue, you may need to recalibrate it.

#### **5. HOW TO RECALIBRATE**

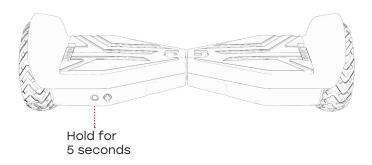

Follow these simple steps...


**1.** Place the Rogue on a flat, level surface. Now say something nice to it. Just kidding, but, go ahead if you like.


**2.** Hold the Power Button (for about 5 seconds) until you are notified of a successful recalibration.


3. Restart the Rogue by turning it off and then on.

4. You're all set! The Rogue is ready to roll.

## **6. RIDING THE ROGUE**

 

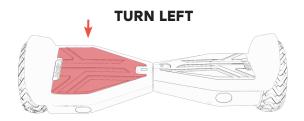

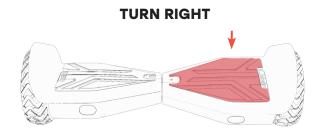

# 7. CARE AND MAINTENANCE

### **RIDING RANGE**

The maximum range is 7 miles. However, a lot of factors will affect how far you can go per charge:

- Driving Surface: A smooth, flat surface will increase driving distance.
- Weight: More weight means less distance.
- Temperature: Ride and store the Rogue above 50°F.
- Maintenance: Timely battery charging and maintenance will increase driving distance.

• Speed and Driving Style: Frequent starting and stopping will reduce driving distance.

## **CLEANING THE ROGUE**

To clean the Rogue, carefully wipe with a damp cloth, then dry with a dry cloth. Do not use water to clean the Rogue, as the electrical and electronic systems may get wet, resulting in personal injury or malfunction of the Rogue. If the electric parts or battery get wet, do not power on the Rogue. Please contact Jetson Customer Support for assistance.

#### BATTERY

- Keep the Rogue away from fire and excessive heat.
- Do not subject the Rogue to intense physical shock, severe vibration, or impact.
- Protect from water or moisture. Do not submerge the Rogue in water.
- Do not disassemble the Rogue or its battery.
- If there are any issues with the battery, please contact Jetson Customer Support.

#### STORAGE

• Fully charge the battery before storing. The battery should be fully charged once a month after this.

- To protect against dust, cover the Rogue.
- Store the Rogue indoors, in a dry place and at a suitable temperature.
- You should bring the Rogue into a warm environment for charging.

## 8. SAFETY WARNINGS

• For your safety, please read the user manual and safety warnings carefully, and make sure you understand and accept all the safety instructions. The user will be responsible for any loss or damage caused by improper use.

• Children, the elderly, pregnant women, and those with heart conditions should not use the Rogue.

- The rider should not exceed 220 lbs.
- Do not ride at night.
- Do not use near motor vehicles.
- Do not ride after drinking or taking prescription medication.

• Do not ride the Rogue if you have had any head, back, or neck ailments, or prior surgeries to those areas.

- Persons with any mental or physical conditions that may make them susceptible to injury or impair their dexterity or mental capabilities should recognize, understand, and perform all of the safety instructions and be able to assume the hazards inherent in using the Rogue.
- Do not carry items when riding.
- Always wear shoes, a helmet, and appropriate safety gear.
- Prior to each ride, inspect each part of the Rogue to ensure it has been maintained correctly and is functioning properly.
- Always give way to pedestrians.
- Always comply with local traffic laws and regulations.
- Be alert to things in front and far away from you.
- Make sure your feet are always placed securely on the deck.
- The Rogue cannot be ridden by more than one person.

• When you ride the Rogue along with other riders, always keep a safe distance to avoid a collision.

- When turning, be sure to maintain your balance.
- Do not allow distractions when riding, such as answering the phone or engaging in any other activities.
- Avoid riding in the rain or on smooth surfaces such as snow or ice.
- Do not ride on roads with obstacles (such as litter, small stones, etc.).
- Avoid riding in narrow spaces or on steep slopes.
- Avoid riding around flammable gas, steam, liquid, or dust that could cause fire.
- Never operate the products barefooted and keep shoelaces tied.

• Riding with improperly adjusted brakes is dangerous and can result in serious injury or death.

• Applying brakes too hard or too suddenly can lock up a wheel, which could cause you to lose control and fall. Sudden or excessive application of the brake may result in injury or death.

- Do not ride without proper training. Do not ride at high speeds, on uneven terrain, or on slopes. Do not perform stunts or turn abruptly.
- The area that the Rogue is to be operated should be safe and suitable for safe operation.
- Check whether all safety labels are in place and understood before riding.
- The owner shall allow the use and operation of the unit after a demonstration that such operators can understand and operate all components of the unit before use.
- Operators shall adhere to all of the manufacturer's recommendations and instructions, as well as comply with all laws and ordinances.
- Only ride the Rogue with adequate daylight conditions for visibility.
- We encourage you to highlight the Rogue, for visibility, by using lighting, reflectors, and signal flags on flexible poles.

• If device or internal components come in contact with water or moisture, DO NOT use and contact Jetson Customer support for assistance.

#### **CALIFORNIA PROPOSITION 65**

▲ **WARNING**: This product can expose you to a chemical such as Cadmium that is known to the State of California to cause cancer or birth defects or other reproductive harm. For more information go to www.p65warnings.ca.gov/product

#### MODIFICATIONS

Do not attempt to disassemble, modify, repair, or replace the Rogue or any components of the unit without instruction from Jetson Customer Support. This will void any warranty, and can lead to malfunctions which may cause injury.

#### **ADDITIONAL OPERATION CAUTIONS**

Do not lift the Rogue off the ground while it is on and the wheels are in motion. This can result in freely spinning wheels, which may cause injury to yourself or others nearby. Do not jump on or off the Rogue, and do not jump while using it. Always keep your feet firmly planted on the deck while in operation. Always check the battery charge before using.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.





1-(888) 976-9904 • help@ridejetson.com • www.ridejetson.com