

Jetson



SLINGSHOT ELECTRIC SCOOTER

-MANUAL-

TABLE OF CONTENTS

A.	Introduction	3
B.	Included In The Box	4
C.	Features And Specs	5
D.	Assembly	6
E.	Charging the Battery	7
F.	Operating the Slingshot	8
G.	Care and Maintenance	10
H.	Safety Warnings	11
I.	Warranty	13
J.	Product Registration	14

INTRODUCTION

Congratulations on your new Jetson Slingshot Electric Scooter! The Slingshot is an innovative and fun electric scooter, ready to take on everyday use. Before your first ride, check whether the wheels are damaged, or parts are loose. If there are any abnormalities, please contact Jetson Customer Support at 1-(888) 976-9904 or email us at customerservice@jetsonbike.com.

This product manual can help you understand, use, and maintain your Slingshot. In order to avoid danger caused by collisions, falls, and loss of control, please use caution and learn how to ride the Slingshot safely. Jetson and authorized dealers cannot be held liable for injury or damage caused from riding the Slingshot. Users ride at their own risk.

The rider is responsible for consequences caused by violating warnings or improper operations.

If you want to return this product for any reason, be sure to first call or email us before taking it back to the store so we can assist you.

INCLUDED IN THE BOX



- 1. Stem Base
- 2. Stem
- 3. Deck

- 4. Rear Foot Brake
- 5. Kickstand
- 6. Charging Port



7. Handlebar

8. Thumb Throttle

FEATURES AND SPECS

MODEL: SLINGSHOT

WHEEL SIZE: FRONT: 6"

REAR: 5"

MAX SPEED: 6 MPH

MAX RANGE: 4 MILES

BATTERY TYPE: LEAD ACID

BATTERY CAPACITY: 12V, 9AH (6V, 4.5AH*2
PIECES)

MOTOR TYPE: CHAIN

MOTOR: 60W

CHARGER: UL AC110-240V

CHARGE TIME: 4 HOURS

PRODUCT WEIGHT: 14 LBS

WEIGHT LIMIT: 120 LBS

RECOMMENDED AGE: 7+

WATER RESISTANT: NO

ASSEMBLY

The Slingshot comes partially assembled, you will need to attach the Stem into the Stem Base to fully assemble the Slingshot.

First, slide the Stem into the Stem Base. Align the holes in the Stem and Stem Base. Then, place the Small Bolt and Washer through the front hole of the Stem and the Long Bolt through the back of the Stem. Turn the Small Bolt until it is tight and secure.



Small Bolt
and Washer

Large Bolt



CHARGING THE BATTERY

Your Slingshot comes with a built-in rechargeable lead-acid battery. Always use the provided charger only. The charging port is located on the left side of the Slingshot. Please remember to cover the Charging Port when you are done charging the Slingshot. Before your first ride you must fully charge the Slingshot - charge for 7 hours for the first 3 times you use it. For every ride after, charge your Slingshot until it is fully charged, and NOT LONGER. Do not leave any chargers plugged in overnight, or leave it plugged in past the charge time.

1. Plug one end of the power cord into a grounded AC outlet and the other into the Slingshot's charging port. The red charging light on the charger unit will turn on.
2. The red light will turn green once fully charged. Recharge the Slingshot after each use.

(Please note: Always plug the charger into the wall first before the device. If the wall outlet doesn't have power and you plug the charger into the device first, it will light green, even if the battery is not full. So always plug into the wall first to make sure there is power.)

THE CHARGER OFFERS A CHARGING STATUS ON THE TOP OF THE CHARGER:

CHARGING LIGHT RED: Battery is charging.

CHARGING LIGHT GREEN: Charging is complete.

Don't use the Slingshot if the battery emits strange odors, overheats, or begins leaking. If the battery does leak, do not touch any leaking materials, as the battery contains dangerous substances. Do not open the battery and do not insert anything into the battery.

Only use the provided charger for the Slingshot. Do not charge the battery if it has over-discharged. It should be discarded for your safety. Do not turn on the Slingshot while it is charging.

OPERATING THE SLINGSHOT

SAFE RIDING

Helmet: Most serious injuries that occur while riding are head injuries. This could be prevented by wearing a helmet.

Elbow and Knee Pads: For added protection, always wear elbow and knee pads when riding your Slingshot, to prevent any serious injuries.

Get to know the Slingshot before riding it. Test your control over it. Make your turns slowly and cautiously, and give yourself stopping distance. It is recommended you practice your first ride on the Slingshot in an open space with no obstacles in your way.

TURNING THE SLINGSHOT ON AND OFF

To turn the Slingshot on, flip the Power Switch located on the right side of the Slingshot under the Deck to "On."

To turn the Slingshot off, first make sure the Slingshot is not in motion. Then, flip the Power Switch to "Off."



FOOT POSITION

Before riding, put your foot as close as possible to the front of the Deck, and your other foot on the ground. Make sure that your driving route is clear. To start riding, boost yourself forward with your foot that is on the ground. Keep one foot behind the other, (it's more comfortable to place one foot forward and the other one turned at 70-90°). It will help you gain more stability. The turns on the Slingshot are commanded by the direction you turn the Handlebar/Front Wheel in. Before turning, look both ways to make sure your path is clear.

USING THE THUMB THROTTLE

To activate the motor, press down on the Thumb Throttle. Get accustomed to the acceleration of the throttle.



HOW TO APPLY THE BRAKE

To apply the brake, press down on the Rear Foot Brake with your back foot. Using the Rear Foot Brake will also deactivate the motor.



CARE AND MAINTENANCE

DRIVING RANGE

The average range of the Slingshot is 4 miles. However, a lot of factors will affect how far you can go per charge:

- Driving surface: A smooth, flat surface will increase driving distance.
- Weight: More weight means less distance.
- Ambient temperature: Please ride and store the Slingshot under recommended temperature, which will increase its longevity and driving distance.
- Maintenance: Timely battery charging and maintenance will increase driving distance.
- Speed and driving style: Maintaining a moderate speed will increase distance. Frequent starting and stopping, acceleration, and deceleration will reduce it.

SPEED LIMIT

The top speed of the Slingshot is 6 mph.

WEIGHT LIMIT

The maximum load is 120 lbs. Going above the maximum weight limit can cause injury or damage the Slingshot.

CLEANING THE SLINGSHOT

To clean the Slingshot carefully wipe with a damp cloth, then dry with a dry cloth. Do not use water to clean the Slingshot, as the electrical and electronic systems may get wet, resulting in personal injury or malfunction of the Slingshot.

BATTERY

- Keep the Slingshot away from fire and excessive heat.
- To avoid damage to the battery, never subject the Slingshot to intense physical shock, severe vibration, or impact.
- Protect the Slingshot from water or moisture.
- Never disassemble the Slingshot or its battery.
- If there are any issues with the battery, please contact Jetson Customer Support at 1-(888) 976-9904 or email us at customerservice@jetsonbike.com.

STORAGE

- If you plan on storing the Slingshot for a substantial period of time, please make sure you fully charge the battery before storing. The battery should be fully charged once a month after this.
- To protect against dust, cover the Slingshot.
- Store the Slingshot indoors, in a dry place and at a suitable temperature.
- You should bring the Slingshot into a warm environment (above 50 degrees Fahrenheit) for charging.
- Do not leave the Slingshot plugged into the charger for long periods of time.

SAFETY WARNINGS

Here are some useful tips to make sure you always have a safe ride:

- Do not ride after drinking or taking prescription medication.
- Do not carry items when riding.
- Prior to each ride, inspect each part of the Slingshot to ensure it has been maintained correctly and is functioning properly.
- Always give way to pedestrians.
- Always comply with local traffic laws and regulations. Remember, the Slingshot is a motor vehicle, and is treated as such by local law enforcement. You can and will be arrested for drunk driving. Many cities have restrictions on where you can drive motor vehicles, as well as additional restrictions on driving non-automobiles on streets and highways.
- Be alert to things in front and far away from you.
- Make sure your feet are always placed securely on the deck.
- The Slingshot cannot be ridden by more than one person. Only one person can ride at a time.
- When you ride the Slingshot along with other riders, always keep a safe distance to avoid a collision.
- When turning, be sure to maintain your balance.
- Do not allow distractions when riding, such as answering the phone or engaging in any other activities.
- Avoid riding in the rain or on smooth surfaces such as snow or ice.
- Do not ride on roads with obstacles (such as litter, small stones, etc.).
- Avoid riding in narrow spaces or on steep slopes.
- Avoid riding around flammable gas, steam, liquid, or dust that could cause fire.

- Never operate the product barefooted and keep shoelaces tied.
- Applying brakes too hard or too suddenly can lock up a wheel, which could cause you to lose control and fall.

CALIFORNIA WARNING

This product contains chemicals, including lead, which are known to the state of California to cause cancer, birth defects, and other medical conditions.

MODIFICATIONS

Do not attempt to disassemble, modify, repair, or replace the Slingshot or any components of the unit without instruction from Jetson Customer Support. This will void any warranty, and can lead to malfunctions which may cause injury.

ADDITIONAL OPERATION CAUTIONS

Do not lift the Slingshot off the ground while it is on and the wheels are in motion. This can result in freely spinning wheels, which may cause injury to yourself or others nearby. Do not jump on or off the Slingshot, and do not jump while using it. Always keep your feet firmly planted on the deck while in operation.

LIMITED 1 YEAR WARRANTY

TO QUALIFY FOR WARRANTY SERVICE:

1. You must present a copy of the sales receipt from an approved retail partner within 90 days of purchase.
2. This product cannot be used for rental or commercial use.
3. This product cannot be used for competition.

LIMITATIONS OF LIABILITY

- This Limited 1 Year Warranty is non-transferable after the product's initial sale.
- No unapproved modifications can be made to the product, its performance or otherwise, in order for this Limited 1 Year Warranty to remain in effect.
- No reimbursement is provided for towing, loss of time, loss of use, inconvenience, incidental or consequential damages.
- Warranty is void if weather related water damage is determined. Owner is responsible for storage and protection from weather.
- Jetson® makes no warranty with respect to products or trade accessories not made by Jetson®, including, but not limited to, motors, tires, wheels, and batteries, such products or trade accessories, such items being subject to the original manufacturer's warranty, if any.
- This Limited 1 Year Warranty does not cover minor surface blemishes, rips, tears, or other cosmetic damages due to normal use, or other intentional or unintentional damage to the product.
- This Limited 1 Year Warranty will not cover any damage which results from the application of improper cleaners, solvents or chemicals to the product, water damage, smoke or soot, or from exposure to saltwater, sea breeze or salt.
- This Limited 1 Year Warranty will not cover any damage which results from aging, such as fading of paint, deterioration of plated surfaces, deterioration of rubber or plastics, or rusting.
- This Limited 1 Year Warranty does not cover improper repair or misdiagnoses of problems.
- This Limited 1 Year Warranty only covers parts due to manufacturer defect.
- Damage due to misuse or neglect, use other than as specified in the Owner's Manual, or use under abnormal conditions are not covered by this Limited 1 Year Warranty.

OWNER'S WARRANTY RESPONSIBILITIES

As the device's owner, you are responsible for the performance of the required maintenance. You may be denied a warranty claim solely because of your failure to ensure the performance of all scheduled maintenance. As the owner, you should be aware that you may be denied your warranty coverage if your device or a part has failed due to abuse, neglect, improper maintenance, or unapproved modifications. For any issue regarding your Jetson® product, call toll free 1-(888) 976-9904, or email customerservice@jetsonbike.com.

PRODUCT REGISTRATION

Please complete and mail this card within 10 days of purchase or go to <https://www.ridejetson.com/product-registration>.

Name: _____

Address: _____

City, State, Zip: _____

Email: _____

Home Phone: _____ Gender: _____

Purchase Date: _____ Purchased From: _____

Serial Number: _____

Is this your first Jetson product?: _____

Other similar product owned before: _____

- Why did you buy this product?:
- For myself
 - For my child
 - For my grandchild
 - Gift for someone else (adult)
 - Gift for someone else (child)

How did you hear about the Jetson Slingshot?: _____

Complete this form and mail it to:

**Attention: Product Registration
Jetson Electric Bikes
1 Rewe Street
Brooklyn, NY 11211**

Jetson



SLINGSHOT ELECTRIC SCOOTER