

IMPORTANT: Please follow these best practices

Maneuverability

We highly recommend you slow down around greens and tee boxes that require maneuverability and care around other players, their equipment and the surrounding area.

To slow the cart down, click the “Back” button while the cart is in motion, until the desired speed is reached. This will make the cart easier to maneuver. Fixed-wheel carts may not be able to turn at higher speeds and may endanger others or damage property if the unit moves at a high rate of speed and cannot be turned.



Severe Inclines

Caution: For going up moderate to severe inclines, we recommend slowing your Club Booster to your walking pace and holding onto the cart handle to ensure it does not tip over backwards.



Cruise Control

Cruise Control regulates the uphill and downhill speed of the cart to keep the speed constant. This is particularly useful on steep declines, where the cart may otherwise accelerate to a potentially dangerous speed.

Cruise Control also keeps both wheels at the same speed which keeps the cart tracking a straighter line. We recommend using Cruise Control for long, straight runs.

To activate Cruise Control, press the upper right ‘Speedometer’ icon button once. The yellow LED on the Club Booster Console will light up.

To deactivate, simply press the upper right button again and the yellow LED on the console will go out.

Do not steer the cart manually with Cruise Control engaged.

Warning: Do not use Cruise Control outside of the golf course (on cart paths, parking lots, etc...)



Steering Tips

Press and hold the Left or Right Arrow buttons to turn the cart. The cart will continue to turn until you let go of the button. Quickly pressing and letting go of the Arrow buttons will cause a jerking motion, rather than a smooth turn.

For fixed-wheel carts turning is best at speeds 1 – 2. Depending on conditions, fixed-wheel carts may not turn at speeds higher than 3.



Charging Your Unit

When charging is complete, the LED indicator on the charger will change from red to green. It should take about 4 hours to fully charge the battery from a drained/low level. You can switch on the power on the Club Booster console during charging to check the battery level.

Unplug the charger as soon as possible after charging is complete. This will prolong battery life and prevent over-heating. It is not recommended to charge overnight. Charge in an open environment where you can unplug the unit once it is fully charged.



LED Charge Indicator

Save Your Box

Although unlikely your Club Booster will need repair, we recommend keeping the box, just in case it needs to be shipped.