 






PowerREC Voice Recorder

User's Manual



Buttons and Functionality

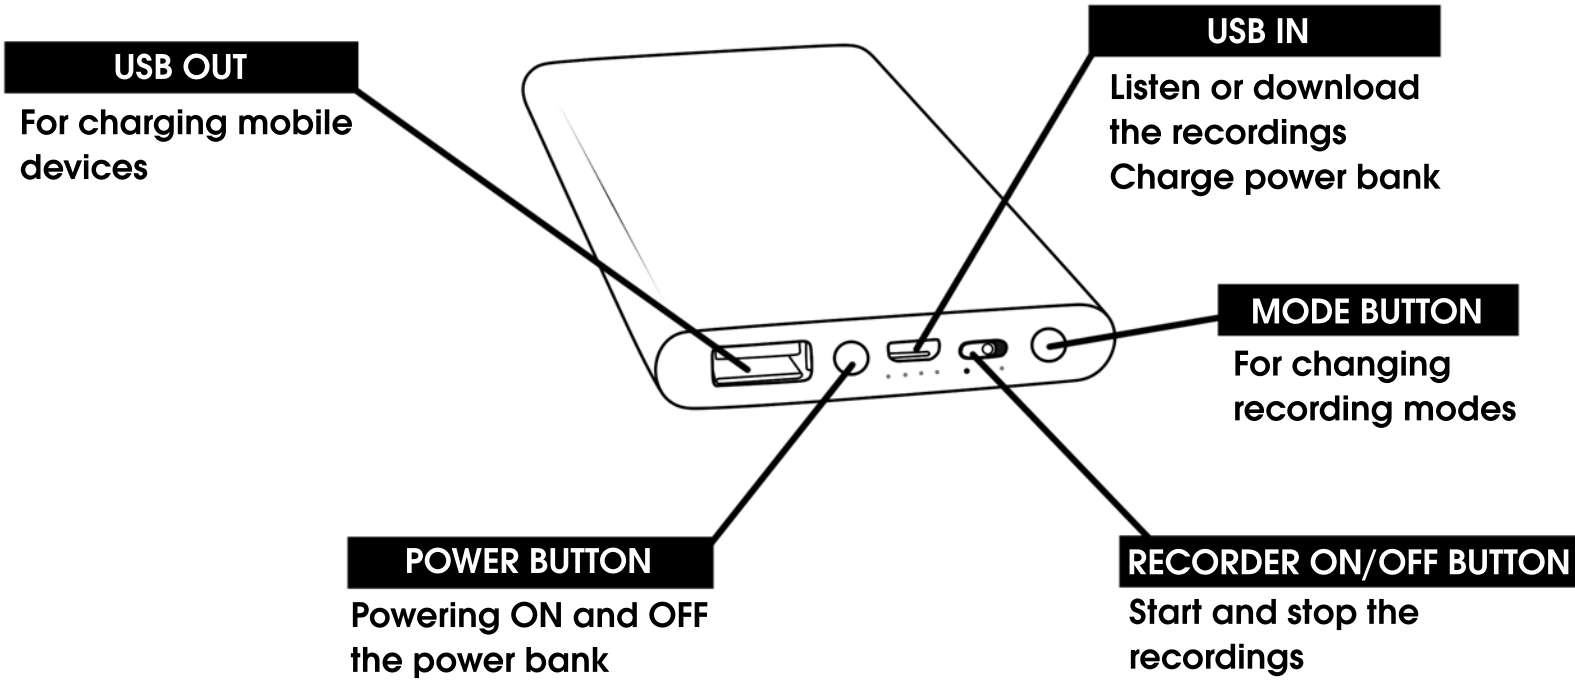

  How to Start and Stop Recording

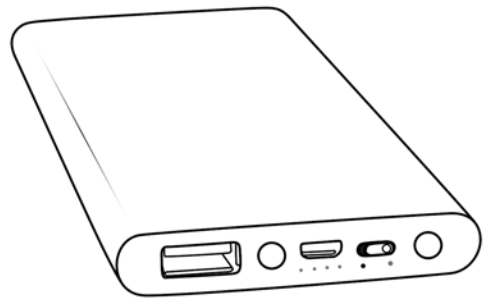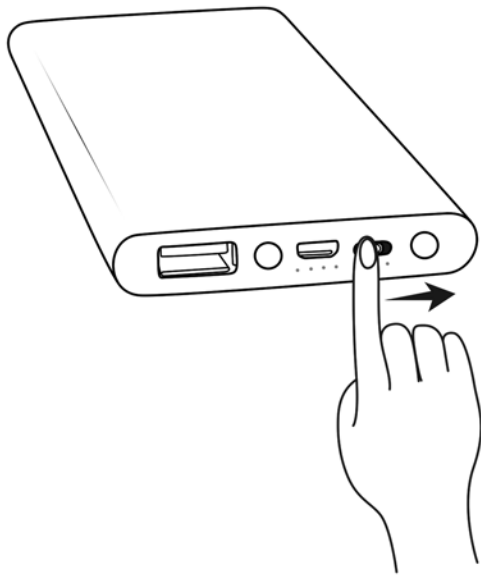


  To start recording, slide power button to ON position.

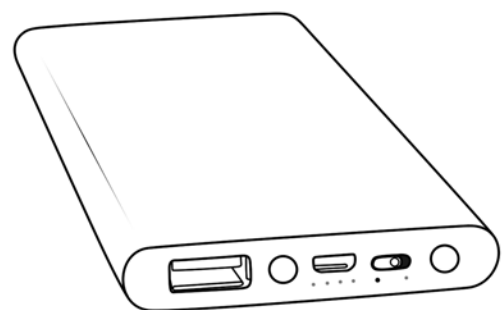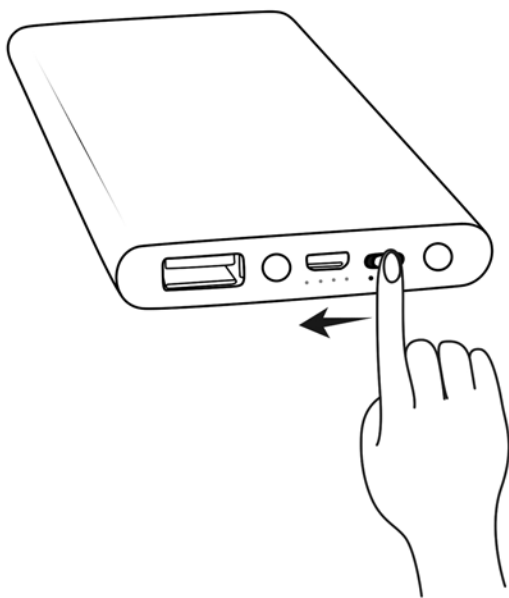


To stop recording, slide power button to OFF position.

 Recording Modes

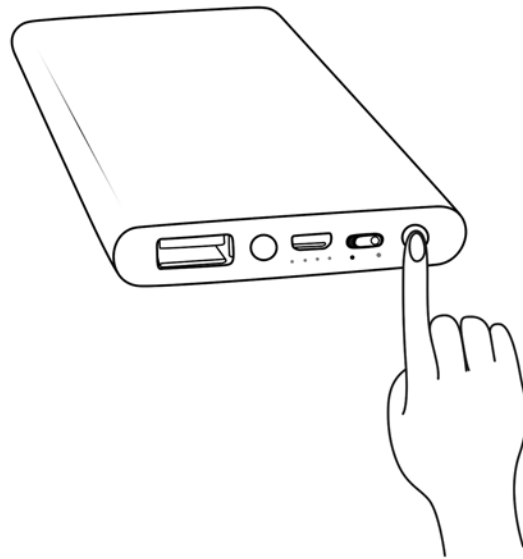



The default recording mode is voice activated. Records only when sounds are detected. To activate continuous recording mode, press the mode button once.

 Recordings Playback using PC/MAC

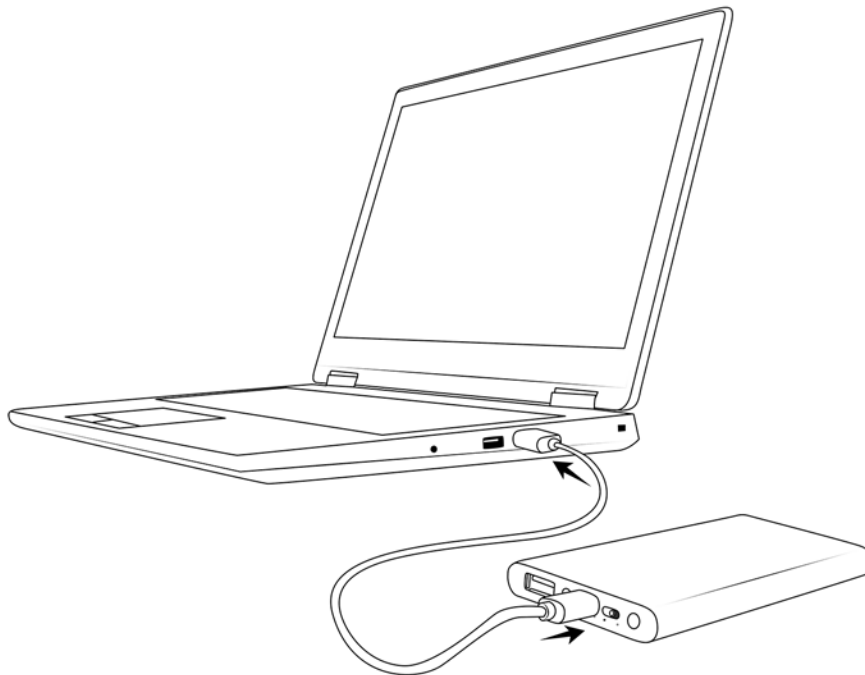

Listen to your recordings using a windows PC or MAC. To access files, connect included USB cable to the computer USB port. Conect the same USB cable to the USB IN port of the recorder. Make sure the recording button is set to OFF.

 
 
Recordings Playback using an Android Phone

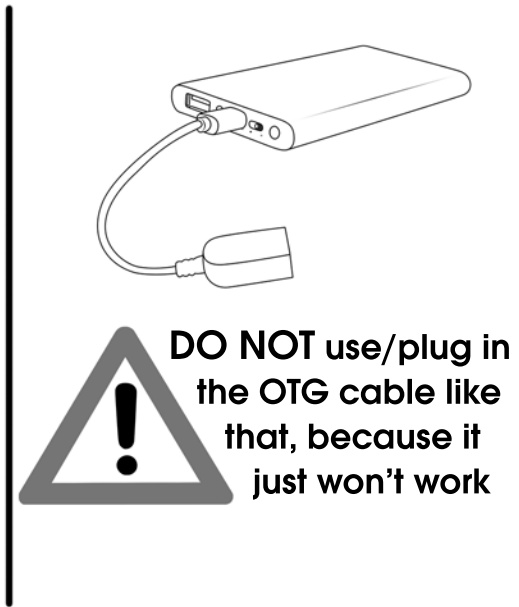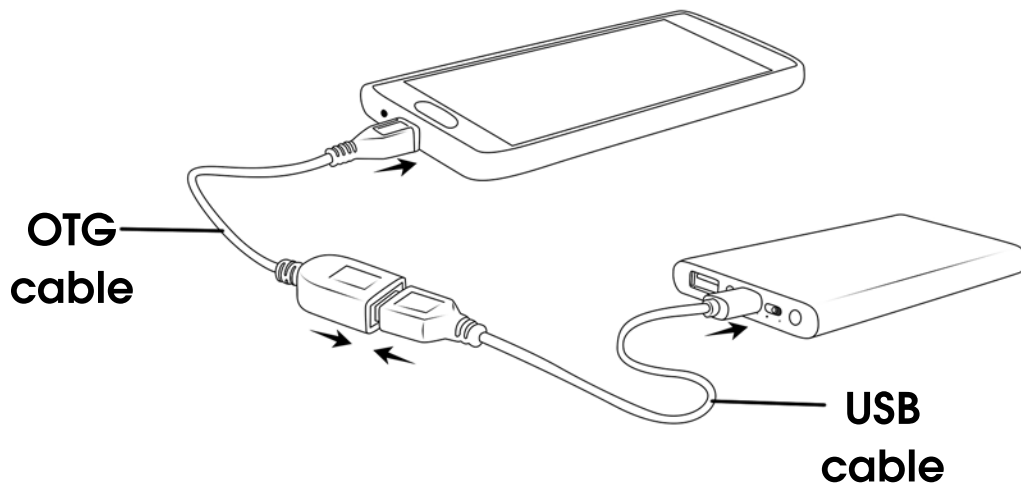

To listen to your recordings using an Android Phone, use a compatible OTG cable. Connect it to your phone, connect the USB cable to the OTG and to the recorder using the USB IN port.


Make sure the recording button is set to OFF. If you made the connection with a compatible, you should be able to see the next steps to take on the screen, in order to access your files.

  How to charge the power bank

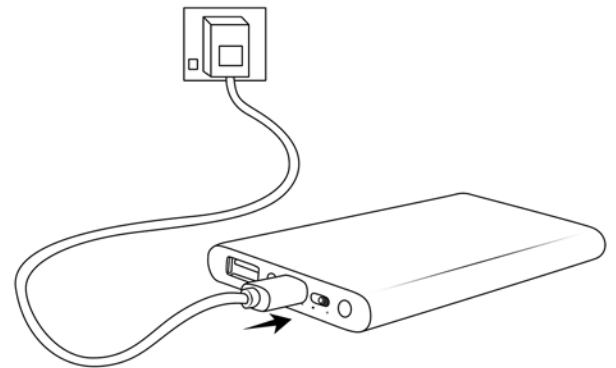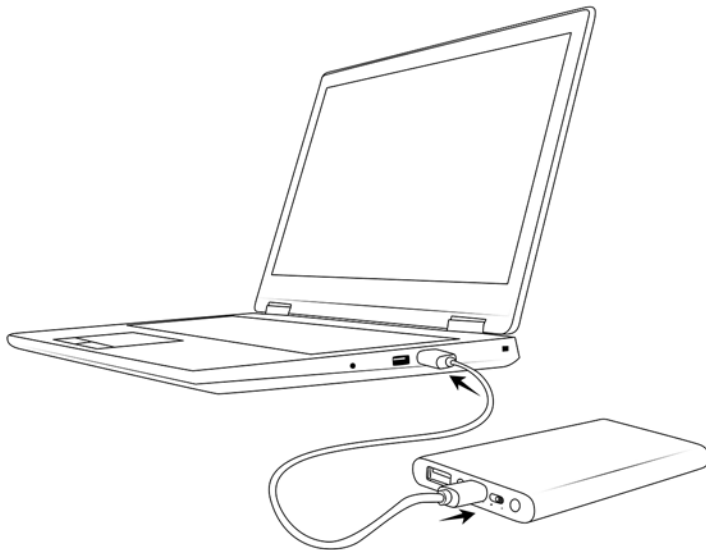

The power bank can be charged by connecting to the computer using the USB IN port of the powerREC. It can also be charge using a USB wall socket or phone charger.


 
Use as Power Bank

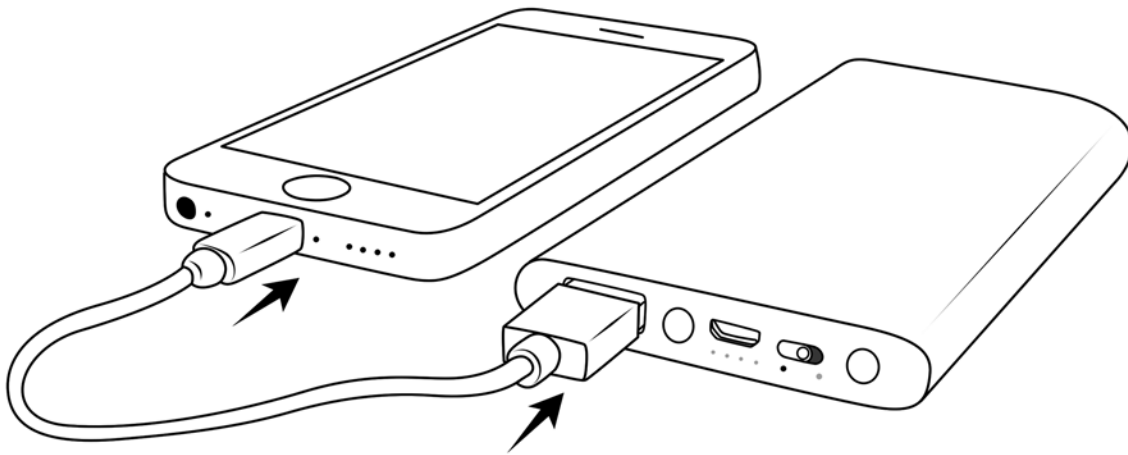

To charge mobile devices with the powerREC, connect your device's specific charging cable to your device and to the powerREC using the USB OUT port.

Troubleshooting

  Never connect the OTG cable to the powerREC. The OTG cable can only be plugged into the micro USB port of your phone. If your phone has a type C USB connection, use an adaptor.

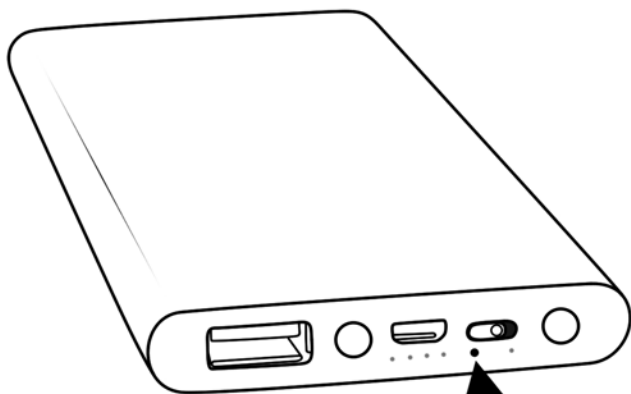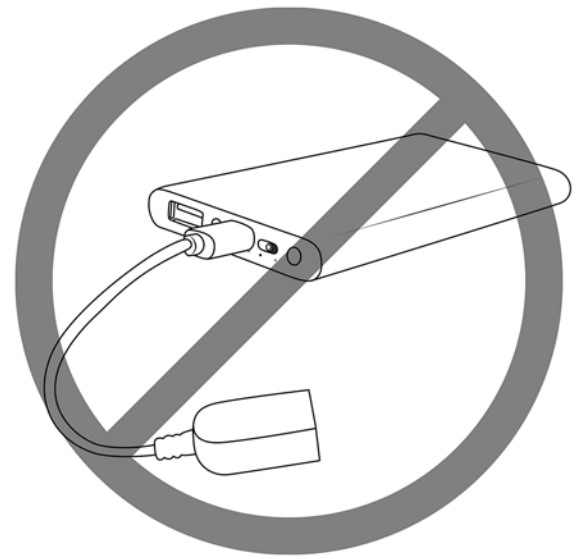

Insert a pin in the reset hole to reset the device. Keep it pressed for a few seconds.

PIN