


**Packing List**

Listed below are parts included in this kit. If any parts are missing or damaged, please contact Hustler® Parts Department. Retain these instructions for replacement parts.

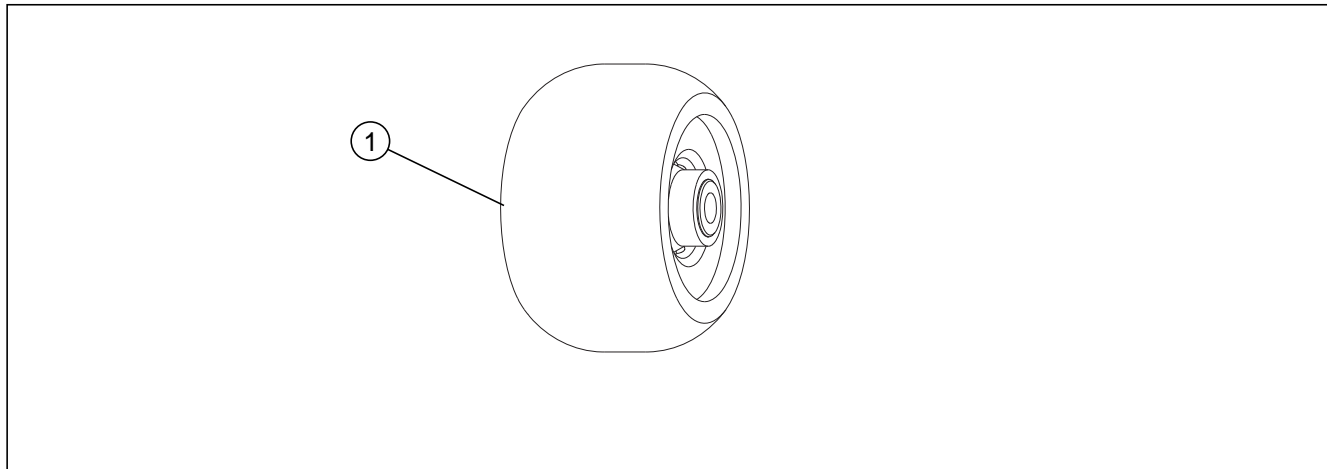

INDEX NO.	PART NO.	DESCRIPTION	QTY.
1	604516	ANTI-SCALP WHEEL	7

**Assembly**

1. Park the mower on a solid, level surface, set the park brakes, raise the side decks and lock them in the transport position.
2. Raise the main deck and lock it in the transport position.
3. Shut-off the engine and remove the ignition key. Disconnect the negative battery cable.



Use only appropriate vehicle stands, with a minimum weight rating of 2000 pounds to block the unit up. Use in pairs only. Follow the instructions supplied with the vehicle stands.



Exercise caution when working under the deck as the mower blades are extremely sharp. Wrap the blade(s) or wear gloves when handling the blades.

4. Raise the front of the mower and block it up high enough to allow the new anti-scalp wheels to be installed on the underneath side of the deck. Chock the drive wheels to prevent the mower from moving.
5. Remove the existing anti-scalp wheels. Retain the hardware as it will be re-used.
6. Install the new anti-scalp wheels using the existing hardware as shown in Fig. 1.
7. Raise the front of the mower and remove the blocks. Lower the front of the mower. Remove the wheel chocks.
8. Reconnect the negative battery cable. Start the engine and lower the side decks. Shut-off the engine.

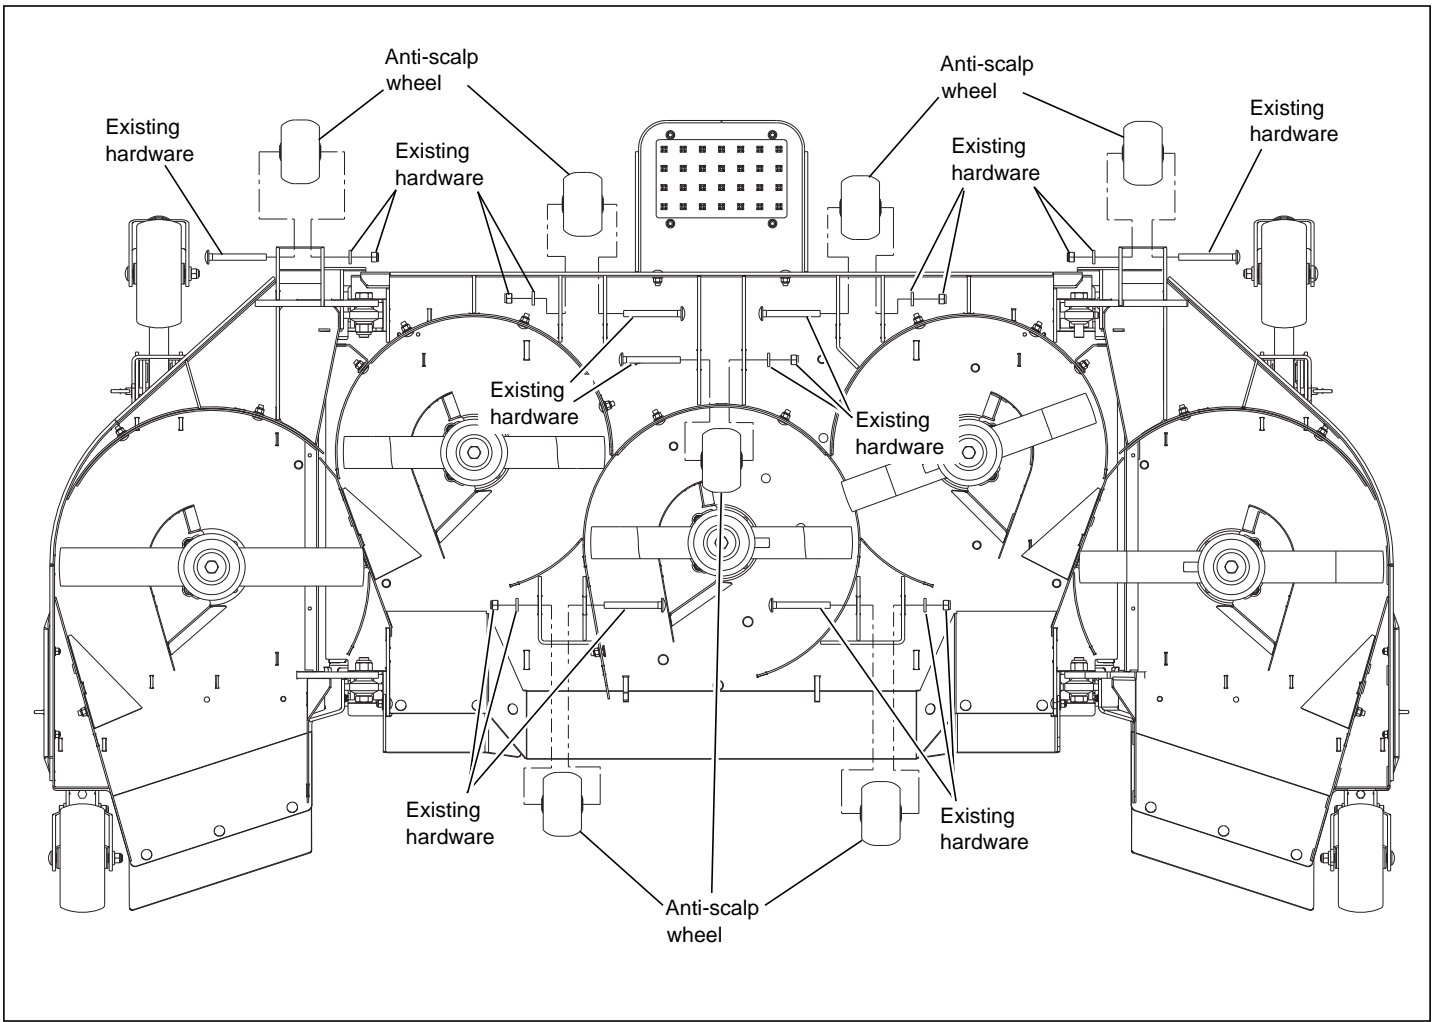


FIG. 1