


Packing List

Listed below are parts included in this kit. If any parts are missing or damaged, please contact Hustler® Parts Department. Retain these instructions for replacement parts.

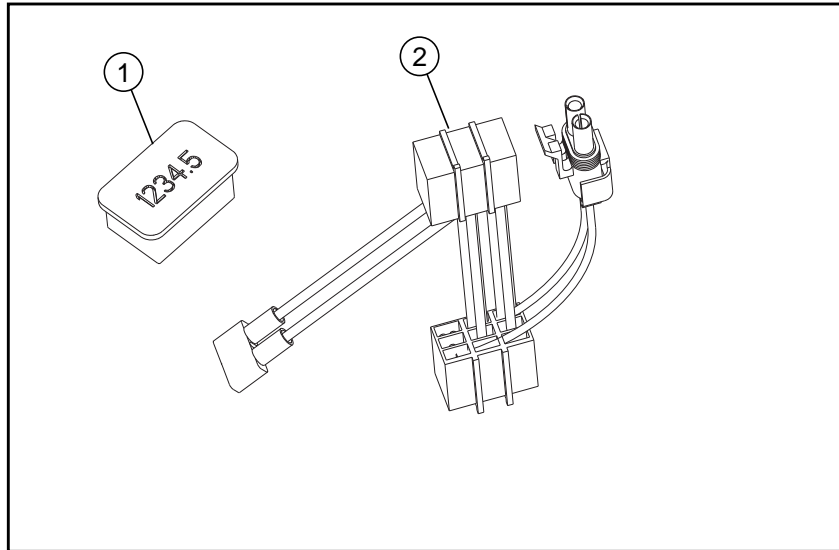

INDEX NO.	PART NO.	DESCRIPTION	QTY
1	769166	HOUR METER	1
2	604506	KEY SWITCH PIGTAIL	1

Assembly

1. Park the mower on a solid, level surface; set the park brakes; shut-off the engine; and remove the ignition key.
2. Lift the seat and disconnect the negative battery cable.



WARNING



Shorts caused by battery terminals or metal tools touching metal mower components can cause sparks. Sparks can cause a battery gas explosion which will result in personal injury.

3. Access the wiring connections and the bottom of the instrument panel on the right side fender by removing the 1/4" bolt, lifting the front edge of the instrument panel, sliding it forward and lifting it far enough away from the fender to allow disconnecting the ignition switch. Fig. 1
4. Locate the .95" x 1.46" slot on the underneath side of the instrument panel that has been covered by the instrument panel decal. Using the panel as a guide, cut a rectangular hole in the instrument panel decal for the hour meter. Fig. 1
5. Insert the hour meter into the rectangular cut-out oriented as shown in Fig. 1. It will snap into place.
6. Connect the pigtail harness to the ignition switch and to the mower's wire harness. Fig. 2
7. Connect the female blade terminals on the wire harness to the hour meter (polarity is not critical). Fig. 2
NOTE: Remove the heat shrink wrapping from around the orange wire terminal.
8. Reinstall the instrument panel reversing the procedure in step 3.
9. Reconnect the negative battery cable to the battery.

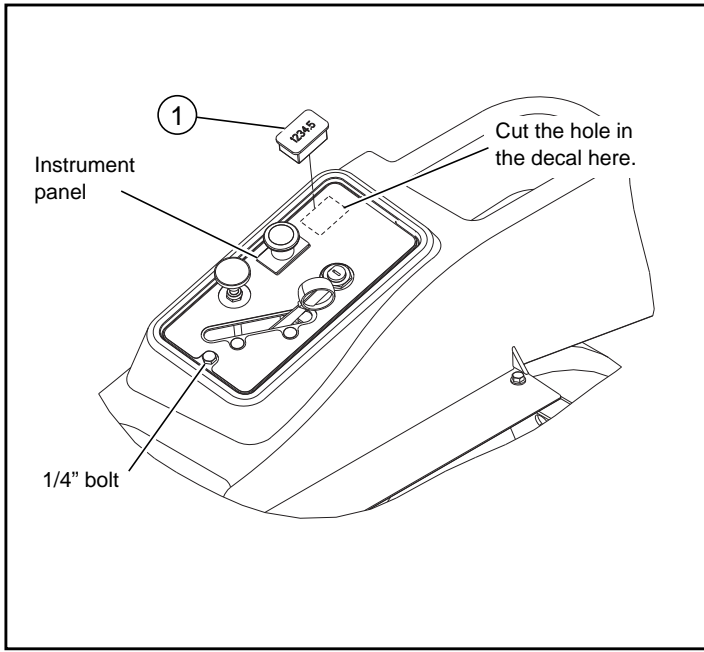


FIG. 1

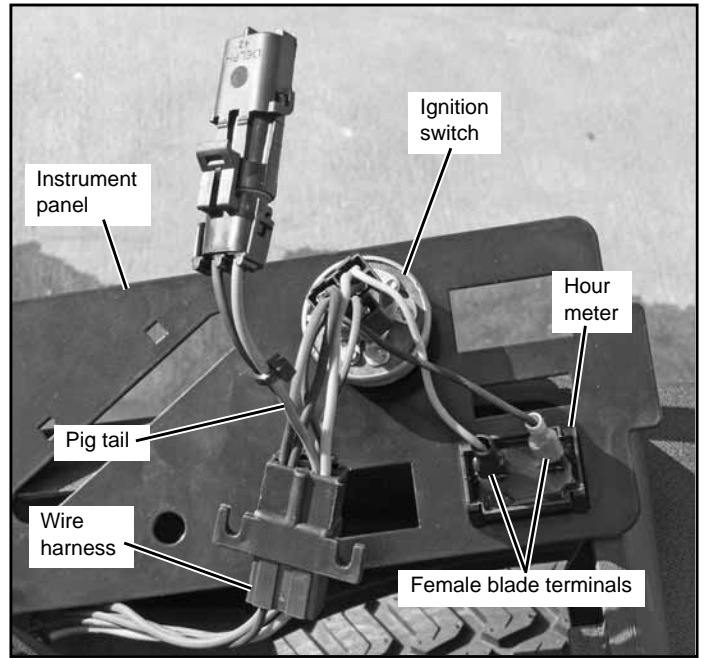


FIG. 2