Listed below are parts included in this kit. If any parts are missing or damaged, please contact your Authorized Dealer.

Parts List

Part No.	Description	Qty.
333708	Steering arm extension	2
767954	FW .406 x .812 x .060 SAE HRD ZN	8
080655	CS .375-16 x 1.500 HX G5 ZN	4
054502	NT .375-16 HX G5 ZN	4

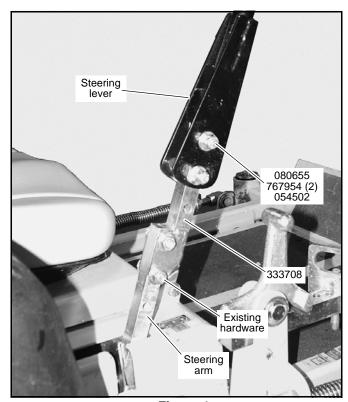


Figure 1

Installation

- 1. Park the tractor on a flat surface, place the control levers in the park brake position, shut-off engine and remove ignition switch key.
- 2. Unbolt the steering levers from the steering arms.
- 3. Attach the steering arm extensions to each of the steering arms.
 - **NOTE:** The extensions can be attached to either the upper or lower set of holes in the steering arms.
- 4. Attach the steering levers to the steering arm extensions.
 - **NOTE:** The steering levers can be attached to either the upper or lower set of holes in the extensions.
- 5. Adjust the steering levers to the operator's preference.
- 6. The tractor is now ready to operate.