

ARIES GOLD

M C M L X X

L 58010 / CAL. 6P20

USER MANUAL

All specifications are subject to change without prior notice.

/ TIME STANDARD

Type of Quartz : Tuning fork type quartz crystal
 Frequency : 32,768Hz
 Accuracy : ±20 seconds/ month worn under normal circumstances

/ FUNCTION

Multifunction Day Date
 Moon phase

/ INSTRUCTION MANUAL

[Displays & Buttons]



A) SETTING THE DAY AND TIME (HOUR, MINUTE AND SECOND)

* The hour, minute, second and day are set by the same operation.



i. SETTING THE DAY

1. Pull the crown out to the 2nd Click position to stop the second hand at 0 (12 o'clock).
2. Turn the hour/minute hands in a clockwise direction to set a day.

NOTE:

- * If the day is set by turning the crown counter clockwise, there is the possibility the date will not change over. Do not set the day by turning the crown in counter clockwise direction.
- * The day changes somewhere between 0:00am and 5:30am or a little later.

ii. SETTING THE TIME

After setting the day, set the hour and minute hands.

1. Turn the hour/minute hands in a clockwise direction to set the time.
2. To ensure time is set accurately, first turn the minute hand 5 minutes ahead of desired time and then turn back (counter clockwise) to the desired time.
3. After the setting the time, use a time signal to synchronize the watch by pushing crown to normal position to start the second hand going.

NOTE:

- * Make sure you have correctly set AM/PM before setting the time.
- * When the day changes over, it is am. (Day changes over between 0:00am and 5:30am or little later)

B) SETTING AND READING THE AGE OF THE MOON

 
1. The moon phase represents the age of the moon, the actual shape of the moon during each phase is not represented.
2. Use the moon phase only as a guide to the age and phase of the moon when reading and setting watch.

i. SETTING THE AGE OF THE MOON

1. Pull the crown out to the 1st Click position.
2. Turn the crown clockwise to advance the moon phase.

ii. SETTING THE AGE OF THE MOON WITH AGE SCALE

- * Check on the age of the moon for the day. Check the newspaper or other source for the age or phase of the moon for today or tomorrow. Subtract one day before a setting is made if the listings for tomorrow are used.
- * Setting procedure (Eg: Age of the moon: 4.4)
 1. Pull the crown out to the 1st Click position.
 2. Turn the moon disc clockwise until the center of the moon is in line with 4.4 on the scale.







iii. SETTING THE AGE OF THE MOON WITHOUT AGE SCALE

- * Check the newspaper or other source that lists current age or phase of the moon. Referring to section **B-iv READING THE AGE OF THE MOON**, set the moon phase to the age (0, 7, 15 or 22) closest to the listed. More accurate setting can be made at the same time of the new moon (0) or full moon (15).

THE AGE OF THE MOON

The age of the moon indicated in units of days. The average period from a new moon to the next new moon is equivalent to about 29.5 days.

iv. READING THE AGE OF THE MOON

<p>New moon Moon's age: 0 Spring tide</p> 	<p>First Quarter moon Moon's age: 7 Neap tide</p> 	<p>Full moon Moon's age: 15 Spring tide</p> 	<p>Last Quarter moon Moon's age: 22 Neap tide</p> 
---	--	--	---

From the phase of the moon in the display, you can tell the size of the tide.

If you want to set more accurately the phases of the moon, we recommend to set it at the time of a New Moon (The Moon is hidden in the display...New Moon) or a Full Moon (The Moon appears fully in the display...Full Moon)

C) SETTING THE DATE (BY QUICK OPERATION)

1. Pull the crown out to the 1st Click position. Turn the crown counter clockwise to set the date quickly.

NOTE:

- * Do not set the date between the hours 9:00pm and 0:30am. The date may not change correctly the next day.