# ARIESGOLD MCMLXX

G 7013 / CAL. VD59
USER MANUAL

All specifications are subject to change without prior notice.

3. Push the crown back to

the normal position.

### / TIME STANDARD

Type of Quartz : Tuning fork Frequency : 32,768Hz

Accuracy : Monthly rate: Less than 20 seconds per month at normal temperature range

### / FUNCTION

Stopwatch: Up to 1 minute in 1/10 second up to (2 second per round)

60 minutes in 1 second split time

Sun & Moon disc (synchronized regular hour-hand)



- \* The measurement time indicated by the stopwatch hands that move independently of center hands.
- \* Stopwatch 1/10 second hand moves for a first minute.

  After one minute, it indicates the measurement time when it is stopped.

### **ADJUSTING THE STOPWATCH HAND POSITION**


Before setting the time, check if the stopwatch 1/10 second, second and minute hands are in the "0"(12 o'clock) position. \*If the stopwatch is in use, press the button in the following order to reset it, and then, check if the hands return to "0" position. (For details, see "HOW TO USE THE STOPWATCH")

\* If the stopwatch is counting :  $A \rightarrow B$ 

\* If the stopwatch is stopped: B


\* If the split time is displayed :  $B \rightarrow A \rightarrow B$ 

If either of the stopwatch hands are not in the "0" position, reset them following the procedure below.

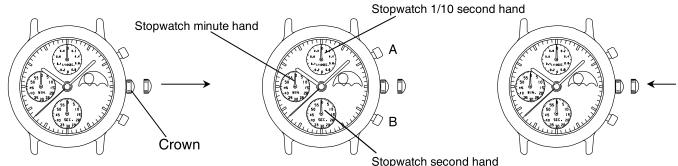

- 1.Pull out the crown.
- 2.Press button A or B to reset the stopwatch 1/10 second, second and minute hands to "0"position.
- \*By pressing button A set the Stopwatch 1/10 second hand.
- \*By pressing button B set the Stopwatch second and minute hands.
- \*The stopwatch minute hand moves correspondingly with the stopwatch second hand.
- \*The hands move quickly if the respective buttons are kept pressed.


# **TIME SETTING**

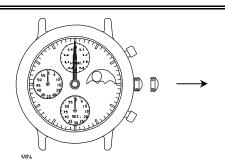

1.Pull out the crown when the second hand is at the 12 o'clock position. The second hand will stop

on the spot.

\*Do not press any button. Otherwise, the chronograph hands will move.

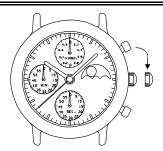

- 2. Turn the crown to set the hour, minute hands to the desired time. As the hour hand moves, the Sun & Moon disc also moves correspondingly. When setting the hour hand, check that the Sun & Moon disc is set property.
- normal position in accordance with a time signal.



## **HOW TO USE THE STOPWATCH**

(Check that AM / PM is set correctly)

- •The measurement time is indicated by the stopwatch hands that move independently of the center hands.
- •The stopwatch can measure up to 60 minutes in second.

(Standard measurement)

Ex) 100m race (Press the buttons in the following order  $A \rightarrow A \rightarrow B$ )

Stopwatch 1/10 second hand

→ RESET (Reset to "0'00") **START** STOP (Finish) -


Stopwatch minute hand



Stopwatch second hand





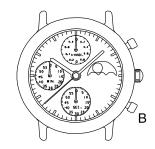

(Accumulated elapsed time measurement)


Ex) Basketball game (Press the buttons in the following order  $A \rightarrow A/A \cdots \rightarrow A \rightarrow B$  )

START  $\longrightarrow$  STOP RESTART  $\longrightarrow$  STOP  $\longrightarrow$  RESET (Start of game) (Time out) (Restart of game) (Game over)

5 minutes 10,8/10 seconds

20 minutes 00 seconds

(Split time measurement)

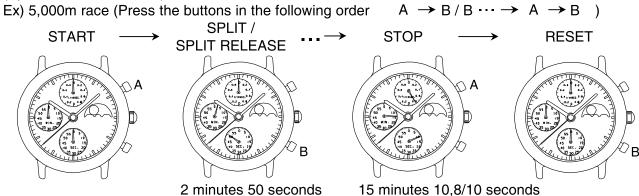

<sup>\*</sup> Measurement and release of the split time can be repeated as many times as necessary by pressing button B.

<sup>\*</sup>Restart and stop of the stopwatch can be repeated as many times as necessary by pressing button A.