

ARIES GOLD

M C M L X X

G 9005 / CAL. 8250

USER MANUAL

All specifications are subject to change without prior notice.

/ TIME STANDARD

| | |
|--------------------|--|
| Type of Automatic | : Manual winding |
| Frequency | : 21600 vibrations/ hour |
| Accuracy | : -20 till +40 seconds/ day (on wrist) |
| Posture Difference | : Under 50 seconds/ day |
| Running Time | : More than 40 hours |

/ FUNCTION

Automatic & manual winding
 Display by means of hands: hour, minute, second

/ INSTRUCTION MANUAL

[Displays & Buttons]



A) WINDING THE MAINSPRING

Automatic winding watch can also be hand wound by turning the crown clockwise in "0" position. Wind 15 - 20 times clockwise until second hand starts to move naturally.

B) SETTING THE TIME

1. Pull the crown out to the 1st Click position.
2. Turn the crown clockwise to set the time.
3. After the time has been set, push the crown back to the "0" position.

AUTOMATIC WINDING STRUCTURE

Winding direction:
 Counter-clockwise
 (seeing from case back side)

