

ARIES GOLD

M C M L X X

G 901 / CAL. 8N24

USER MANUAL

All specifications are subject to change without prior notice.

/ TIME STANDARD

Type of Automatic	: Manual winding
Frequency	: 21600 vibrations/ hour
Accuracy	: -20 till +40 seconds/ day (on wrist)
Posture Difference	: Under 50 seconds/ day
Running Time	: More than 40 hours

/ FUNCTION

Automatic & manual winding
 Display by means of hands: hour, minute, second
 Shock-absorber for balance staff

Accuracy of the mechanical watch is different from the daily rate of the quartz watch and the accuracy will change maximum of several ten seconds during rewinding the spring, then the accuracy of the half winding condition will be different from that of full winding condition.

/ INSTRUCTION MANUAL

[Displays & Buttons]



A) WINDING THE MAINSPRING

Automatic winding watch can also be hand winded by turning the crown clockwise in "0" position. Wind 15 - 20 times clockwise until second hand starts to move naturally.

B) SETTING THE TIME

1. Pull the crown out to the 1st Click position.
2. Turn the crown clockwise to set the time.
3. After the time has been set, push the crown back to the "0" position.

AUTOMATIC WINDING STRUCTURE

Winding direction:
 Counter-clockwise
 (seeing from case back side)

