

ARIES GOLD

M C M L X X

G 9024 / CAL. 820A

USER MANUAL

All specifications are subject to change without prior notice.

## / TIME STANDARD

Type of Automatic	: Manual winding
Frequency	: 21600 vibrations/ hour
Accuracy	: -20 till +40 seconds/ day (on wrist)
Posture Difference	: Under 50 seconds/ day
Running Time	: 42 hours

## / FUNCTION

Automatic & manual winding  
 Display by means of hands: hour, minute, second

## / INSTRUCTION MANUAL

[ Displays & Buttons ]



### A) WINDING THE MAINSPRING

Automatic winding watch can also be hand wound by turning the crown in "0" position.  
 Wind 15 - 20 times clockwise until second hand starts to move naturally.

### B) SETTING THE TIME

1. Pull the crown out to the 2nd Click position.
2. Turn the crown clockwise to set hour and minute hands.
3. After the time has been set, push the crown back to the "0" position.

### C) SETTING THE DATE & DAY

1. Pull the crown out to the 1st Click position.
2. Turn the crown clockwise to set the date and day.
- \* Do not set Date between 9:00pm - 1:00am  
 Do not set Day between 1:00am - 4:30am
3. After the date and day has been set, push the crown back to the "0" position.

### AUTOMATIC WINDING STRUCTURE

Winding direction:  
 Counter-clockwise  
 (seeing from case back side)

