



BROCKWELL INCORPORATED

COLUMNSDIRECT.COM



4728 SCARBOROUGH PLACE ▪ STONE MOUNTAIN, GEORGIA 30087 ▪ PHONE: 980-282-8383 ▪ E-MAIL: sales@columnsdirect.com

INSTALLATION INSTRUCTIONS | *CAST RESIN CAPITALS*

I. PARTS AND SUPPLIES NEEDED FOR INSTALLATION

A. Hardware not included:

The following will need to be purchased before beginning installation.

- Standard construction adhesive
- Mineral spirits - for cleaning
- High-quality primer and topcoat paint

II. PREPARATION

- A. **General** – Good industrial/construction safety practices demand that when grinding, cutting, or sanding our products, you must work in a well-ventilated area and wear protective safety equipment, such as safety gloves, safety glasses and a MSHA/NIOSH approved respirator.
- B. **Installation** - It is recommended that safety gloves, hard hats and safety glasses, as well as other specified safety equipment be used during installation.

PLEASE NOTE: Decorative Capitals are load bearing to meet the level of load bearing capacity of the column.

III. INSTALLING YOUR DECORATIVE CAPITALS

- A. Before installing the decorative capital, cut the column at the top of the shaft just above the neck ring within 1/8" from the neck ring and belt sand flush to finish (*see Fig. A*). This step does not apply for fiberwound columns that are without a neck ring or where the ring is at the top of the column shaft.
- B. Before cutting the bottom of the column shaft – measure the opening where the column will be installed. When calculating the overall height required be sure to include the height of the capital. Trim the column shaft bottom to fit the height of the opening.

1.

COLUMNSDIRECT.com

BROCKWELL INCORPORATED



PLEASE NOTE: Column may be trimmed using an abrasive saw blade or a fine-toothed hand saw.
The capital may be trimmed using a Sawzall® with an 8" or 10" / 14 teeth per inch saw blade.

- C. Apply a good grade of construction adhesive between the top of the column shaft and the bottom of the capital (*see Fig. B*).
- D. Center the capital on the top of the column. Remove any excess adhesive.
- E. Countersink three [3] screw holes below the neck ring up through the base of the capital. Screws should be long enough to penetrate the base of the capital (*see Fig. B*).
- F. Secure the capital with three galvanized or stainless steel [rust-proof] screws. Do not over tighten.
- G. Raise soffit and slide assembled column with attached capital into place. Follow the column manufacturer's installation instructions.

IV. INSTALLATION OF SPLIT COLUMNS & CAPITALS

PLEASE NOTE: Split columns and split capitals are not load bearing.

Join the two capital halves using a good grade of construction adhesive. Caulk all seams and finish as described below.

V. INSTALLATION INSTRUCTIONS TO COVER THE CAVITY OF THE CAPITAL

- A. Using 3/8" or 1/2" Marine grade plywood, place the plywood on the top of the capital and trace an outline of the capital.
- B. Over cut the tracing by 1/4".
- C. Apply a premium grade of silicone between the plywood and the capital top.
- D. Screw the plywood to the capital using stainless steel screws.
- E. Caulk the back edge of the plywood where it meets the soffit with silicone adhesive.
- F. You may also use flashing, or a combination of both flashing and plywood. There is no need to bend the flashing over the edge of the capital. This product is rot proof and impervious to water.




VI. FINISHING

- A. Finish by caulking all seams and drill holes.
- B. Repairs to the capital may be made using automotive adhesive such as Bondo®.
- C. Apply a high-quality primer to both the column and capital.
- D. Finish with a premium grade of topcoat paint (*see Fig. C*).

ADDITIONAL INFORMATION

It is always advisable to check your local building codes before starting construction. If you have any questions regarding these installation instructions, please contact the manufacturer before starting installation. Manufacturer shall not be responsible if any failure to comply with these instructions results in the product failing to perform the purpose intended. Failure to comply with the above instructions shall result in voiding the terms and conditions as stated in the warranty.

FIG. A | Cut Column at neck ring when installing decorative capitals.

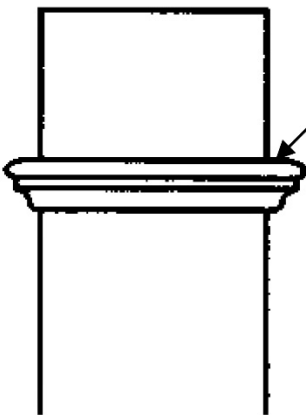

ADHESIVE

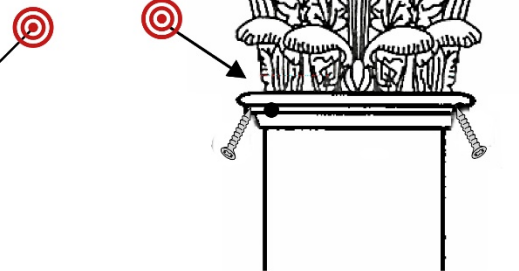


Fig. B | Apply adhesive between the top and bottom of capital. Countersink 3 screw holes below the neck of the ring through the base of the capital.

Fig. C | Apply a high quality primer before painting.

