
USER MANUAL

TURBRO



Rotisserie Gyros Discs

Model: RG01

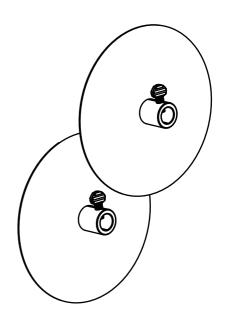

KEEP THIS USER MANUAL FOR FUTURE REFERENCE

CONTENTS

SAFETY INSTRUCTIONS	····02
OPERATION TIPS	03
CARING FOR THE GYROS DISCS	04
WARRANTY INFORMATION	05

SAFETY INSTRUCTIONS

- Read all instructions before using your rotisserie gyros discs.
- Remove the discs and store it in a dry place when not in use.
- This rotisserie gyros discs is not for use by children.
- Do not touch hot surfaces.
- Do not use the gyros discs for other than intended use.

WARNING:

- Always wear heat-resistant grill mitts or gloves (conforming to EN 407, Contact Heat rating level 2 or greater) when handling a hot accessory.
- Do not use your gyros discs directly on your burner.

CAUTION: Do not set your gyros discs on a combustible surface, glass, or a surface that can be damaged by heat.

Failure to follow these Instructions may result in serious bodily injury or may result in a fire or an explosion causing damage to property.

OPERATION TIPS

Important: Always protect your hands from hot surfaces by wearing gloves or mitts.


Cooking Preparation

- 1. Make sure that your gyros discs are clean and ready to go.
- 2.Lightly spray or apply cooking oil to the interior surface of the gyros discs to prevent food from sticking.


Assembly and Grilling Instructions

1. Slide the spit rod through one of the discs (A) and secure it by tightening the thumb screw.

NOTE: Screws must touch a flat surface on the spit rod (B).

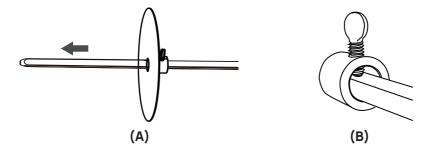


2. Evenly load food on the spit rod (C).

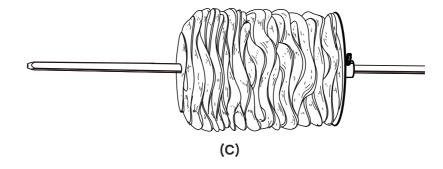

OPERATION TIPS

3. Then slide the spit rod through the other disc **(D)**, tighten the other thumb screw, and place it on the grill.

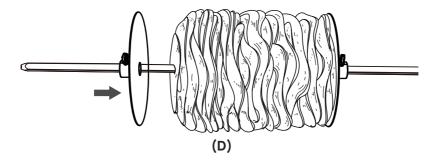

Post-Cooking Safety

- 1. When the food is done, turn off the grill and rotisserie unit motor.
- 2. With heat-resistant gloves on, carefully remove the discs from the grill.
- 3. Place the discs in a safe and stable place to cool.

CARING FOR THE GYROS DISCS

- Clean after each use. And be sure to clean the discs **after they have cooled down to prevent scalding.**
- Soak it in hot soapy water before you clean it.
- The gyros discs is dishwasher safe, however, handwashing using a mild detergent with a non-abrasive nylon brush or sponge is recommended to extend the life of the product.
- · Thoroughly dry before storing.
- With usage, the color of the stainless steel surface will begin to change. This is completely normal and will not change the cooking results.

WARRANTY INFORMATION

TURBRO provides 1-year limited warranty service for Fireside Rotisserie Accessories, from the date of purchase, subject to the following conditions and limitations.

What is covered?

- Any alteration or misuse of the product will nullify this warranty.
- This warranty is non-transferable and is effective for the original buyer from the authorized seller only.
- This warranty is limited to the repair or replacement of part (s) proved to be defective in material or workmanship after said defect is confirmed by the manufacturer's inspection.
- The manufacturer may, at its discretion, fully discharge all obligations with respect to this warranty by refunding the wholesale price of the defective part (s).

What is not covered?

- Damage caused by the owner when attempting to fix or alter the product themselves.
- Damage caused by misuse, abuse, neglect, alterations, or unauthorized repair.
- Natural depreciation.

How to request warranty services?

To obtain the benefit of this warranty please leave a message online (www.turbro.com/pages/contact-us), or send an email to **support@turbro.com**. Our customer service will address your issue within 24 hours.

What will TURBRO do?

- Replace the item.
- Refund the item under certain circumstances.

TURBRO



support@turbro.com.

www.turbro.com