TURBRO

₩Neighborhood

USER MANUAL


CHICKEN COOP HEATER

Model: CP200A

IMPORTANT SAFETY INSTRUCTIONS

- 1. Use in the chicken coop, or beside the dog bed or cat bed (Remember to keep a safe distance from the panel).
- 2. This product is not intended for use in bathrooms, laundry areas, and similar locations. 3. Do not place this product where it may fall into a bathtub or other water container.
- 4. This product is hot when in use. To avoid burns, do not touch surfaces with bare skin.
- 5. Do not operate this product with a damaged power cord or plug, after the appliance malfunctions, or the product is damaged. Any repairs to this appliance should be carried out by a qualified service person.
- 6. To disconnect this product, turn the product off from the power switch, then remove the power plug from the outlet.
- 7. Always unplug this product if you do not plan to use it for a long period of time.
- 8. Don't place anything on the surface or block the front side, as it may cause overheating.
- 9. Stop using if any damage appears on the heating panel, power cord or other electrical parts of the heating panel.
- 10. Children and vulnerable people should be supervised to ensure they do not play with the appliance.

SPECIFICATIONS

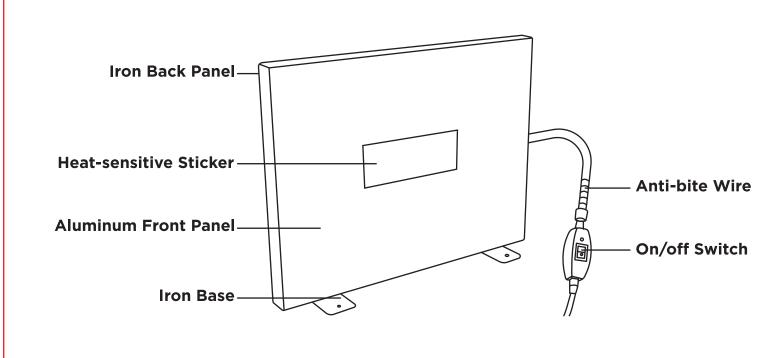

Model Number	CP200A
Power Supply	AC 120V 60Hz
Rated Power	100W/200W
Cord Length	9.8 Feet/ 3 Meters
Item Dimensions	15.7 x 11.8 x 1 Inch
Item Weight	4.7 Lbs

INSTALLATION METHODS

Standing Style

Step 1

Get the base ready



Step 2

Step 3 Fix the tripod to the floor (if using in a chicken coop) with screws



Ready to use


Step 4



Fix the base to the back plate with screws

Wall-Mounted Style


Drill two holes in the wall with a distance of 12.60 inch/32cm between each hole

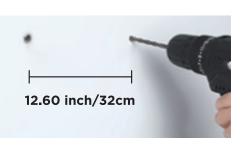

Step 3

Align the larger hole in the back plate with the screws

* Do not need to fix the base.

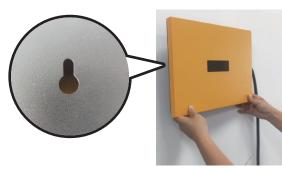

OPERATION

Using the Control Button

Working Mode

: Low/100W

: High/200W O: Turn off

Power Button

Switch the control button to " **I**/**II** " to turn on the product and choose the heating mode.

2. Power off:

Switch the control button to "O" to turn off the product.

- The heat-sensitive sticker will become orange when the panel is heated.
- The color changes on the sticker with a temperature change from 104-167°F/40-75°C


Step 2

Drive the screws into the holes




Step 4

Pull down to fix the heating plate

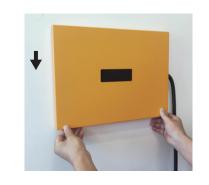

200W/100W



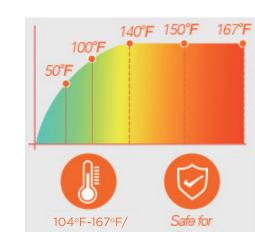

CLEANING AND MAINTENANCE

To clean your appliance, please follow the steps below:

- 1. Unplug the power cord before cleaning your heater.
- 2. Make sure the heater is cool before cleaning.
- 3. To keep the heater clean, the outer shell maybe cleaned with a soft, damp cloth. You may use a mild detergent if necessary.
- 4. After cleaning, dry the unit with a soft cloth. (CAUTION:DO NOT let liquids enter the heater.)
- 5. Do not immerse the heater in water.
- 6. Wait until the heater is completely dry before use.

Store the heater in a cool, dry location when not in use to prevent dust and dirt build up. Use the packaging box to store.

LIMITED WARRANTY

We provide a 1 year warranty on this product. For more information, please visit www.turbro.com/warranty.

What's covered?

Defects due to faulty materials and/or workmanship of the product

What's not covered?

- 1. Damage caused by the owner when attempting to fix or altering the product by himself
- 2. Damage caused by misuse, abuse, neglect, alterations, or unauthorized repair.
- 3. Natural depreciation.

Warranty Period

Warranty becomes effective from the date of original purchase and will last for 1 year.

Who's covered?

This limited warranty is only effective for the original purchaser. It is non-transferable.

How to request warranty services?

To obtain the benefit of this warranty, please email **support@turbro.com**. Our customer service team will address your issue as soon as possible!

support@turbro.com

(x) www.turbro.com

(323) 438-3334

TURBRO **CHICKEN COOP HEATER** Model: CP200A