
USER MANUAL

TURBRO

TV STAND

MODEL NO: FIRESIDE FS48

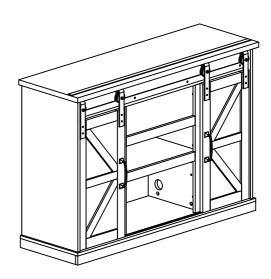

IMPORTANT

READ ALL INSTRUCTIONS BEFORE ASSEMBLING YOUR TV STAND. FAILURE TO FOLLOW INSTRUCTIONS MAY LEAD TO DAMAGE TO TV STAND OR PERSONAL INJURY.

KEEP THIS USER MANUAL FOR FUTURE REFERENCE.


Contents

Safety Instructions	
Pre-Assembly	02
Tools Required	02
Hardware Included	03
Parts List ·····	05
Assembly	07
Care and Maintenance	25
Warranty Information	26

Safety Instructions

Please read the following instructions before attempting to assemble, operate, or install this product. Save these instructions for future reference.

WARNING: Use only with flat panel TVs and audio/video equipment meeting recommended size and weight limits. Never use it with any larger/heavier than recommended flat panel TVs or equipment. To avoid instability, place flat panel TV in the centre of the unit; the base of the television must be able to rest on the supporting surface of the unit without hanging over the edge. Improperly positioned flat panel TVs, or other equipment that exceed recommended size and weight limits could fall off or break the unit, causing possible serious injury.

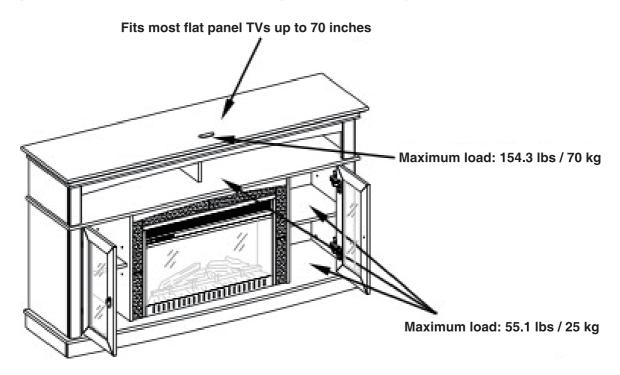

Pre-Assembly


Before assembly, remove all parts from the package and compare with the below parts list. If any part appears missing or damaged, do not assemble this product and contact our customer service team at support@turbro.com.

TOOLS REQUIRED



Phillips screwdriver (not included)


HARDWARE INCLUDED

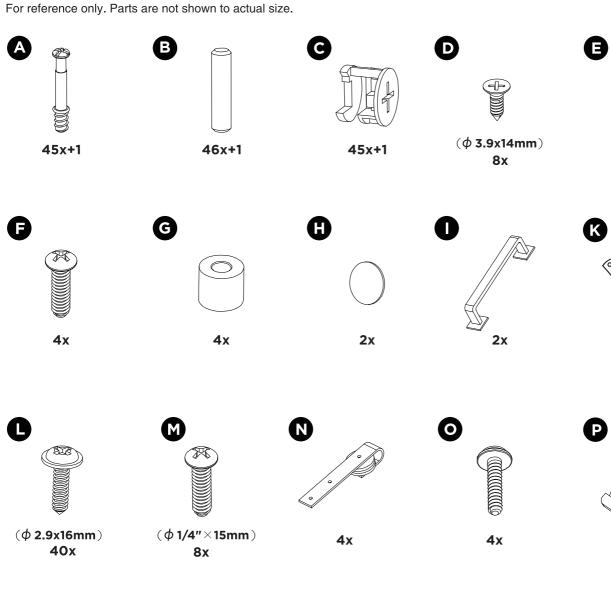

2x+2


2x, 4x

4x

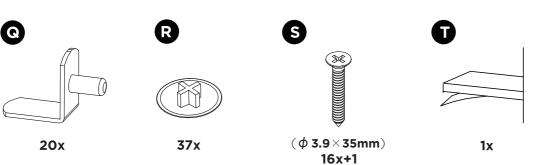

Part	Description	Quantity
А	Cam Bolt	45 + 1 (extra)
В	Wooden Dowel	46 + 1 (extra)
С	Cam Lock	45 + 1 (extra)
D	Screw	8
E	Drywall Anchor Kit	2 + 2
F	Screw	4
G	Spacer	4
Н	Protective Sticker	2
1	Door Handle	2
K	Anti-tilt Nylon Strip and Metal Ring	2 + 4
L	Bolt	40
M	Screw	8
N	Pulley Joint	4
0	Bolt	4
Р	Guide Rail Joint	4
Q	Shelf Support Bracket	20
R	Sticker	37
S	Bolt	16 + 1 (extra)
Т	Anti-slip Wooden Strip	1

PARTS LIST

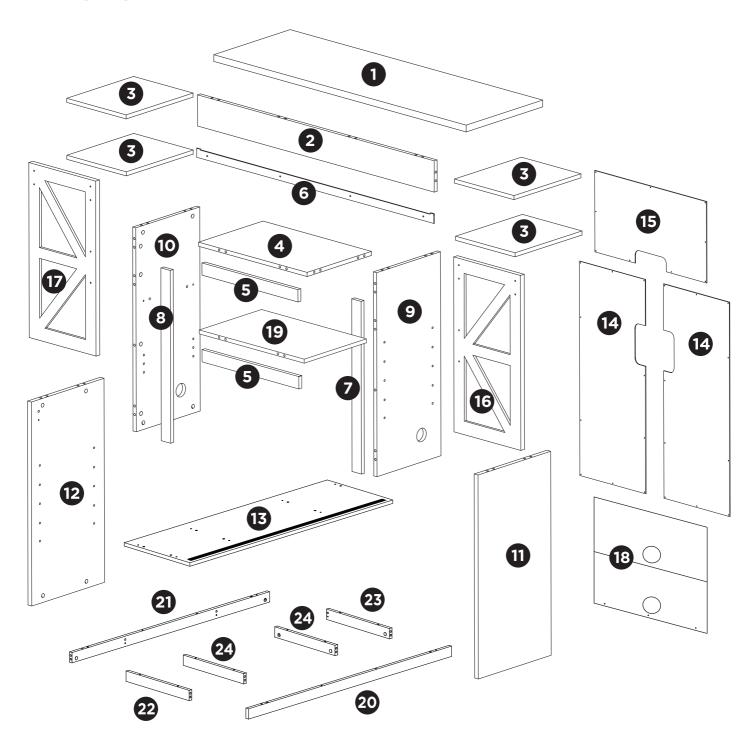

Part	Description	Quantity
1	Top Panel	1
2	Top Crossbar	1
3	Removable Shelves	4
4	Fixed Shelf	1
5	Center Crossbar	2
6	Sliding Door Track	1
7	Right Vertical Stretcher	1
8	Left Vertical Stretcher	1
9	Right Inner Panel	1
10	Left Inner Panel	1
11	Right Outer Panel	1
12	Left Outer Panel	1
13	Base Panel	1
14	Lower Rear Panel	2
15	Top Rear Panel	1
16	Right Sliding Door	1
17	Left Sliding Door	1
18	Center Rear Panel	1
19	Removable Panel	1
20	Bottom Front Bar	1
21	Bottom Back Bar	1
22	Bottom Left Bar	1
23	Bottom Right Bar	1
24	Bottom Middle Stripe	2

INSTALLATION WARNINGS

- The TV stand is heavy and should be assembled near its desired location.
- It is recommended that two people move the fully-assembled TV stand to prevent injury.
- Make sure that the unit is installed so that any power cords are not compressed against or caught on the TV stand and that it has an unobstructed path to a grounded power outlet.

BEFORE INSTALLATION


Open the unit and check carefully for visible damage. If you have any problems with installation, operation, missing parts, or other damage, please contact the TURBRO customer service team. Do not dispose of packaging until you are satisfied with your fireplace. Contact the TURBRO customer service team (support@turbro.com) before returning the unit.


Unpack the unit and confirm that you have all the hardware and parts listed. Assemble the unit on a carpeted floor or the empty box to avoid any scratches.

Note: This TV stand uses cam bolts for assembly. During installation, do not fully tighten cam locks until you finish assembly. This will help make assembly much easier.

STEP 1


Insert wooden dowels (B) and cam bolts (A) into the designated holes on the bottom front bar (20) and the bottom back bar (21).

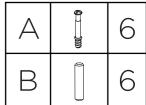


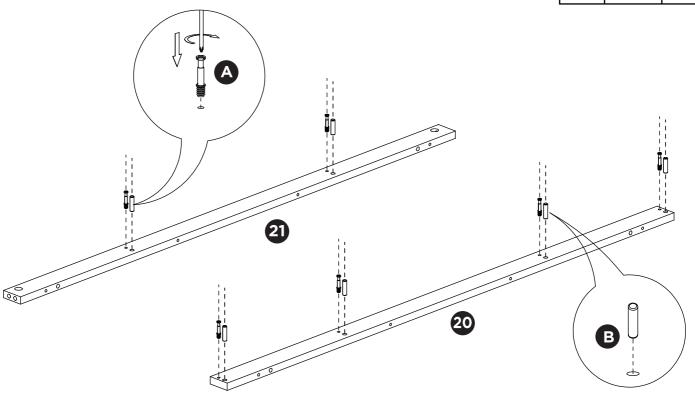

STEP 2

 
Insert wooden dowels (B) and cam bolts (A) into the designated holes on the bottom left bar (22) and the bottom right bar (23).




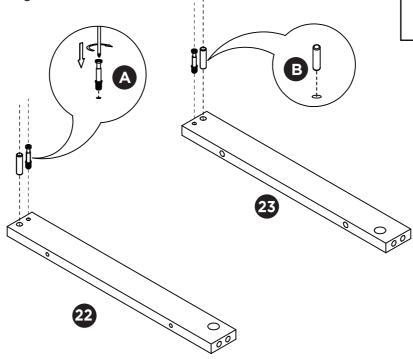

STEP 3

 Attach the bottom left bar (22) and the bottom right bar (23) to the bottom back bar (21).




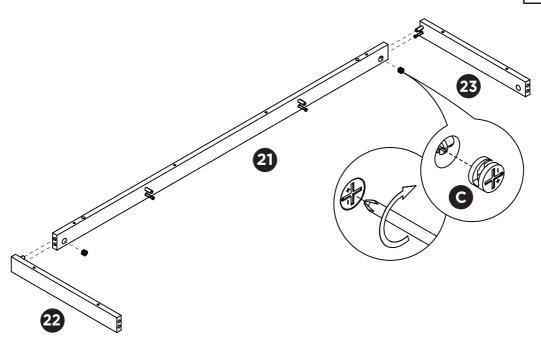



STEP 4 Attach the bottom middle stripes (24) to the bottom back bar (21).

STEP 5

Attach the bottom front bar (20) to the bottom left bar (22), the bottom right bar (23) and the bottom middle stripes (24)

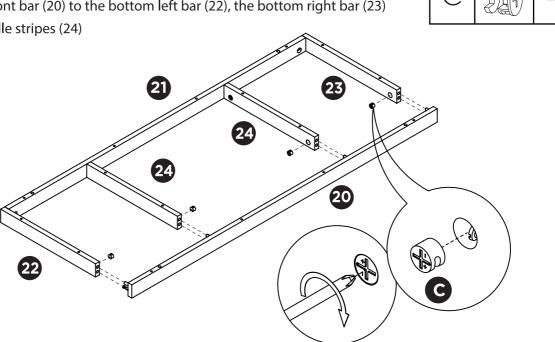


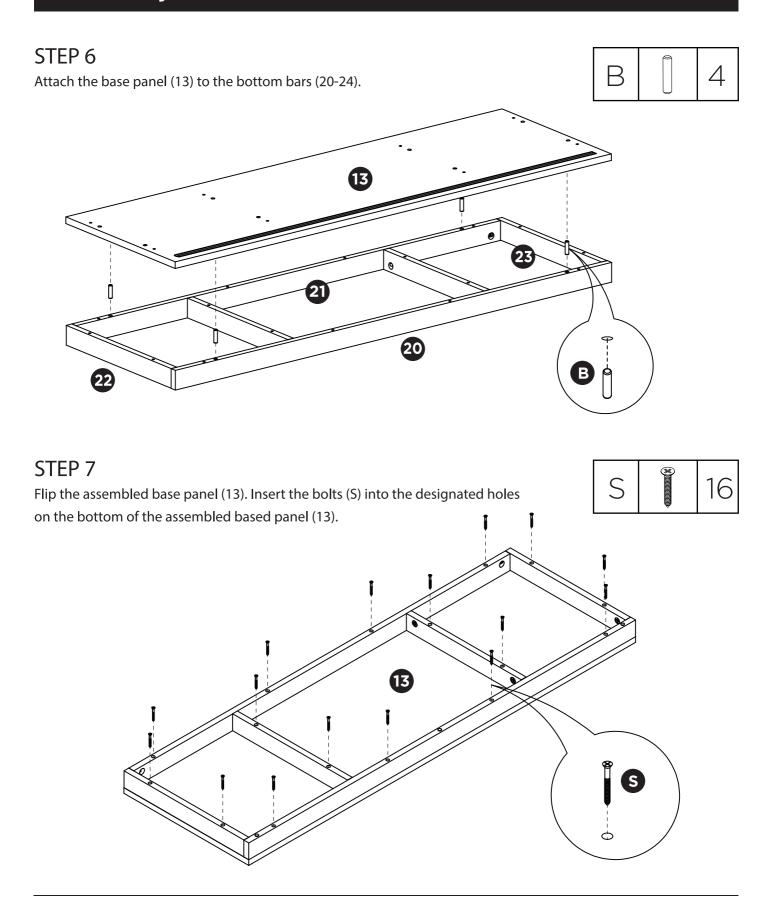

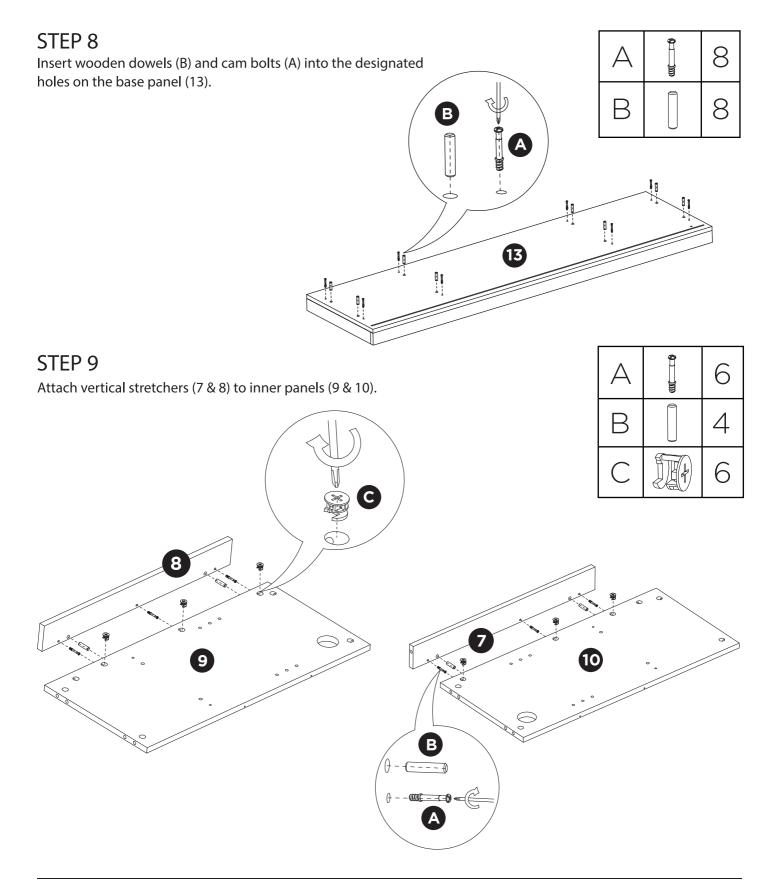


STEP 10 Attach center crossbars (5) to fixed shelf (4) and removable panel(19).


STEP 11 4 Connect now-assembled fixed shelf (4) to inner panels (9 & 10). 4 STEP 12 Attach the now-assembled inner panels and shelf to the base panel (13).

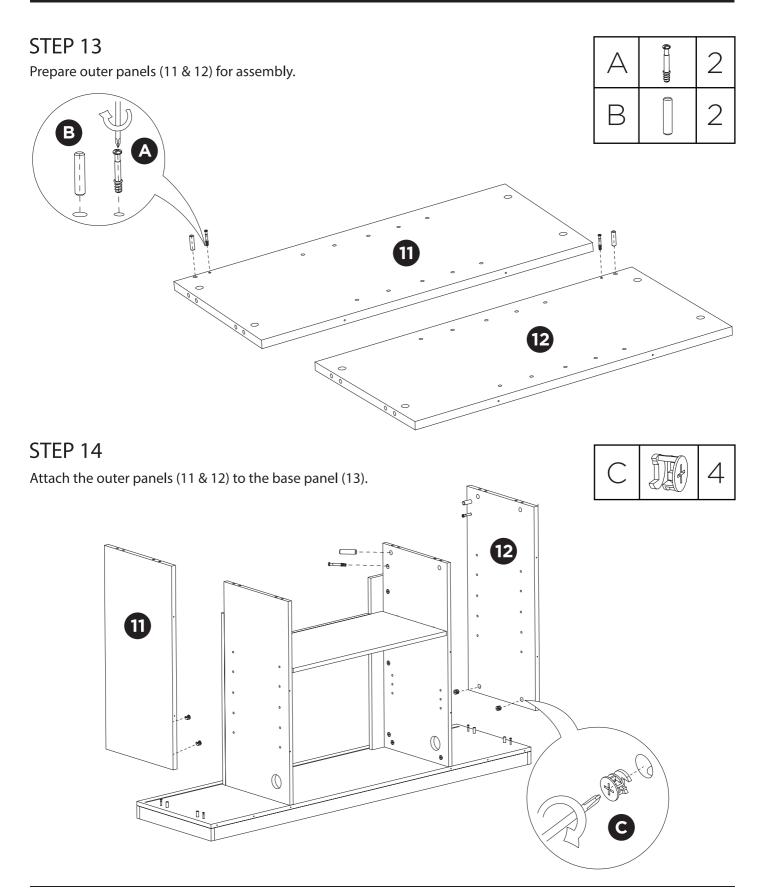

STEP 15

- Attach the sliding door track (6) to the top crossbar (2).
- The spacers (G) should go between the sliding door track (6) and top crossbar (2) and attached with 4 (F) screws.

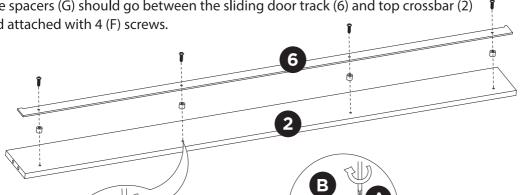


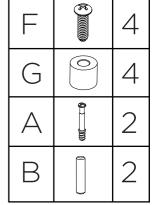



STEP 16

Attach the top crossbar (2) to inner panels (9 & 10) and outer panels (11 & 12).

 G



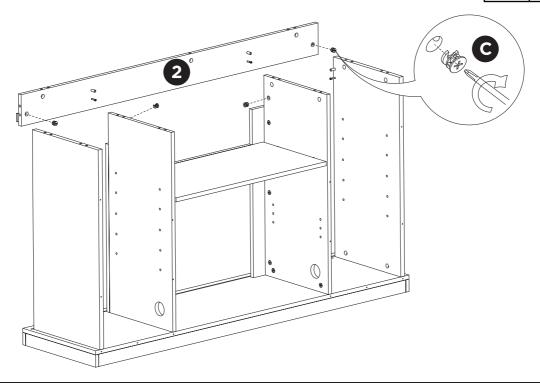

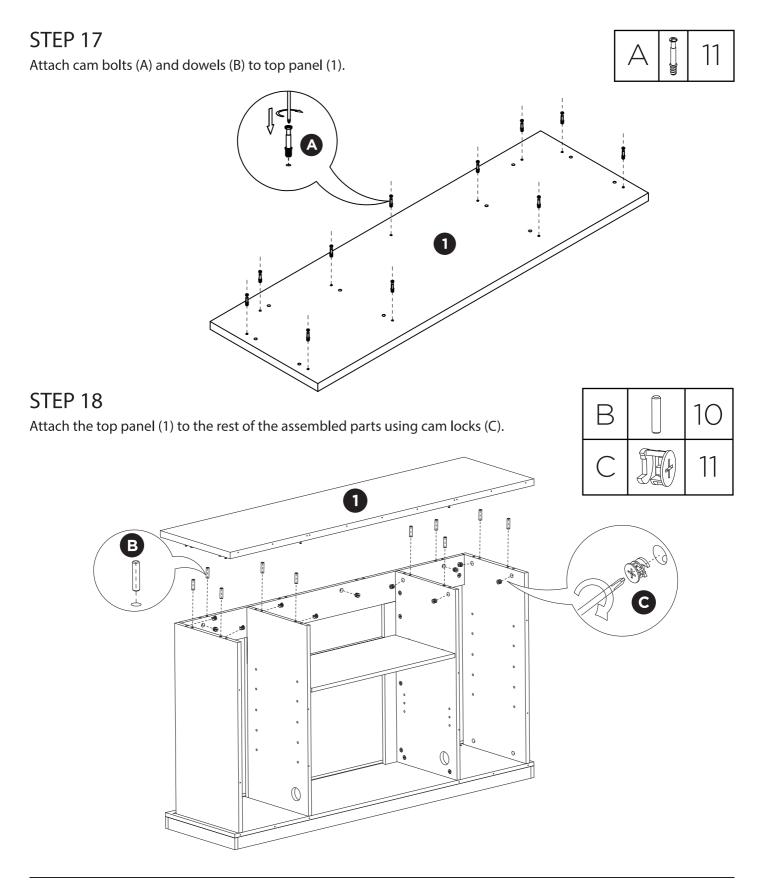


STEP 19

● Assemble the right sliding door (16) by attaching the sliding assembly (N/P) to both sides of the door.

M


4

- Attach the handle (I) to the front of the door by screwing in from the back.
- Attach the protective sticker (H) to the top left of and bottom left of the sliding door.

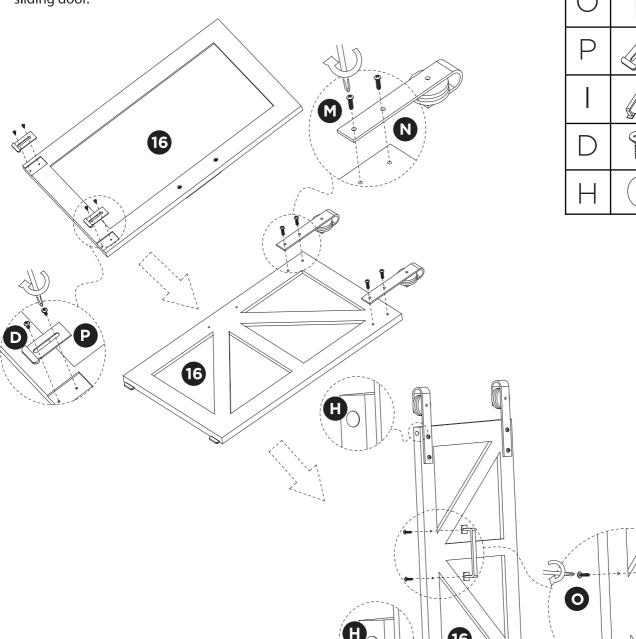

STEP 20


- Assemble the left sliding door (17) by attaching the sliding assembly (N/P) to both sides of the door.
- Attach the handle (I) to the front of the door by screwing in from the back.

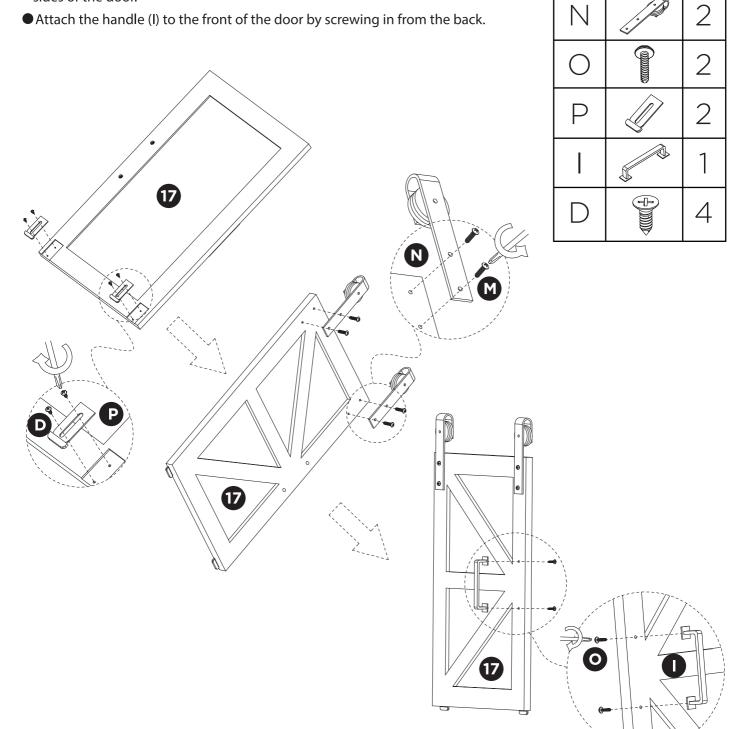

4


STEP 21

• Attach sliding door (17).

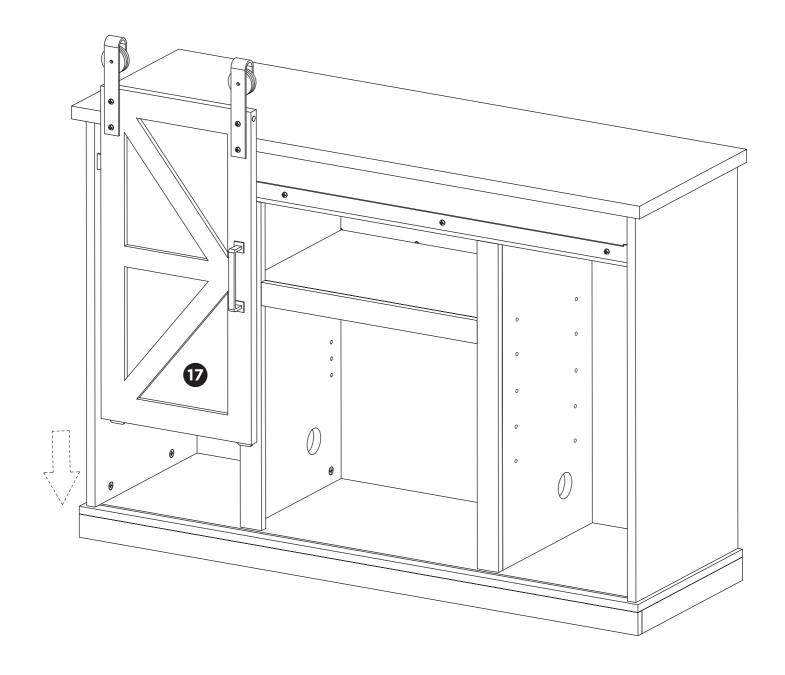


STEP 22


• Attach sliding door (16).

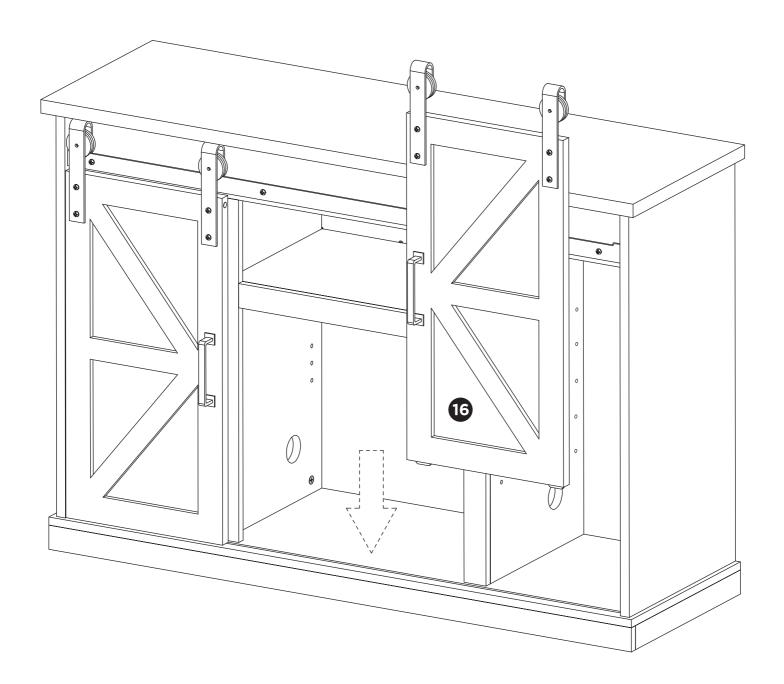

STEP 23

 
Insert shelf support brackets (Q) from rear, adjusting for the shelf height you desire. These can be removed and readjusted later if needed. Put the stickers (R) to cover and hide the srews.




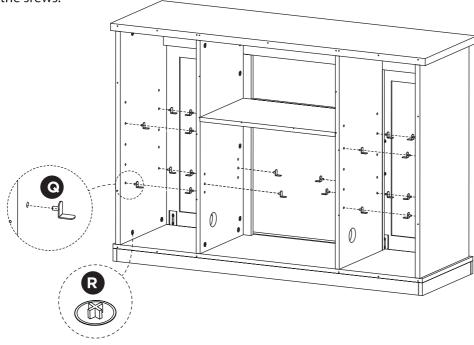



STEP 24

Insert the removable shelves (3) and removable panel (19) onto the shelf support brackets (Q).

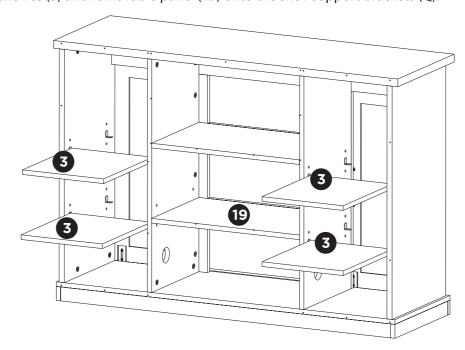

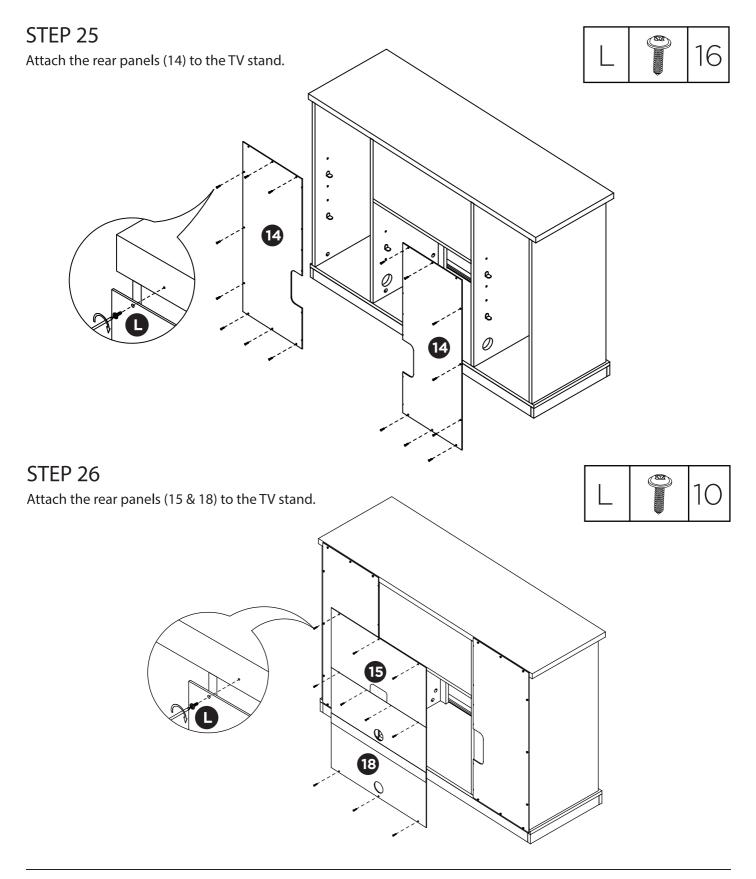

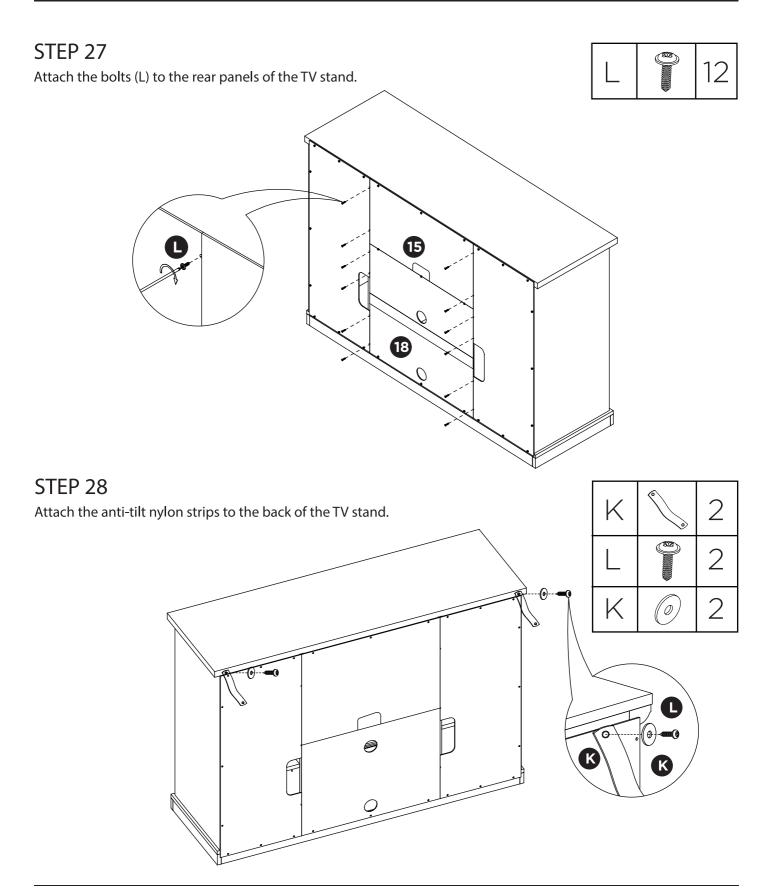

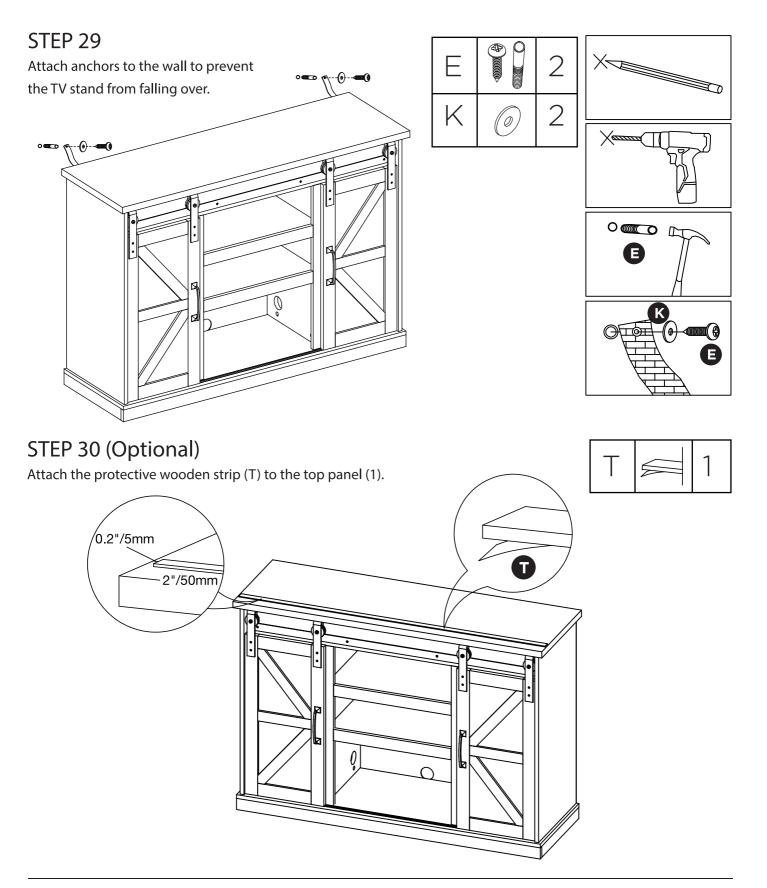

Care and Maintenance

It is best to keep your furniture in a climate-controlled environment. Extreme temperature and humidity changes can cause fading, warping, shrinking and splitting of wood. It is advised to keep furniture away from direct sunlight as sun may damage the finish.

Proper care and cleaning at home will extend the life of your purchase. Following these important and helpful tips will enhance your furniture as it ages.

- •Use a soft, clean cloth that will not scratch the surface when dusting.
- Use of furniture polishes is not necessary. Should you choose to use polishes, test first in an inconspicuous area.
- •Using solvents of any kind on your furniture may damage the finish.
- Never use water to clean your furniture as it may cause damage to the finish.
- Always use coasters under beverage glasses and flowerpots.
- Liquid spills should be removed immediately. Using a soft clean cloth, blot the spill gently. Avoid rubbing.
- Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture finish.
- Stains or marks from crayons or ink markers will be difficult to remove.
- Check bolts/screws periodically and tighten them if necessary.

Warranty Information

TURBRO provides a 1-year limited warranty for TURBRO TV Stand, from the date of purchase, subject to the following conditions and limitations outlined below.

WHAT IS COVERED?

- This warranty is limited to the repair or replacement of part(s) proved to be defective in material or workmanship, after said defect is confirmed by the manufacturer's inspection.
- The manufacturer may, at its discretion, fully discharge all obligations with respect to this warranty by refunding the wholesale price of the defective part(s).

WHAT IS NOT COVERED?

- Damage caused by the owner when attempting to fix or alter the product themselves.
- Damage caused by misuse, abuse, neglect, alterations, or unauthorized repair.
- Natural depreciation.
- Any alteration misuse of the product will nullify this warranty.
- This warranty is non-transferrable, which is effective for the original buyer from the authorized seller only.

HOW TO REQUEST WARRANTY SERVICES?

● To obtain the benefit of this warranty, please leave a message online (www.turbro.com/contact), or send an email to support@turbro.com.

WHAT WILL TURBRO DO?

- Repair the item.
- Replace the item if not repairable.
- Refund the item under certain circumstances.

TURBRO



© Katmai Technology Limited

support@turbro.com
www.turbro.com

