
USER MANUAL

TURBRO

TV STAND

MODEL NO: FIRESIDE FS58

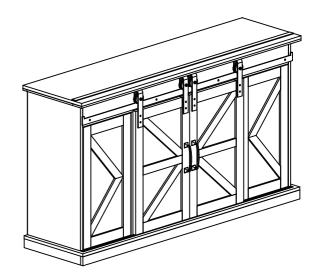

IMPORTANT

READ ALL INSTRUCTIONS BEFORE ASSEMBLING YOUR TV STAND. FAILURE TO FOLLOW INSTRUCTIONS MAY LEAD TO DAMAGE TO TV STAND OR PERSONAL INJURY.

KEEP THIS USER MANUAL FOR FUTURE REFERENCE.


Contents

Safety Instructions	02
Pre-Assembly ······	02
Tools Required······	02
Hardware Included	03
Parts List	05
Assembly ·····	06
Care and Maintenance	27
Warranty Information	28

Safety Instructions

Please read the following instructions before attempting to assemble, operate, or install this product. Save these instructions for future reference.

WARNING: Use only with flat panel TVs and audio/video equipment meeting recommended size and weight limits. Never use it with any larger/heavier than recommended flat panel TVs or equipment. To avoid instability, place flat panel TV in the centre of the unit; the base of the television must be able to rest on the supporting surface of the unit without hanging over the edge. Improperly positioned flat panel TVs, or other equipment that exceed recommended size and weight limits could fall off or break the unit, causing possible serious injury.

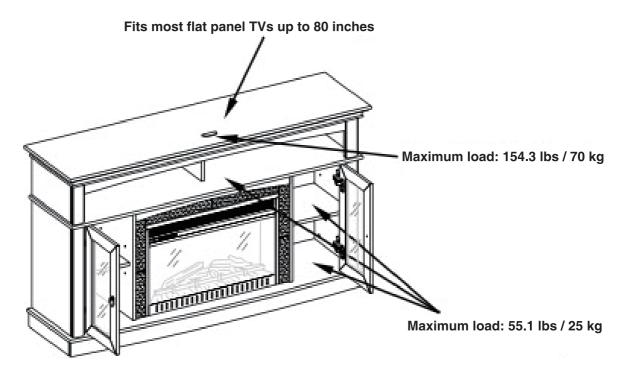

Pre-Assembly

Before assembly, remove all parts from the package and compare with the below parts list. If any part appears missing or damaged, do not assemble this product and contact our customer service team at support@turbro.com.


TOOLS REQUIRED



Phillips screwdriver (not included)


HARDWARE INCLUDED

For reference only. Parts are not shown to actual size.

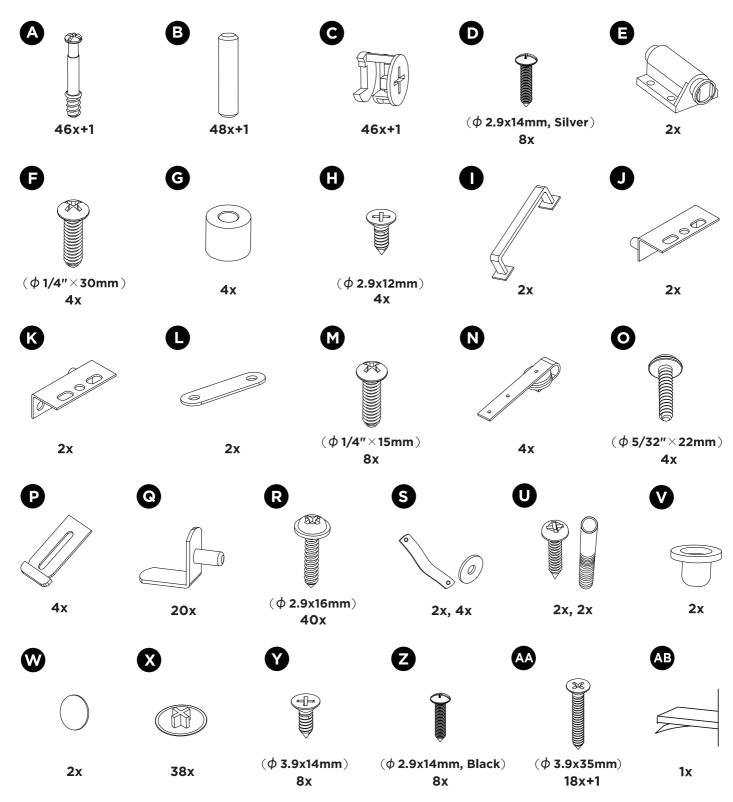

Part	Description	Quantity
А	Cam Bolt	46 + 1 (extra)
В	Wooden Dowel	48 + 1 (extra)
С	Cam Lock	46 + 1 (extra)
D	Screw	8
Е	Cabinet Magnetic Catch	2
F	Screw	4
G	Spacer	4
Н	Screw	4
I	Door Handle	2
J	Pivot Hinge-Left	2
K	Pivot Hinge-Right	2
L	Long Washer	2
М	Screw	8
N	Pulley Joint	4
0	Bolt	4
Р	Guide Rail Joint	4
Q	Shelf Support Bracket	20 + 1 (extra)
R	Bolt	40
S	Anti-tilt Nylon Strip and Metal Ring	2, 4
U	Drywall Anchor Kit	2 + 2
V	Washer	2
W	Protective Sticker	2
Х	Sticker	38
Υ	Bolt	8
Z	Screw	8
AA	Screw	18 + 1 (extra)
AB	Anti-slip Wooden Strip	1

PARTS LIST

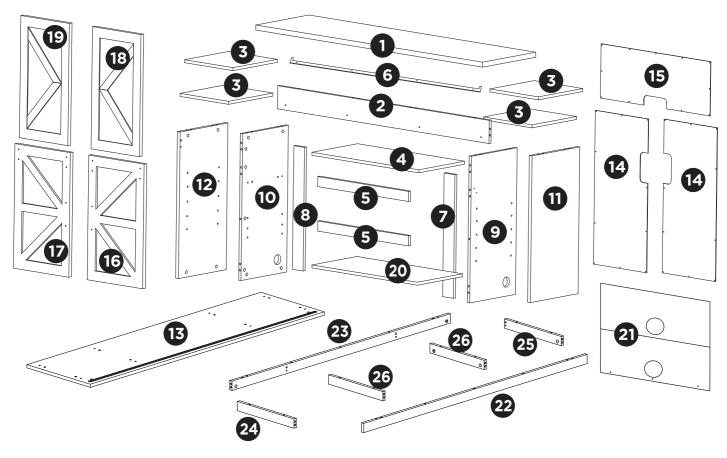

Part	Description	Quantity
1	Top Panel	1
2	Top Crossbar	1
3	Removable Shelves	4
4	Fixed Shelf	1
5	Center Crossbar	2
6	Sliding Door Track	1
7	Right Vertical Stretcher	1
8	Left Vertical Stretcher	1
9	Right Inner Panel	1

Part	Description	Quantity
10	Left Inner Panel	1
11	Right Outer Panel	1
12	Left Outer Panel	1
13	Base Panel	1
14	Lower Rear Panel	2
15	Top Rear Panel	1
16	Right Sliding Door	1
17	Left Sliding Door	1
18	Right Swinging Door	1
19	Left Swinging Door	1
20	Removable Panel	1
21	Center Rear Panel	1
22	Bottom Front Bar	1
23	Bottom Back Bar	1
24	Bottom Left Bar	1
25	Bottom Right Bar	1
26	Bottom Middle Stripe	2

Assembly

INSTALLATION WARNINGS


- The TV stand is heavy and should be assembled near its desired location.
- It is recommended that two people move the fully-assembled TV stand to prevent injury.
- Make sure that the unit is installed so that any power cords are not compressed against or caught on the TV stand and that it has an unobstructed path to a grounded power outlet.


BEFORE INSTALLATION


Open the unit and check carefully for visible damage. If you have any problems with installation, operation, missing parts, or other damage, please contact the TURBRO customer service team. Do not dispose of packaging until you are satisfied with your fireplace. Contact the TURBRO customer service team (support@turbro.com) before returning the unit.


Unpack the unit and confirm that you have all the hardware and parts listed. Assemble the unit on a carpeted floor or the empty box to avoid any scratches.


Note: This TV stand uses cam bolts for assembly. During installation, do not fully tighten cam bolts until you finish assembly. This will help make assembly much easier.

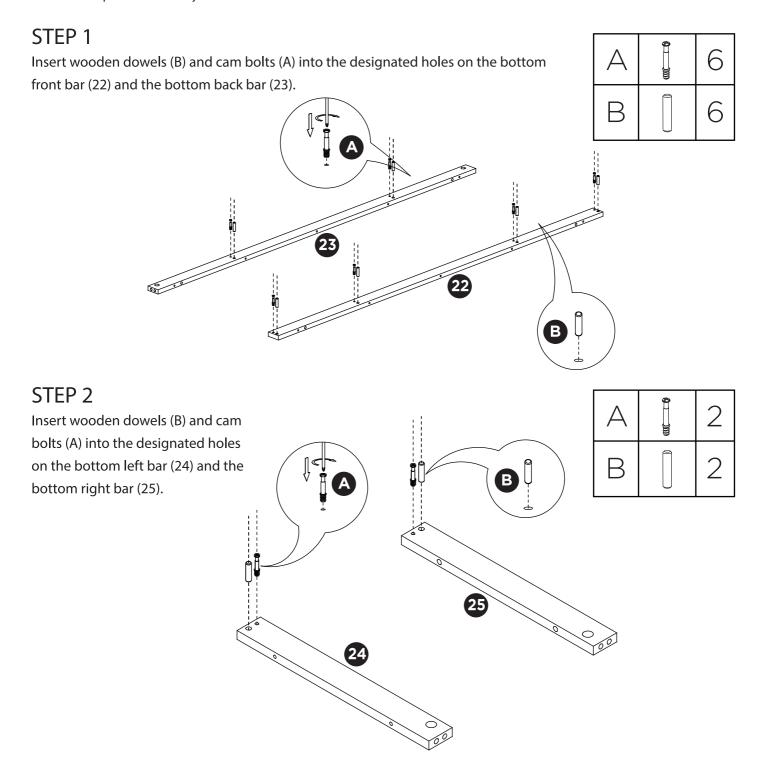

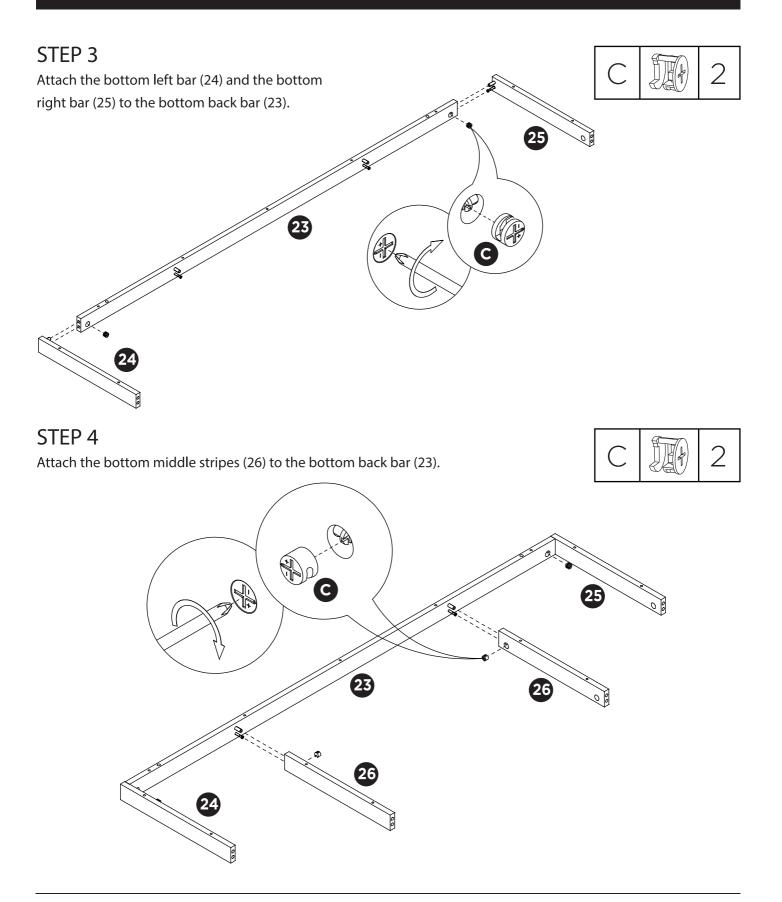


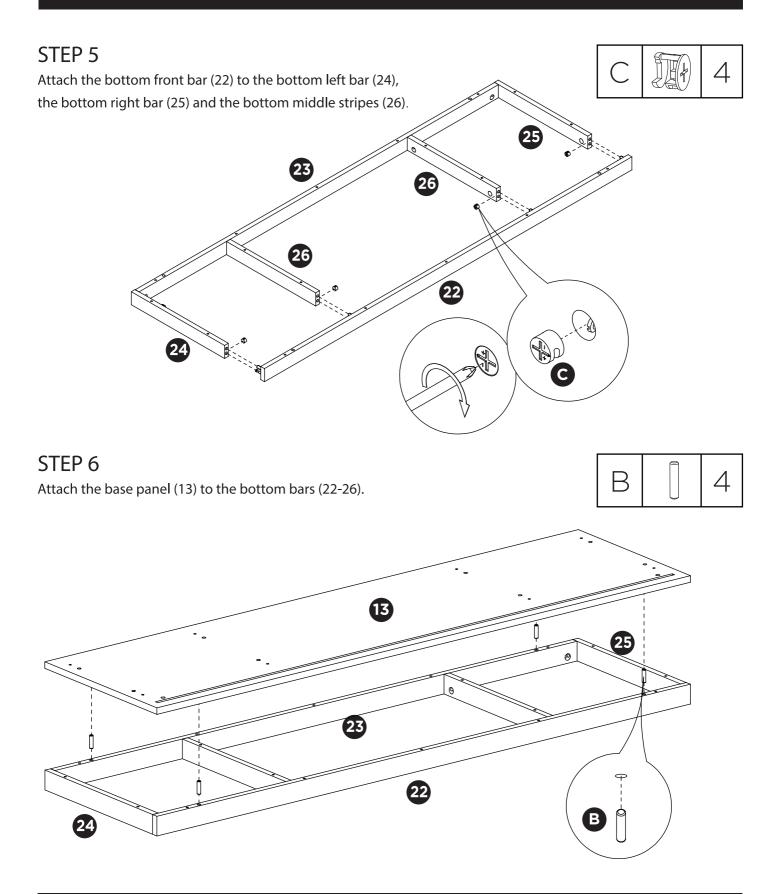

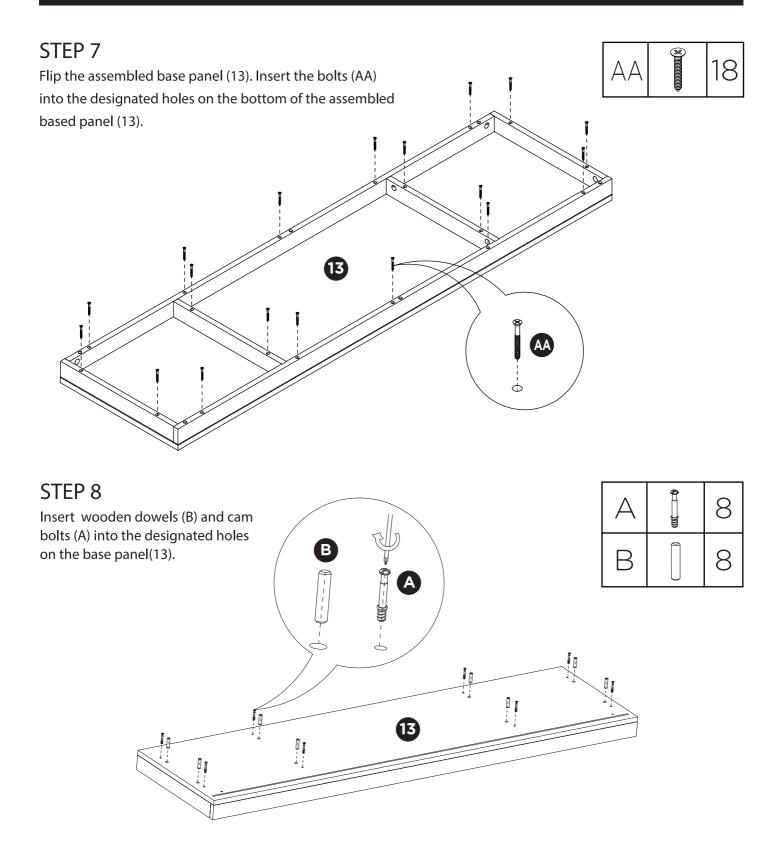

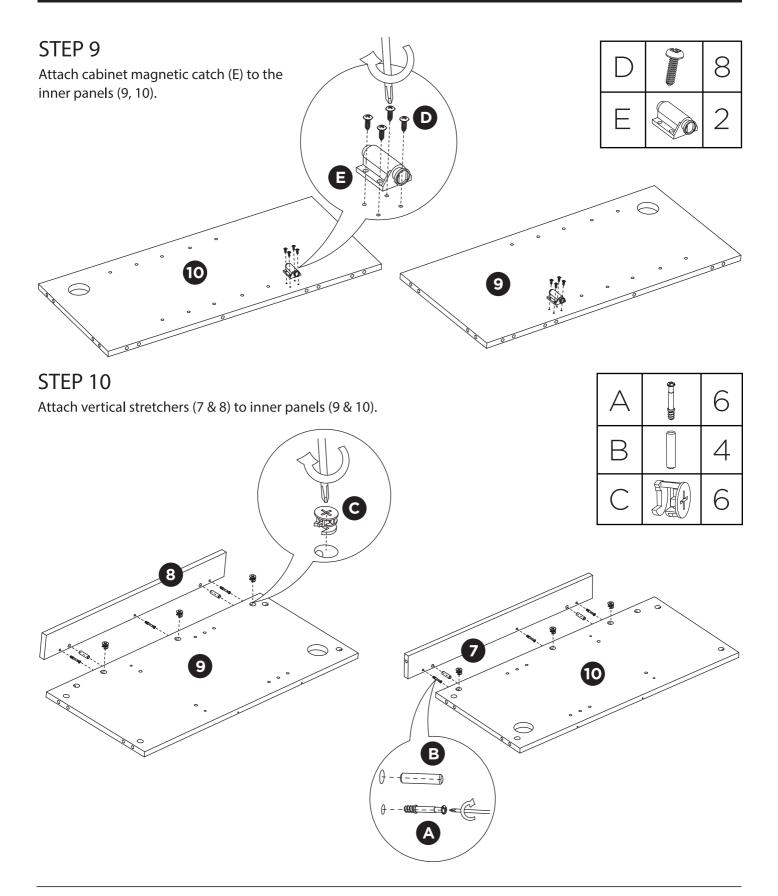



STEP 11 Attach center crossbars (5) to fixed shelf (4) and removable panel (20).

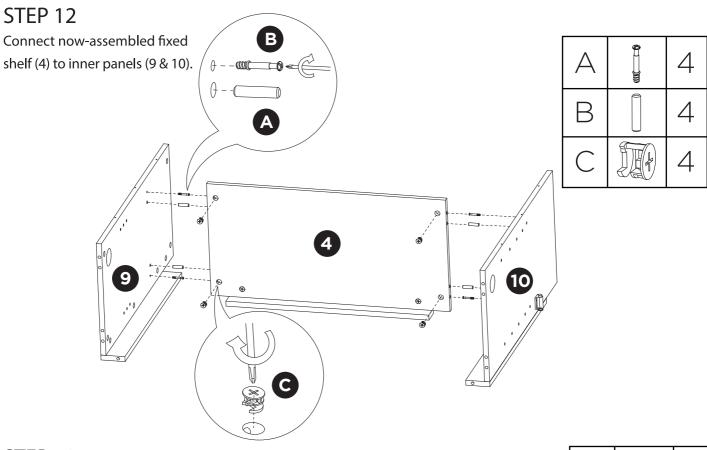


STEP 13

 
Attach the now-assembled inner panels and shelf to the base panel (13).



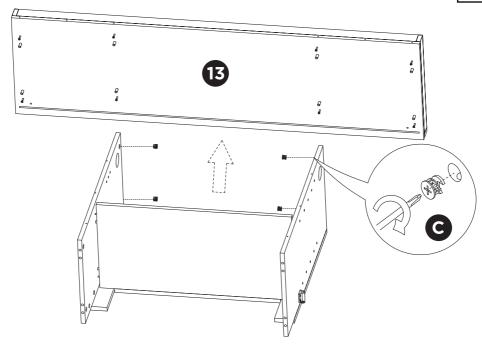

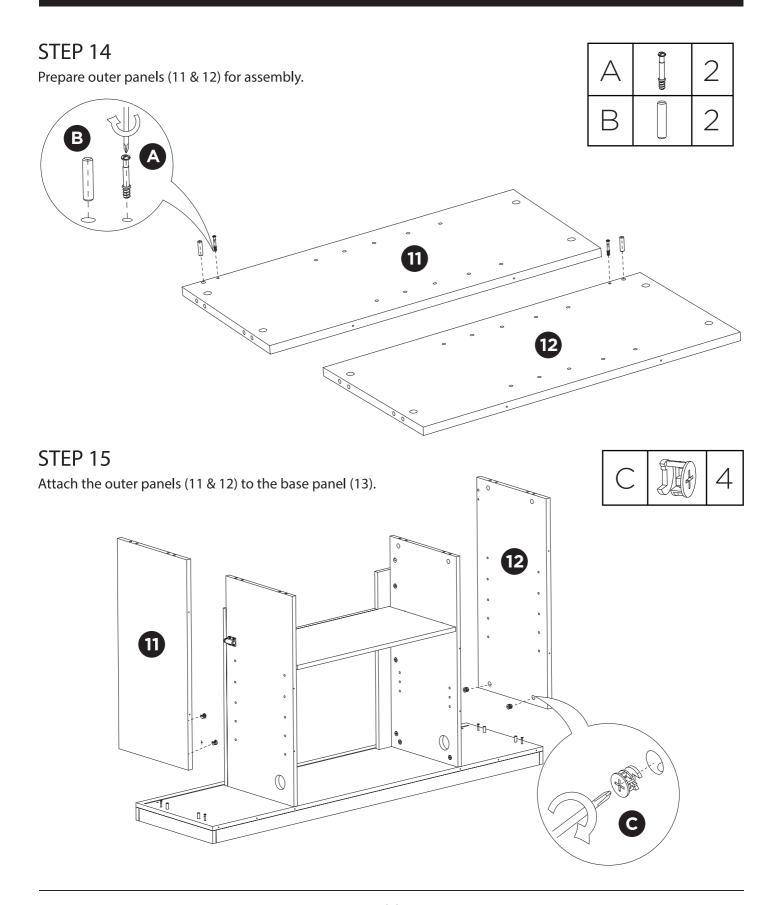


STEP 16 4 • Attach the sliding door track (6) to the top crossbar (2). • The spacers (G) should go between the sliding door track (6) and top crossbar (2) and attached with 4 (F) screws. 4 G А 2 G STEP 17 Attach top crossbar (2) to inner panels (9 & 10) and outer panels (11 & 12). 10 1 0

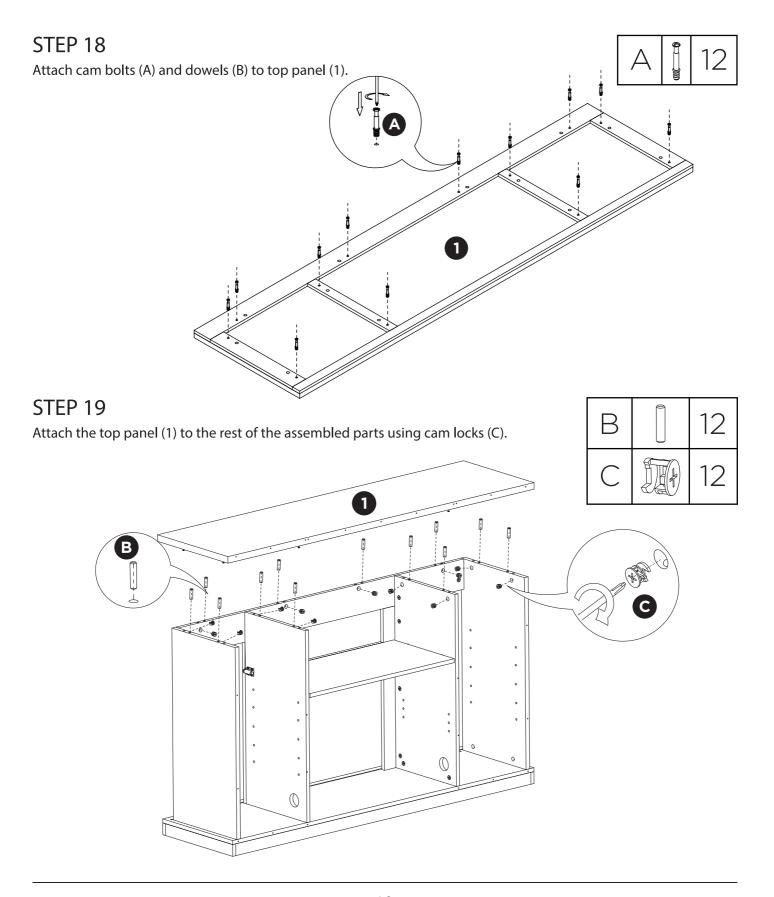


STEP 20


- Attach pivot hinges (J & K) to swinging doors (18 & 19).
- Pivot Hinge J goes with door 19, pivot hinge K goes with door 18.

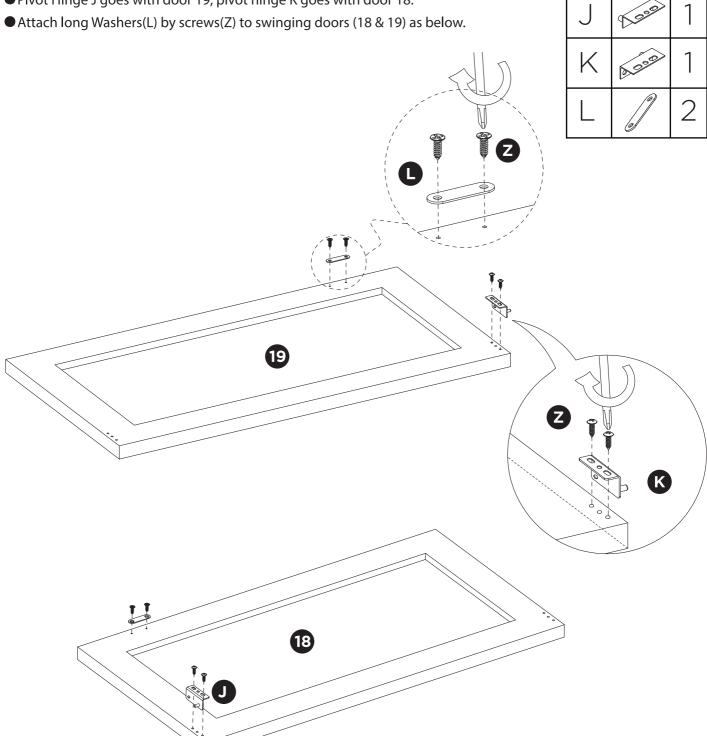

8


- Attach the top of the swinging doors (18 & 19) to both sides of the assembled TV stand.
- Put the washers (V) and the pivot hinges (J & K) to the bottom of the assembled TV stand and push the swinging doors (18 & 19) to connect with the pivot hinges (J & K).

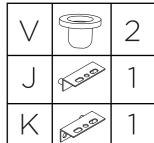


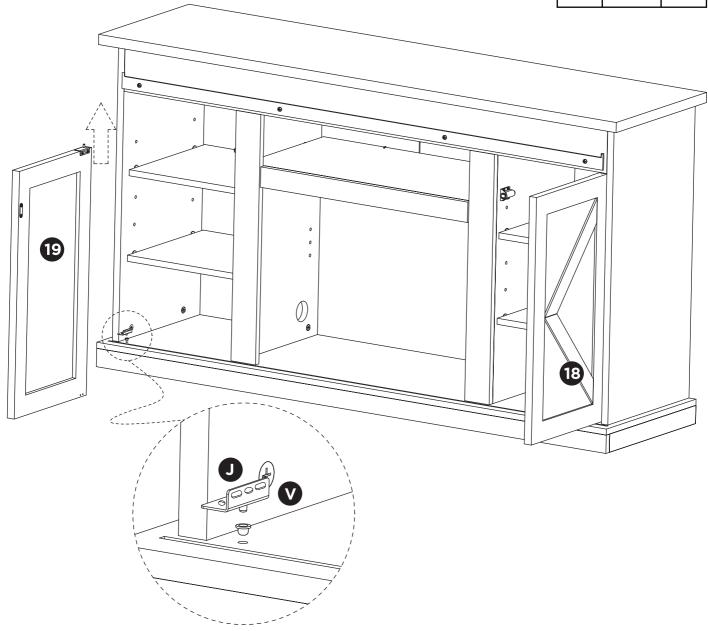


STEP 22

 • Screwing the pivot hinges (J & K) on the bottom of the swinging doors (18 & 19).




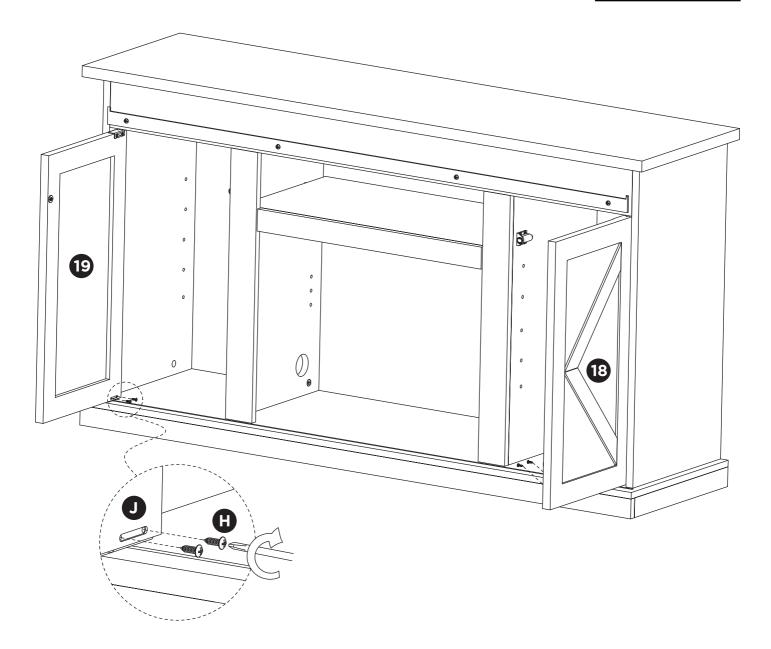


- Assemble the right sliding door (16) by attaching the sliding assembly (N/P) to both sides of the door.
- Attach the handle (I) to the front of the door by screwing in from the back.
- Attach the protective sticker (W) to the top left of and bottom left of the sliding door.

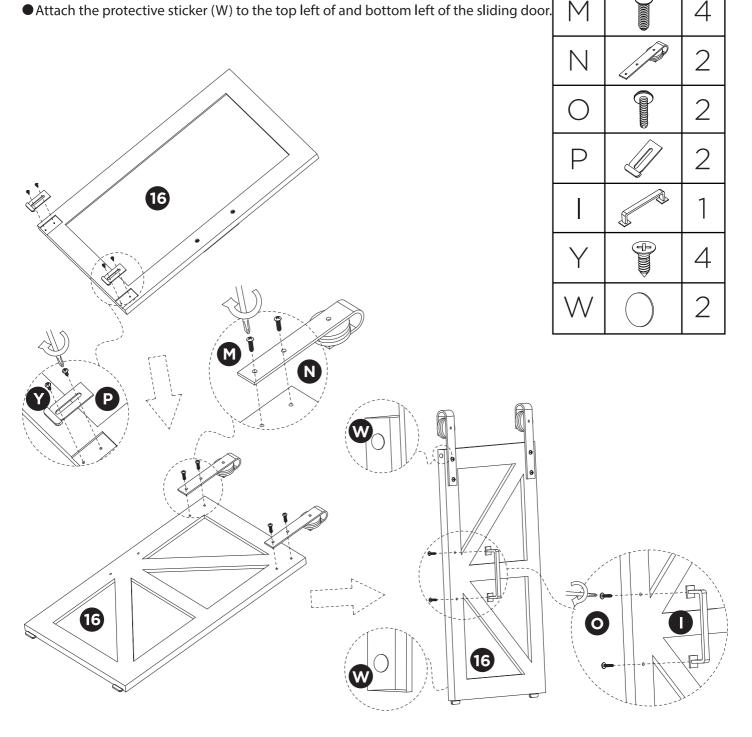


- Assemble the left sliding door (17) by attaching the sliding assembly (N/P) to both sides of the door.
- Attach the handle (I) to the front of the door by screwing in from the back.

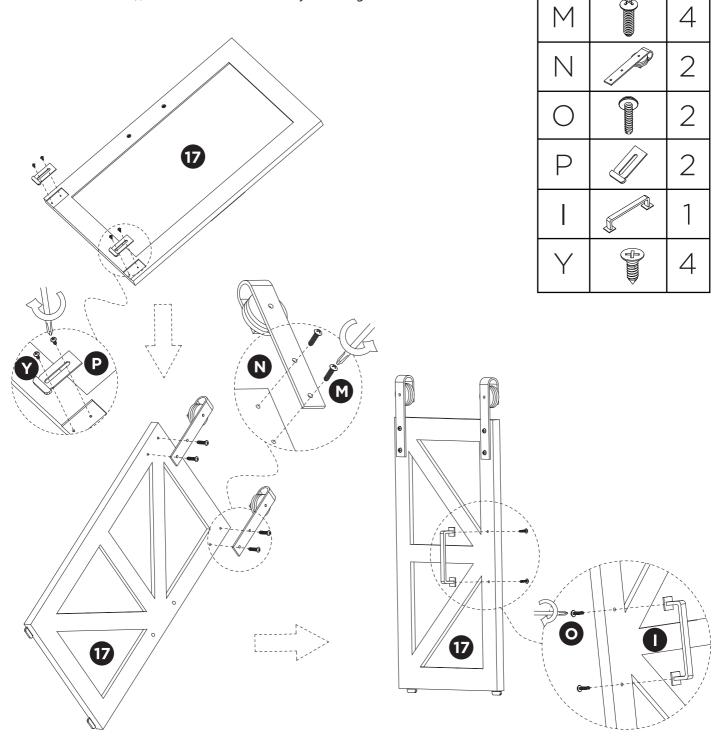

STEP 25

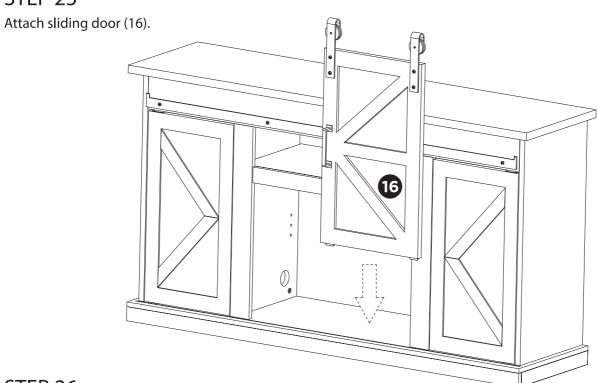


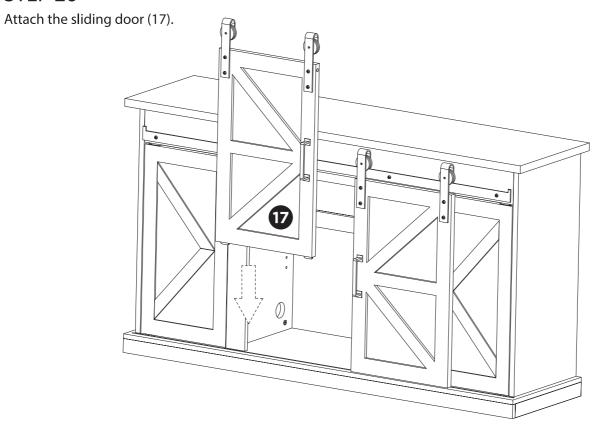



STEP 27


20 Insert shelf support brackets (Q) from rear, adjusting for the shelf height you desire. These can be removed and readjusted later if needed. Put the stickers (R) to cover 38 and hide the srews. X STEP 28

Insert the removable shelves (3) & removable panel (20) onto the shelf support brackets (Q).

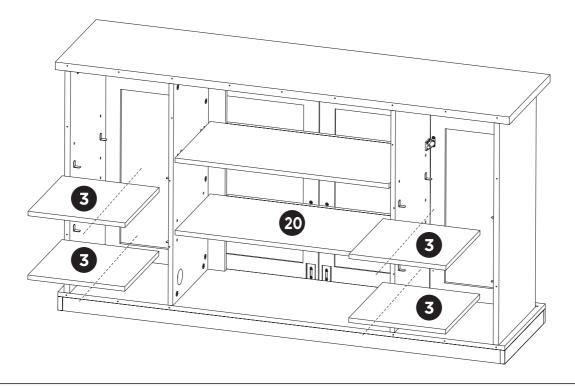

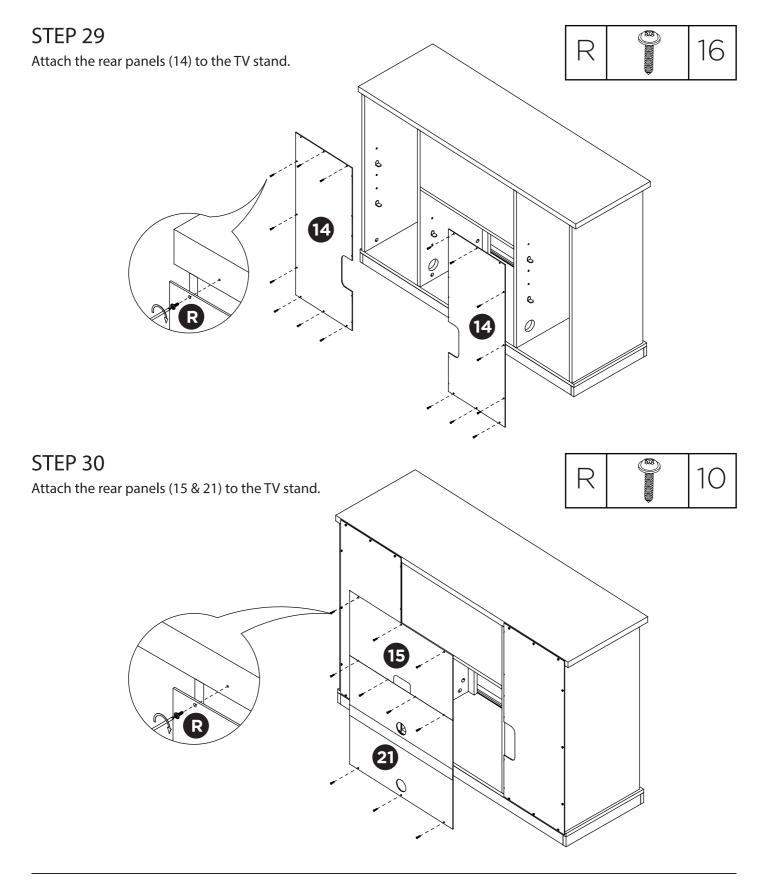

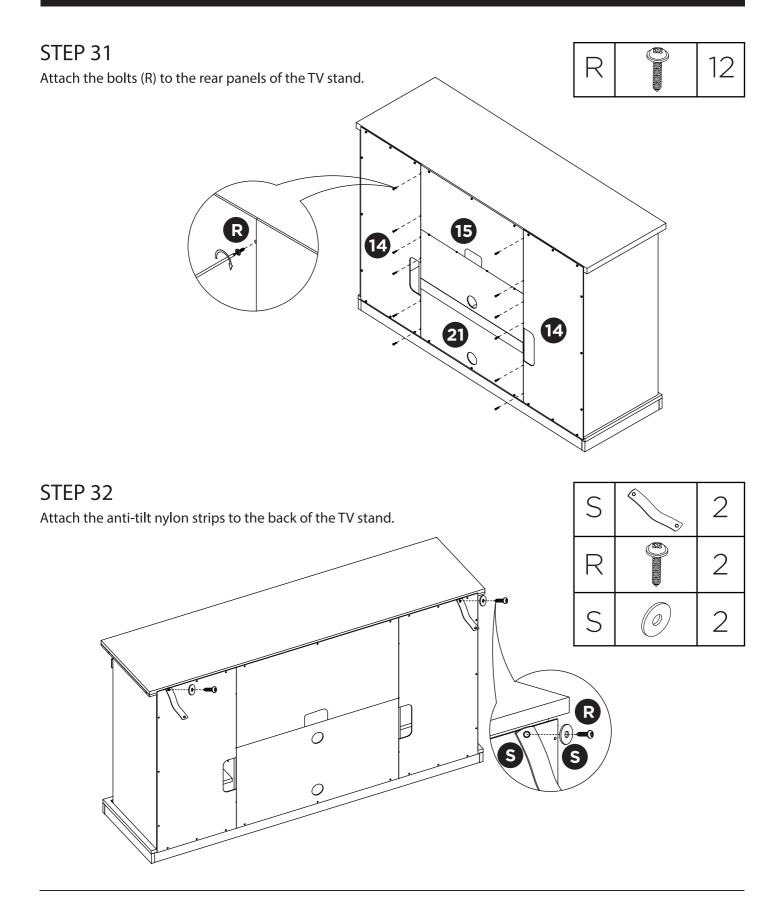

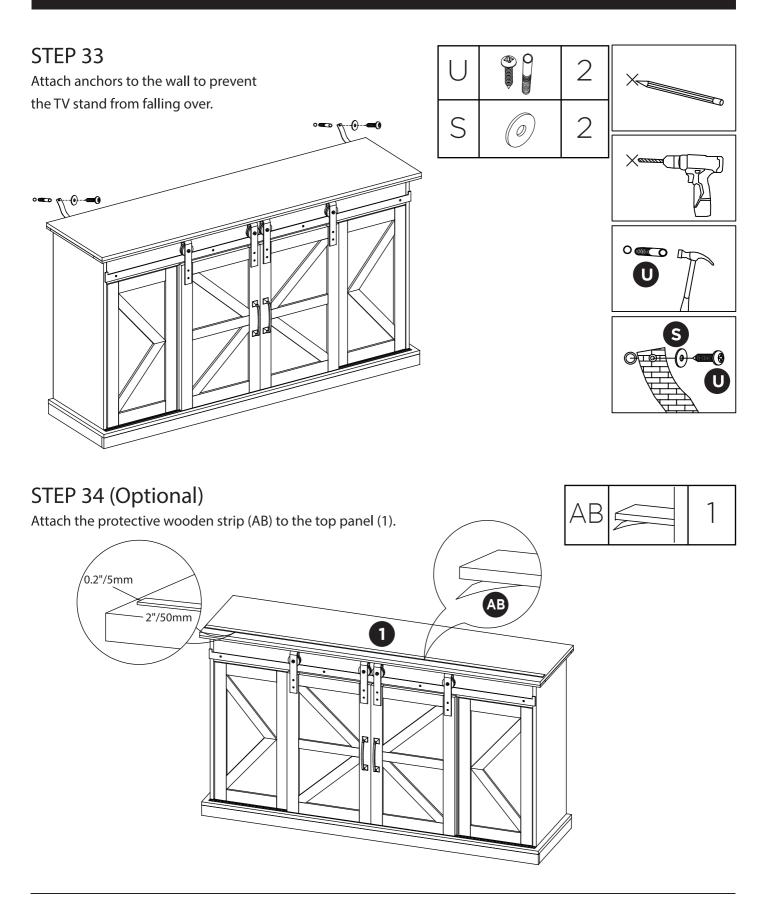

Care and Maintenance

It is best to keep your furniture in a climate-controlled environment. Extreme temperature and humidity changes can cause fading, warping, shrinking and splitting of wood. It is advised to keep furniture away from direct sunlight as sun may damage the finish.

Proper care and cleaning at home will extend the life of your purchase. Following these important and helpful tips will enhance your furniture as it ages.

- •Use a soft, clean cloth that will not scratch the surface when dusting.
- Use of furniture polishes is not necessary. Should you choose to use polishes, test first in an inconspicuous area.
- Using solvents of any kind on your furniture may damage the finish.
- Never use water to clean your furniture as it may cause damage to the finish.
- Always use coasters under beverage glasses and flowerpots.
- Liquid spills should be removed immediately. Using a soft clean cloth, blot the spill gently. Avoid rubbing.
- Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture finish.
- Stains or marks from crayons or ink markers will be difficult to remove.
- Check bolts/screws periodically and tighten them if necessary.

Warranty Information

TURBRO provides a 1-year limited warranty for TURBRO TV Stand, from the date of purchase, subject to the following conditions and limitations outlined below.

WHAT IS COVERED?

- This warranty is limited to the repair or replacement of part(s) proved to be defective in material or workmanship, after said defect is confirmed by the manufacturer's inspection.
- The manufacturer may, at its discretion, fully discharge all obligations with respect to this warranty by refunding the wholesale price of the defective part(s).

WHAT IS NOT COVERED?

- Damage caused by the owner when attempting to fix or alter the product themselves.
- Damage caused by misuse, abuse, neglect, alterations, or unauthorized repair.
- Natural depreciation.
- Any alteration misuse of the product will nullify this warranty.
- This warranty is non-transferrable, which is effective for the original buyer from the authorized seller only.

HOW TO REQUEST WARRANTY SERVICES?

● To obtain the benefit of this warranty, please leave a message online (www.turbro.com/contact), or send an email to support@turbro.com.

WHAT WILL TURBRO DO?

- Repair the item.
- Replace the item if not repairable.
- Refund the item under certain circumstances.

TURBRO



© Katmai Technology Limited

support@turbro.com
www.turbro.com

