

mixxtope

April 2019



USER MANUAL





STOP!

IMPORTANT INFORMATION

Please read this manual
before using your MIXXTAPE

To prevent possible hearing damage, do not listen to high volume levels for long periods

Fully understand user manual before use

Ensure your player is at low volume levels and power off when not in use

To help avoid accidental damage keep player in jewel case when possible

To reset the player, press and hold the Power button in the ON (up) position for approximately 10 seconds

Before First Use

Be sure to read this manual before you use your MIXXTAPE for the first time.

The battery might be low when you use your MIXXTAPE for the first time. Charge the battery before using.



Memory Card Important Information

Do not insert or remove the memory card while the device is powered on.

Be careful when inserting or removing the memory card. The memory card slot is spring loaded. To insert, gently push the memory card in until it snaps into place. To remove, push the memory card in until it pops out.

Supports microSD SDHC/SDXC Type 10 cards up to 256GB (must be formatted as FAT32).

Introduction

MIXXTAPE is a digital and analog audio player, supporting lossy and lossless music formats including FLAC (16-bit), MP3, WMA, OGG, APE, WAV, AAC-LC, & ACELP.

Key Features

- Plays as a Cassette (in tape decks that are not equipped with tape motion sensors)
- Bluetooth Transmitter (connect to Bluetooth headphones, speakers, car audio systems)
- Bluetooth Receiver (connect a smartphone to MIXXTAPE to stream audio)
- Internal Memory – 8GB
- External Memory - up to 256GB microSD Card (must be formatted as FAT32)
- OLED Display
- Touch Control Panel
- 3.5mm Headphone Out
- Internal 300mAh Rechargeable Battery
- USB-C Charge/Data Port

How To Use MIXXTAPE

On, Off, & Lock

To turn MIXXTAPE On or Off, slide the Power button up, hold for three seconds, and release.

When the unit is on, slide the button down to lock all buttons. This will prevent buttons from being pressed accidentally.



↑ Slide up
and hold
for 3
seconds

How To Use MIXXTAPE

USB-C Charge/Data Port

- **Charging**

Connect using the included USB-C cable to an 5V/500mAh charger adapter.

- **Loading Audio**

1. Make sure a memory card is inserted
2. Connect the player to a computer using the provided USB-C cable
3. The unit will show up as if it were a connected thumb drive, external hard drive, or memory card.
4. Drag and drop the desired audio files or folders into the drive location on the connected computer
5. After the files are loaded onto the unit, right-click on the drive and eject it from the computer, then disconnect the data cable

How To Use MIXXTAPE

Control Panel

PLAY

PLAY/SELECT: Play mode: press briefly to play/pause
Menus: press briefly to confirm actions or to enter the submenu of the selected item

MENU

MENU: Press briefly to access menus

VOL
BACK

VOL/BACK: Press briefly to move to the previous screen. Press and hold for three seconds to change volume. Use REW & FWD buttons to increase/decrease

PREV

REW/PREV: Play mode: press briefly to skip to the previous song, hold down to rewind
Menus: press briefly to choose the previous item
Volume: press briefly to decrease

NEXT

FWD/NEXT: Play mode: press briefly to select the next song, hold down to fast-forward
Menus: press briefly to choose the next item
Volume: press briefly to increase

How To Use MIXXTAPE

Volume

When the unit is playing an audio file, press and hold the VOL key for three seconds. The volume level will appear. To decrease, press the PREV key. To increase, press the NEXT key.

NOTICE - To prevent possible hearing damage, do not listen to high volume levels for long periods

Tape Deck

MIXXTAPE will play as a cassette in tape decks that are not equipped with tape motion sensors.

Select an audio file and press Play. Insert the MIXXTAPE into the tape deck. Press Play on the tape deck.

Main Menu

Play

Press Play to resume playing the most recently played audio file.

If an audio file is playing when the MIXXTAPE is powered off, the unit will store the last position played. The next time MIXXTAPE is powered on, press Play on the Music screen to Resume.

Bluetooth

1. Put MIXXTAPE and the Bluetooth wireless headphones/speaker in range of each other
2. Turn on Bluetooth in the MIXXTAPE (under the Bluetooth menu)
3. Put the headphones/speaker in pairing mode
4. Search for the headphones/speaker by selecting Scan Devices

Bluetooth Connection Tips for Vehicles

- The vehicle audio system must support A2DP Bluetooth
- Some vehicles will require a code before pairing, use "0000"

Phone

Connect your smartphone with MIXXTAPE to stream music from a tape deck

1. Press Play to make MIXXTAPE visible
2. On your phone, scan for nearby devices and select "mixxtape"
3. MIXXTAPE will show the connection
4. You can now play music from your phone through MIXXTAPE

Library

Browse and select audio files loaded in the Internal or External memory

Settings

- Repeat Mode

Off - single play, it will stop after playing one audio file

One Track - single repeat

Folder - all audio files in the folder will repeat

All - all audio files on the memory card will repeat

- Shuffle
Shuffle all songs
- Equalizer
Enhances the sound quality of certain music types to better match the genre being played
- Display
Backlight - select the time the unit will automatically turn off the backlight (Press any button to re-activate the backlight)
- Sleep Timer
Automatically turn off the unit after a defined period of playback time
- Language
Select from different languages for
- System
Format Internal – format the built-in memory. All files will be erased.
Format Card – format the microSD card. All files will be erased.
Reset - restores the unit to the original factory settings

Safety Tips & Cleaning Instructions

Read the safety instructions carefully before using MIXXTAPE.

- Review this entire manual to ensure proper usage.
- Keep this User Manual for future reference.
- Do not insert or remove the microSD card while the device is powered on.
- Do not insert any metal (coins, hairpins, etc.) objects or flammable debris into the device.
- Do not place heavy objects on the device.
- If the product gets wet from rain (water), beverages, medicines, sweat or moisture, do not turn it on. Wipe it with a dry cloth immediately (Malfunctions due to exposure to liquids are not covered by the warranty.)
- Do not keep the product in a moist or dusty location.
- Never attempt to disassemble, repair or alter the product.
- Avoid exposing the headphone to direct sunlight or extreme temperatures (-5°C ~ 40°C).

- Do not keep the product next to strongly magnetic objects like magnets, TVs, monitors or speakers.
- Since chemicals and detergents may damage the surface and remove paint, do not let them come in contact with the device.
- Do not drop or expose the product to strong impacts (places where there is strong vibration. etc.).
- Do not press multiple buttons simultaneously.
- Do not disconnect the Micro-USB cable during data transfer.
- Never connect anything other than earphones to the earphone connection terminal.
- Do not use the headphone/earphone or operate the product while operating a bicycle, automobile or motorcycle. It is not only dangerous, but also violates the law in some regions.
- Do not use the product during physical activity (driving, walking, hiking, etc.).
- Always use in a safe environment to avoid accidents.

- If you are using the product while moving, make sure there are no dangerous obstacles nearby.
- Since there is a risk of electric shock during lightning strikes, do not use the product during storms.
- If there is a ringing in the ears during or immediately after use, reduce the volume or discontinue using the product and obtain medical advice.
- Do not use the headphone/earphone at a high volume.
- Make sure that the headphone/earphone does not get stuck in another object or get caught between other objects.
- Do not sleep with the earphone in your ear or use the earphone for an extended period.

- Follow these tips to keep MIXXTAPE working well:
 - Clean MIXXTAPE with a soft lint-free cloth.
 - Do not allow children to use MIXXTAPE unsupervised.
 - Never force any connector into the ports of MIXXTAPE or your computer.
 - Do not disassemble, crush, short-circuit, or incinerate the internal rechargeable battery as it may cause fire, injury, burns, or other hazards.

This player is for your personal use only. Unauthorized recording or duplication of copyrighted material may infringe upon the rights of third parties and may be contrary to copyright laws.

Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Dronk LLC or its respective suppliers, including but not limited to, accessories, parts, or software is proprietary to Dronk LLC and protected under federal and state laws. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with Dronk LLC and its suppliers.

CE (EU Only) Tested to meet health, safety and environmental protection requirements of European Directives.

FCC statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to Part 15 of the FCC rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that

interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Use of shielded cable is required to comply with Class B limits in Subpart B of Part 15 of the FCC rules.

Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment.

Escape Clause

The manufacturer, importer, and distributor shall not be liable for damages including accidental and personal injury due to the improper use or operation of this product. The information contained in this instruction manual is based on the current product's specifications.

The manufacturer of this product is adding new functions and will continue to apply new technologies in the future. All specifications may be changed without any prior notice to the user.

There is no warranty against data loss due to the use of this product.



© 2019 Dronk, LLC. All Rights Reserved.
All trademarks are the property of their
respective owners. Actual product may
differ from pictures. Warranty not valid
outside of the intended region.

This device is manufactured under the
following patent: U.S. Pat. No. 9,535,985.
Further patents pending in various
territories.

Made in China