

# **USER MANUAL**





# Retain this information for future reference



- To prevent possible hearing damage, do not listen to high volume levels for long periods
- Ensure your player is at low volume levels or power off when not in use



#### Memory Card Important Information

- Do not insert or remove the memory card while the device is powered on
- Be careful when inserting or removing the memory card. The memory card slot is spring loaded. To insert, gently push the memory card in until it snaps into place. To remove, push the memory card in until it pops out
- · Supports microSD cards up to 512GB
- Use MIXXTAPE to format your memory card:
  - 1. Insert the microSD card
  - 2. Go to Settings
  - 3. Select Reset & Format
  - 4. Select Format Card

Note: Formatting a microSD card will delete all data stored on the microSD card (save a backup of important data)

If MIXXTAPE does not recognize the microSD card, eject and reinsert the card

Do not insert any object other than a microSD card into the memory card slot

If the inserted microSD card contains a large amount of data, it may take about 2 minutes or longer the library

#### **Buttons & Ports Introduced**



MAGNETIC HEAD

Press the blue Power button located on the left edge and hold for 1-2 seconds

On the touchscreen, swipe left or right to view the main menus

In the submenus, swipe right to go back

# Data/Charging USB-C Port

## Charging

Connect using the included USB-C cable to the USB port of a computer or a 5V/500mAh charger adapter

#### Loading Audio

- 1. Connect the player to a computer using the provided USB-C cable
- The unit will show up as if it were a connected thumb drive, external hard drive, or memory card
- Drag and drop the desired audio files or folders into the unit's drive location on the connected computer
- After the files are loaded onto the unit, right-click on the drive and eject it from the computer, then disconnect the data cable



#### MY MUSIC

Browse the music library by artists, albums, genres, folders, and songs. My Music is sorted alpha-numerically

Note: MY MUSIC only contains files loaded directly on the MIXXTAPE, but not on the microSD card. To see the files on the microSD card, go to LIBRARY



#### BLUETOOTH

- 1. Tap BT On
- MIXXTAPE will automatically try to connect to previously paired devices. If no previous device is available, after about 8 seconds, it will say "Connecting fail" Swipe left to scan for new devices (you will see "Scanning" at the top of the screen)
- 3. Select your Bluetooth headphones/speaker from the list
- 4. Once it says "Connected" swipe left to go to back to the main menu



#### SETTINGS

Select language, shutdown timer, display settings, format memory cards



#### LIBRARY

Browse all files located on MIXXTAPE and the microSD card. Files are sorted in the order they are loaded on the Mixxtape



#### EQUALIZER

Playback settings such as Shuffle, Repeat, and Equalizer



#### NOW PLAYING

Resume playing most recent song

#### Tape Deck

Select a song and press Play. Insert the MIXXTAPE into the tape deck. Press Play on the tape deck.

#### Safety Tips & Cleaning Instructions

Read the safety instructions carefully before using MIXXTAPE.

- Follow these tips to keep MIXXTAPE working well :
  - Clean MIXXTAPE with a soft lint-free cloth.
  - Do not allow children to use MIXXTAPE unsupervised.
  - Never force any connector into the ports of MIXXTAPE or your computer.
  - Do not disassemble, crush, shortcircuit, or incinerate the internal rechargeable battery as it may cause fire, injury, burns, or other hazards.
- Do not insert or remove the microSD card while the device is powered on.
- Do not insert any metal (coins, hairpins, etc.) objects or flammable debris into the device.

- Do not place heavy objects on the device.
- If the product gets wet from rain (water), beverages, medicines, sweat or moisture, do not turn it on. Wipe it with a dry cloth immediately (Malfunctions due to exposure to liquids are not covered by the warranty.)
- Do not keep the product in a moist or dusty location.
- Never attempt to disassemble, repair or alter the product.
- Avoid exposing the headphone to direct sunlight or extreme temperatures (-5°C ~ 40°C).
- Do not keep the product next to strongly magnetic objects like magnets, TVs, monitors or speakers.
- Since chemicals and detergents may damage the product's surface and remove paint, do not let them come in contact with the device.
- Do not drop or expose the product to strong impacts (places where there is strong vibration. etc.).
- Do not press multiple buttons simultaneously.

- Do not disconnect the Micro-USB cable during data transfer.
- Never connect anything other than earphones to the earphone connection terminal.
- Do not use the headphone/earphone or operate the product while operating a bicycle, automobile or motorcycle. It is not only dangerous, but also violates the law in some regions.
- Do not use the product during physical activity (driving, walking, hiking, etc.).
- Always use in a safe environment to avoid accidents.
- If you are using the product while moving, make sure there are no dangerous obstacles nearby.
- Since there is a risk of electric shock during lightning strikes, do not use the product during storms.
- If there is a ringing in the ears during or immediately after use, reduce the volume or discontinue using the product and obtain medical advice.
- Do not continuously use the earphone at a high volume.
- Do not use the headphone/earphone at a high volume.

- Make sure that the headphone/earphone does not get stuck in another object or get caught between other objects.
- Do not sleep with the earphone in your ear or use the earphone for an extended period.

# This player is for your personal use only. Unauthorized recording or duplication of copyrighted material may infringe upon the rights of third parties and may be contrary to copyright laws.

#### Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of DRONK, LLC or its respective suppliers, including but not limited to, accessories, parts, or software is proprietary to DRONK, LLC and protected under federal and state laws. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with DRONK, LLC and its suppliers.

**CE (EU Only)** Tested to meet health, safety and environmental protection requirements of European Directives.

WEEE (EU Only) Waste Electrical & Electronic Equipment Directive reduces the amount of electrical and electronic equipment being produced and encourages reuse and recycling. For the product's after life, please take it to designated collection points, where they will be accepted free of charge. Alternatively, in some countries return items to your local retailer upon the purchase of an equivalent new product.

**RoHS** Restriction of Hazardous Substances. Minimizes the environmental impact of waste electrical and electronic equipment (WEEE) by reducing the quantities of four heavy metals and two brominated flame retardants. Specifies allowed limits of lead, cadmium, mercury, hexavalent chromium, polybrominated biphenyls (PBB) and polybrominated diphenyl ethers (PBDE).

This is not a Toy and therefore is not intended for children.

**USB** Universal Serial Bus. A hardware interface that allows power and data connection to most computers and mobile devices. Also allows devices to be powered or charged with a standard USB power adapter.

**Recyclable Packaging** Made from materials that can easily be recycled if disposed of correctly.

**Plastic Recycling Type-3** Please be responsible and recycle any unwanted plastic product or packaging. PVC is a Type-3 plastic. Your local recycling center will have the capability to recycle this.

#### FCC statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to Part 15 of the FCC rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Use of shielded cable is required to comply with Class B limits in Subpart B of Part 15 of the FCC rules.

Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment.

## Escape Clause

The manufacturer, importer, and distributor shall not be liable for damages including accidental and personal injury due to the improper use or operation of this product. The information contained in this instruction manual is based on the current product's specifications.

The manufacturer of this product is adding new functions and will continue to apply new technologies in the future. All specifications may be changed without any prior notice to the user

There is no warranty against data loss due to the use of this product