



INSTRUCTIONS FOR USE:

1. REGISTER S/N (FOUND AT BOTTOM OF PACKAGING DEVICE) AT GPEN.COM / REGISTER.
2. FULLY CHARGE BATTERY FROM MICRO USB PORT LOCATED AT THE BOTTOM OF DEVICE.
3. LED BLINKING REPRESENTS CHARGING
4. LED SOLID REPRESENTS FULLY CHARGED
5. DURING ACTIVATION, THE NUMBER OF LEDS BLINKING REPRESENTS AN APPROXIMATE PERCENTAGE OF BATTERY POWER REMAINING:
 - THREE: 80 - 100%
 - TWO: 60 - 66%
 - ONE: 30 - 33%
6. REMOVE MOUTHPIECE
LOAD GROUND MATERIAL INTO CHAMBER (NOT INTENDED FOR USE WITH TOBACCO, LIQUIDS, OR CONCENTRATES).
7. COMPLETELY ATTACH MOUTHPIECE
8. PRESS BUTTON FIVE TIMES TO POWER ON / ACTIVATE HEATING.
PRESS HOME BUTTON THREE TIMES TO SELECT DESIRED TEMPERATURE RANGE:
 - BLUE 375°F /190°C
 - GREEN 401°F /205°C
 - RED 428°F /220°C
9. DRAW FROM MOUTHPIECE UPON HAPTIC FEEDBACK.
10. TO CANCEL HEATING, PRESS AND HOLD BUTTON FOR TWO SECONDS.
11. PRESS BUTTON FIVE TIMES TO TURN OFF DEVICE.

FOR TUTORIAL VIDEOS, INFORMATION,
AND MORE PLEASE VISIT GPEN.COM/DASH