


Vehicle: Connector Views

Alarm Module, (Vehicle Antitheft)

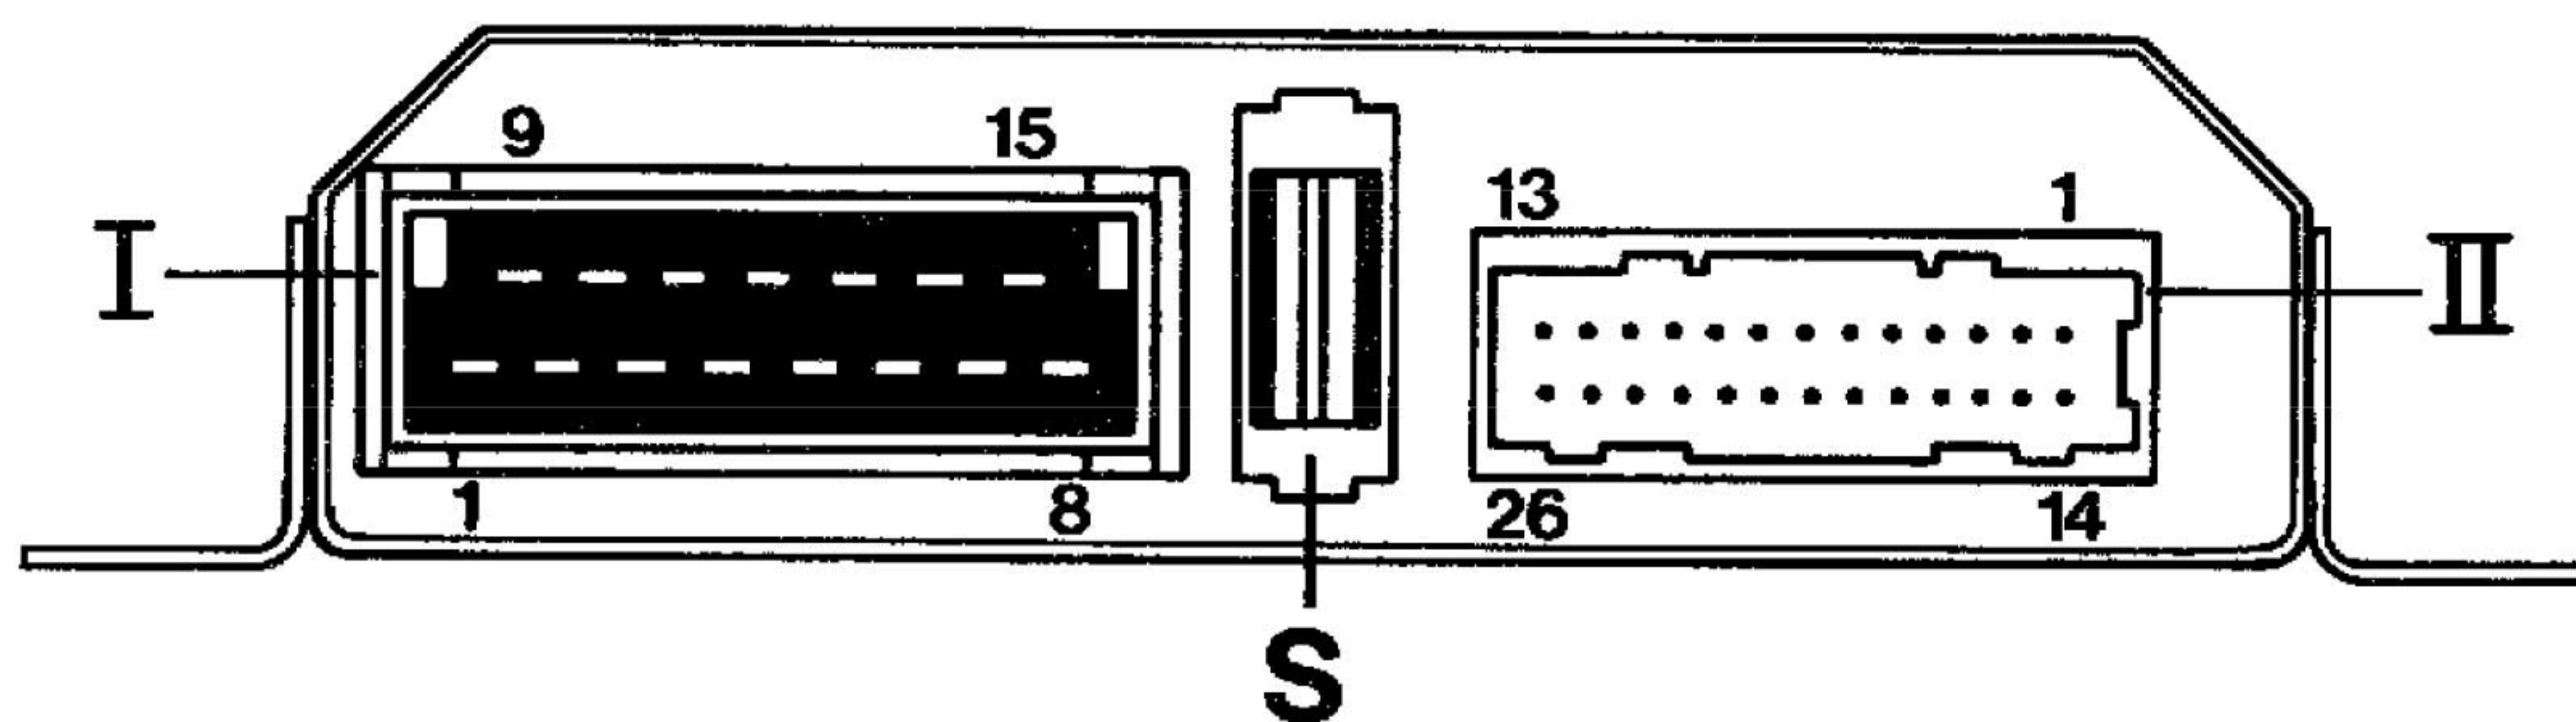

Connector I

Terminal:

- 1 - terminal 30
- 2 - terminal 31 (ground)
- 3 - terminal 30 (flashers)
- 4 - Anti-drive-off feature (to DME control unit)
- 6 - terminal 15 (from airbag control unit)
- 7 - Interior light
- 8 - Left-hand turn signal
- 9 - Right-hand turn signal
- 10 - Alarm horn
- 11 - Motor "closed", door locking motor
- 12 - Motor "open", door locking motor
- 14 - Alarm readiness lamp, driver's door
- 15 - Alarm readiness lamp, passenger's door

S - fuse

Connector II

Terminal:

- 1 - Activate / closed
- 2 - Deactivate / open
- 3 - Luggage compartment contact
- 5 - Rear lid contact
- 6 - Speedo signal terminal A
- 7 - Input 1, rear parcel shelf switch for M 419
- 8 - Input 2
- 9 - Radio alarm contact
- 10 - Central Locking System position switch "open"
- 11 - Central Locking System button
- 12 - Central Locking System position switch "closed"
- 13 - Radio 1 (ground across alarm horn)
- 14 - Diagnosis "L"
- 15 - Diagnosis "K"
- 16 - Glove box contact
- 17 - Input 3
- 18 - terminal 15
- 20 - Central Locking System warning lamp
- 21 - Door contacts
- 23 - terminal 61
- 24 - External electronics