

Control Unit - Terminal Configuration

- 55 Diagnosis K wire
- 54 Characteristic map switch
- 53 Throttle potentiometer
- 52 Throttle position to transmission control unit
- 51 Transmission input
- 50 Knocking, yes/no
- 49 Speed/reference mark sender +
- 48 Speed/reference mark sender -
- 47 Air intake temperature
- 46 Not used
- 45 Engine NTC II
- 44 Tiptronic coding
- 43 Not used
- 42 Selector lever switch
- 41 Heater control unit
- 40 AC compressor coupling
- 39 Not used
- 38 Not used
- 37 DME relay 87
- 36 Ground, DME relay 85
- 35 Injection valve cylinder No. 2
- 34 Injection valve cylinder No. 4
- 33 Tank vent
- 32 Auxiliary air pump (USA)
- 31 Final stage ignition circuit 2
- 30 Ground, knock sensors
- 29 Knock sensor 2
- 28 Oxygen sensor/CO potentiometer

