
Page 1

Vehicle: Connector Views Engine, Cooling and Exhaust

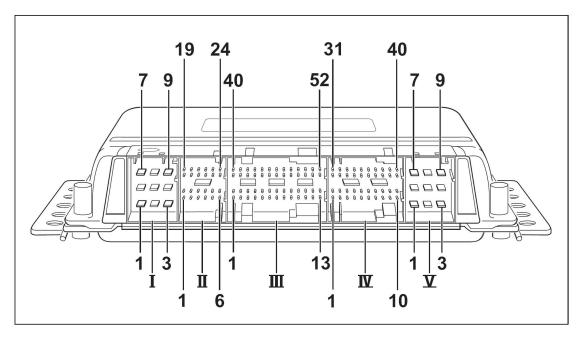

- I Connector I, 9-pole
- II Connector II, 24-pole
- III Connector III, 52-pole
- IV Connector IV, 40-pole
- V Connector IV, 9-pole

Connector I, 9-pole

Pin	Designation	Pin	Designation	
1	Terminal 15	6	Ground, output stages	
2	Terminal 30	7	Throttle motor actuator	
3	W-wire	8	DME relay terminal 87	
4	Ground, electronics	9	Throttle motor actuator	
5	Ground, fuel injectors			

DME Control Module Connector Assignment (Part 1)

Connector II, 24-pole					
Pin	Designation	Pin	Designation		
1	Oxygen sensor heating 2 after catalytic converter	13	Oxygen sensor heating 2 ahead of catalytic converter		
2	Pump current regulator of oxygen sensor 1 ahead of catalytic converter	14	Signal, oxygen sensor 2 after catalytic con verter		
3	CAN low (Tiptronic)	15	Signal, oxygen sensor 1 ahead of TWC		
4	CAN high (Tiptronic)	16	Signal, oxygen sensor 2 ahead of catalytic converter		
5	Pump current regulator of oxygen sensor 1 ahead of catalytic converter	17	Signal, oxygen sensor 1 after catalytic con verter		
6	Pump current regulator of oxygen sensor 1 ahead of catalytic converter	18	not assigned		
7	Oxygen sensor heating 1 after catalytic converter	19	Oxygen sensor heating 1 ahead of catalytic converter		
8	Ground, oxygen sensor 2 after catalytic converter	20	not assigned		
9	Ground, oxygen sensor 1 after catalytic converter	21	Engine compartment temperature sensor		
10	Ground, oxygen sensor 2 after catalytic converter	22	5 V supply for mass air flow sensor		
11	Ground, oxygen sensor 1 after catalytic converter	23	not assigned		
12	not assigned	24	Pump current regulator of oxygen sensor 2 ahead of catalytic converter		
Connec	etor III, 52-pole				
Pin	Designation	Pin	Designation		
1	Valve lift control, cylinder 1 - 3	27	Fuel injector, cylinder 4		
2	Fuel injector, cylinder 5	28	Fuel injector, cylinder 6		
3	EVAP canister purge valve (closed without flow)	29	not assigned		
4	Frequency valve, charge pressure	30	not assigned		
5	Oil temperature sensor	31	not assigned		
6	not assigned	32	Ground		
7	5 V supply for camshaft position? sensor and differential pressure sensor	33	not assigned		
8	Signal, throttle position sensor 2	34	Intake air temperature sensor		
9	Ground, mass air flow sensor	35	not assigned		
10	5 V supply for throttle actuation	36	Input, knock sensor 2		

DME Control Module Connector Assignment (Part 2)

	Connector III, 52-pole					
Pin	Designation	Pin	Designation			
11	Triggering of secondary air pump relay (terminal 85)	37	Gound, knock sensor 2			
12	Signal, camshaft position sensor 1	38	not assigned			
13	Start enable, Tiptronic (P + N)	39	Charge pressure sensor			
14	Secondary air valve	40	Fuel injector, cylinder 2			
15	Fuel injector, cylinder 3	41	Fuel injector, cylinder 1			
16	Overrun recirculating air valve	42	not assigned			
17	Ground, sensors	43	not assigned			
18	Signal, camshaft position sensor 2	44	not assigned			
19	Charge control	45	Signal A, speed sensor			
20	not assigned	46				
21	not assigned	47	not assigned			
22	Engine coolant temperature sensor	48	not assigned			
23	Signal, mass air flow sensor	49	Signal B, speed sensor			
24	Signal, throttle position sensor 1	50	Gound, knock sensor 1			
25	Ground, throttle position sensors $1 + 2$	51	not assigned			
26	Valve lift control, cylinder 4 - 6	52	Speed signal from ABS control module			
Connec	ctor IV, 40-pole					
Connec Pin	ctor IV, 40-pole Designation	Pin	Designation			
Connec Pin	ctor IV, 40-pole Designation Interlock clutch switch	Pin 21	Designation Signal, differential pressure sensor			
Connec Pin 1 2	Designation Interlock clutch switch not assigned	Pin 21 22	Designation Signal, differential pressure sensor not assigned			
Connection of the Connection o	Designation Interlock clutch switch not assigned not assigned	Pin 21 22 23	Designation Signal, differential pressure sensor not assigned not assigned			
Connection 1 1 2 3	Designation Interlock clutch switch not assigned not assigned Coolant fan, stage 1	Pin 21 22 23 24	Signal, differential pressure sensor not assigned not assigned Automatic I/M test			
Connection of the Connection o	Designation Interlock clutch switch not assigned not assigned	Pin 21 22 23	Designation Signal, differential pressure sensor not assigned not assigned			
Connection 1 1 2 3	Designation Interlock clutch switch not assigned not assigned Coolant fan, stage 1	Pin 21 22 23 24	Designation Signal, differential pressure sensor not assigned not assigned Automatic I/M test Triggering of engine compartment fan			
Connection 1 2 3 4 4 5 5	Designation Interlock clutch switch not assigned not assigned Coolant fan, stage 1 not assigned	Pin 21 22 23 24 25	Designation Signal, differential pressure sensor not assigned not assigned Automatic I/M test Triggering of engine compartment fan relay (terminal 85) Triggering of DME relay (terminal 85)			
Connec Pin 1 2 3 4 5	Designation Interlock clutch switch not assigned not assigned Coolant fan, stage 1 not assigned not assigned	Pin 21 22 23 24 25	Designation Signal, differential pressure sensor not assigned not assigned Automatic I/M test Triggering of engine compartment fan relay (terminal 85) Triggering of DME relay (terminal 85) Triggering of A/C compressor fan relay			
Connect Pin 1 2 3 4 5	Designation Interlock clutch switch not assigned not assigned Coolant fan, stage 1 not assigned not assigned Ground, pedal sensor 1	Pin 21 22 23 24 25 26 27	Designation Signal, differential pressure sensor not assigned not assigned Automatic I/M test Triggering of engine compartment fan relay (terminal 85) Triggering of DME relay (terminal 85) Triggering of A/C compressor fan relay (terminal 85)			
Connect Pin 1 2 3 4 5 7	Designation Interlock clutch switch not assigned not assigned Coolant fan, stage 1 not assigned not assigned Signal, pedal sensor 1	Pin 21 22 23 24 25 26 27 28	Designation Signal, differential pressure sensor not assigned not assigned Automatic I/M test Triggering of engine compartment fan relay (terminal 85) Triggering of DME relay (terminal 85) Triggering of A/C compressor fan relay (terminal 85) not assigned			
Connect Pin 1 2 3 4 5 6 7	Designation Interlock clutch switch not assigned not assigned Coolant fan, stage 1 not assigned not assigned Signal, pedal sensor 1 Signal, pedal sensor 1	Pin 21 22 23 24 25 26 27 28 29	Designation Signal, differential pressure sensor not assigned not assigned Automatic I/M test Triggering of engine compartment fan relay (terminal 85) Triggering of DME relay (terminal 85) Triggering of A/C compressor fan relay (terminal 85) not assigned Knocking signal			
Connect Pin 1 2 3 4 5 6 7 8 9 10	Designation Interlock clutch switch not assigned not assigned Coolant fan, stage 1 not assigned not assigned Signal, pedal sensor 1 Signal, pedal sensor 1 Triggering of fuel pump relay (terminal 85)	Pin 21 22 23 24 25 26 27 28 29 30	Designation Signal, differential pressure sensor not assigned not assigned Automatic I/M test Triggering of engine compartment fan relay (terminal 85) Triggering of DME relay (terminal 85) Triggering of A/C compressor fan relay (terminal 85) not assigned Knocking signal EVAP canister shutoff valve			

DME Control Module Connector Assignment (Part 3)

Connec	tor IV, 40-pole		
Pin	Designation	Pin	Designation
14	5 V supply, pedal sensor 2	34	Air conditioning medium pressure switch
15	Ground, differential pressure sensor	35	not assigned
16	Crash signal (airbag)	36	CAN high (PSM and instrument cluster)
17	Speed signal output	37	CAN low (PSM and instrument cluster)
18	not assigned	38	not assigned
19	not assigned	39	not assigned
20	Coolant fan, stage 2	40	Tiptronic coolant shutoff valve
Connec	tor V, 9-pole		
Pin	Designation	Pin	Designation
1	Ignition coil, cylinder 6	6	Ignition coil, cylinder 1
2	Ignition coil, cylinder 4	7	Camshaft adjustment, bank 1
3	Ignition coil, cylinder 2	8	Camshaft adjustment, bank 2
4	Ignition coil, cylinder 5	9	Ignition coil, cylinder 3
5	Ground		

DME Control Module Connector Assignment (Part 4)