



# MARATHON

CL030062-FD

Slim jumbo atomic full calendar digital wall clock with temperature & humidity



Power	four AA Batteries
Dimensions	37 cm W x 3 cm D x 23 cm H 14.5 in W x 1 in D x 9 in H

## BEFORE FIRST USE

Please read this instruction manual carefully and keep it for future reference. This information will help you familiarize yourself with your new clock.

The product should only be used as described within these instructions. Unauthorized repairs, modifications, or changes to the product are prohibited. This product is intended for home use only.

## UNIT APPEARANCE

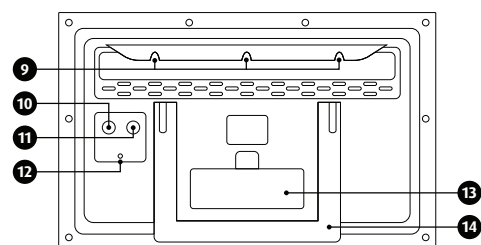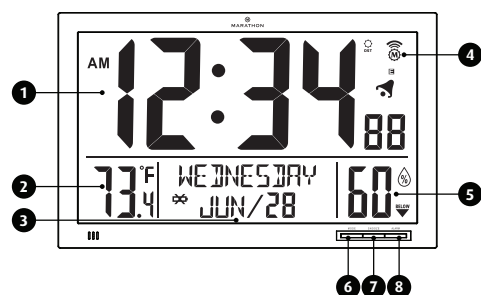

- |                      |                        |
|----------------------|------------------------|
| 1 Time display       | 8 ALARM button         |
| 2 Temperature        | 9 Wall mount hole      |
| 3 Date, weekday      | 10 ▲/ 12/ 24/ ☺ button |
| 4 Radio-control icon | 11 ▼/ °C/ °F/ ☺ button |
| 5 Humidity           | 12 RESET button        |
| 6 MODE button        | 13 Battery compartment |
| 7 SNOOZE button      | 14 Stand               |

## FEATURES

- Radio-controlled time (time can be set manually)
- Calendar year up to 2099
- Time displayed in 12-hour or 24-hour format (selectable)
- Temperature displayed in °C or °F (selectable)
- Temperature range: -10 °C to 50 °C / 14 °F to 122 °F
- Humidity range: 20% to 90%
- Day of the week and month in 3 user selectable languages (English, French and Spanish).
- 7 time zones: Atlantic (AT), Eastern (E), Central (C), Mountain (M), Pacific (P), Alaska (AK), and Hawaii (H).

## BATTERY INSTALLATION

- Open the cover of the battery compartment.
- Insert four AA batteries according to the polarity marks (+) and (-) inside the compartment.
- Close the cover of the battery compartment. The clock is now ready to use.

## TIME AND ALARM SETTING

### RADIO CONTROLLED CLOCK

- After the unit powers on, it will automatically scan for the radio time signal. The radio control icon ☺ will flash on the screen.
- If the ☺ icon is **flashing**, then the unit is scanning for the radio time signal.
- If the ☺ icon is **steady**, then the radio time signal is being received successfully.
- If the ☺ icon **disappears**, then the radio time signal scan has failed.
- The clock automatically synchronizes with the radio time signal every day at 2:00 a.m. to maintain accuracy. If the clock is unable to synchronize with the radio time signal, the ☺ icon will disappear. The clock will then reattempt to synchronize with the radio time signal at 3:00 a.m., 4:00 a.m., and 5:00 a.m.
- To scan for the radio time signal manually, press and hold the ☺ button for 3 seconds. The scan may take several minutes to complete.
- To stop a scan, press and hold the ☺ button for 3 seconds.
- If the clock is in Daylight Saving Time mode, "DST" will appear on the display.
- To change the clock's time zone, press and hold the ▲ button for 3 seconds. The default time zone is Eastern Standard Time (E).
- Time zone order: Eastern (E) > Pacific (P) > Mountain (M) > Central (C) > Atlantic (AT) > Alaska (AK) > Hawaii (H).

Note:

The buttons will not function while the clock is scanning for the radio time signal.

### SETTING THE TIME MANUALLY

- Press and hold the **MODE** button for 3 seconds while in time display mode to enter time setting mode.
- For each setting, use the ▲ and ▼ buttons to adjust the values. Press the **MODE** button to confirm the setting and move on to the next one.
- Press and hold the ▲ and ▼ buttons to adjust the values faster.
- Setting sequence: **12/24 > RCC on/off > Time Zone > Weekday Language > Hour > Minute > Second > Year > Month > Day > DST on/off > Temperature Unit > Alarm sound duration > Exit.**
- If no buttons are pressed for 15 seconds, the clock will exit and return to time display mode automatically.

Note:

☺ icon will appear on the display if the DST function has been activated and the selected time zone is currently observing daylight saving time.

### DAILY ALARM SETTING

- Press the **MODE** button while in normal display mode to view the alarm time.
- Press and hold the **MODE** button while viewing the alarm time to enter alarm time setting mode.
- For each setting, use the ▲ and ▼ buttons to adjust the values. Press the **MODE** button to confirm the setting and move on to the next one.
- Press and hold the ▲ and ▼ buttons to adjust the values faster.
- Setting sequence: **Hour > Minute > Exit.**

## SNOOZE/ALARM FUNCTION

- Press the **ALARM** button to activate or deactivate the alarm function. The ☼ icon will appear on the display if the alarm is activated.
- When the alarm sounds, press any button except the **SNOOZE** button to stop the alarm. If no buttons are pressed, the alarm will stop automatically after 1 or 2 minutes depending on the alarm duration set.
- Press the **SNOOZE** button when the alarm sounds to activate the snooze function. The alarm will sound again after 5 minutes. "Zz" will flash on the display while the snooze function is active.
- Press any button except the **SNOOZE** button to deactivate the snooze function and stop the alarm.

## TEMPERATURE

- Temperature unit can be changed between Celsius and Fahrenheit in the mode settings.
- If the temperature is below the measurable range, "LL.L" will appear on the display.
- If the temperature is above the measurable range, "HH.H" will appear on the display.

## IMPORTANT

- The clock loses its time information when the batteries are removed.
- Do not expose the clock to direct sunlight, extreme temperatures, high humidity, or liquids.
- Never clean the clock with abrasive or corrosive materials or products. Abrasive cleaning agents may scratch plastic parts or corrode electronic circuits, or both.

## WARRANTY

Marathon Watch Company warrants this item to be free from defects in material and workmanship under normal use in accordance with care and usage instructions for two years from the date of purchase from an authorized retailer. This warranty excludes damage from misuse, abuse or any irregular application. Return the item to us in its original packaging accompanied with the original bill of sale. Please contact Customer Service at 1-800-822-4329 to obtain the shipping address. If we confirm a defect, we will replace it with the same item or one of similar value and return it to you at no charge.

Marathon Watch Company Ltd.  
[www.MarathonWatch.com](http://www.MarathonWatch.com)  
 Customer Service: 1-800-822-4329

☼ Designed in Canada / Conçu au Canada  
 Made in China / Fabriqué en Chine