

# MARATHON

CL030063

## LED Mood Clock with 2 USB Fast-Charge Ports

 
Power	DC 5V, 2.5 A
Battery	3 x AAA size 1.5V batteries
Operating range	-5°C ~ 50°C/23°F ~ 122°F
Temperature resolution	0.1°C/0.1°F
Humidity resolution	1%
Dimensions (W x D x H)	9.4 x 3.4 x 2 in 24 x 8.6 x 5.2cm

### BEFORE FIRST USE

Please read the instruction manual carefully and keep it for future reference. This information will help you to familiarize yourself with your new LED Mood Clock with 2 USB Fast-Charge Ports.

The product should only be used as described within these instructions. Unauthorized repairs, modifications or changes to the product are prohibited. This product is intended for home use only.

### UNIT APPEARANCE

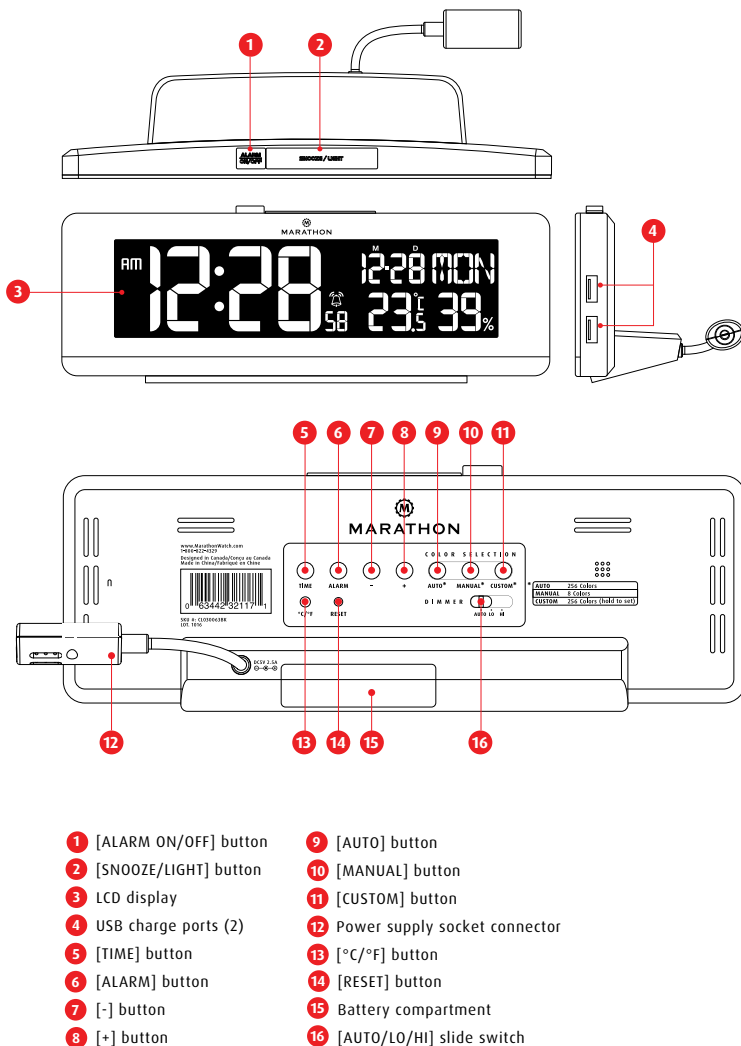

- 1 Connect the power adaptor to the clock, then to the power supply.
  - 2 Insert 3 AAA size batteries into the battery compartment for backup power (for clock functions only). Follow the correct polarity (+/-) as indicated.
- NOTE** If no display appears on the LCD display after connecting the clock to the power supply, press the [RESET] button.

### TIME & CALENDAR SETTING

- 1 In normal time mode, press and hold the [TIME] button for 3 seconds to enter setup mode.
- 2 Press the [+] or [-] button to set the desired calendar & time values. Press and hold down the buttons to quickly adjust the values.
- 3 Press the [TIME] button to advance the setting items in this sequence:

 


- 4 Press [TIME] button to save and exit the setup mode. The clock will automatically exit after 30 seconds if no buttons are pressed.

**NOTE** Setting order of the 5 selectable languages:




- 1 In normal time mode, press and hold [ALARM] button for 3 seconds until the Hour digit flashes.
- 2 Press [+] or [-] button to set the desired value. Press and hold to quickly adjust the values.
- 3 Press [ALARM] button again and the Minute digit flashes.
- 4 Press [+] or [-] button to adjust its value.
- 5 Press [ALARM] button again to save and exit the setting. The clock will automatically exit after 30 seconds if no buttons are pressed.

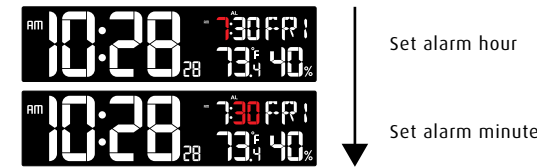

### USING ALARM & SNOOZE FUNCTION

 - 1 Set the alarm time as described in the above section.
- 2 Press the red [ALARM ON/OFF] button to enable or disable the alarm. The red [ALARM ON/OFF] button will protrude from the top of the clock and the alarm icon "⏰" will appear on the LCD when the alarm is on.

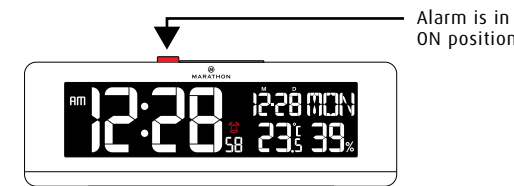

- 3 When the alarm is sounding, press the [SNOOZE/LIGHT] button to activate the snooze mode. The alarm icon "⏰" on the display will flash to indicate that the snooze function has been activated.
- 4 To turn off the alarm and snooze functions completely, press the [ALARM ON/OFF] button.

**NOTE**

- If no buttons are pressed after 1 minute, the alarm will automatically shut off. The alarm will resume to sound at the same time the following day.
- When the snooze mode is activated, the alarm will sound again after 5 minutes. You can use the snooze function a maximum of 4 times consecutively.

### TEMPERATURE & HUMIDITY DISPLAY

- 1 Press the [°C/°F] button to select the temperature format: °C or °F.
- 2 The temperature and humidity will display "Hi/Lo/—" for the conditions noted in the following chart:

	CONDITION	DISPLAY
HUMIDITY	HUMIDITY < 20%	LO
	HUMIDITY > 90%	HI
TEMPERATURE	TEMPERATURE < -40°C/-40°F	LO
	TEMPERATURE > 60°C/140°F	HI
	TEMPERATURE < 0°C/32°F OR > 70°C/158°F	—

### USB CHARGE PORTS

- 1 If you are using 1 USB port, the device will be charged with a 2.1 A maximum voltage.
- 2 If you are using 2 USB ports, the devices will be charged with a 1.1 A maximum voltage.

### BACKLIGHT COLOR CHANGING OPERATION:

- 1 Press the [AUTO] button to enter the DEMO mode and the LCD backlight color will slowly cycle through all 256 colors. Press the button again at any time to stop the backlight color.
  - 2 Press the [MANUAL] button to select 1 of 8 preset colors:
- 
- 3 Press the [CUSTOM] button to select 1 of 256 colors. Press and hold to quickly cycle through the colors.

### DIMMER OPERATION

Sliding the [AUTO/LO/HI] switch to...

- 1 "AUTO" position: the illumination of the backlight will automatically adjust its brightness based on the ambient room lighting (dims in low light and brightens in bright light).
- 2 "LO" position: the illumination of the backlight will be dim.
- 3 "HI" position: the illumination of the backlight will be bright.

**NOTE** Backlight color change functions are only available when the DC power adaptor is used (not on backup battery power).

### BACKUP BATTERIES

The AAA batteries are for clock backup purposes only (see note below). Please replace the batteries periodically to ensure that backup power is available.

If the clock is disconnected from the power supply, it will continue to function as normal. When operating on battery power, the display will be in power conservation mode and the digits will be very dim.

You can press the [SNOOZE/LIGHT] button to temporarily light up the backlight for 5 seconds.

**NOTE** The USB ports will not work on backup battery power. The clock must be connected to the DC power adaptor and connected to a power supply in order to be able to use the charging function.

### SAFETY & PRECAUTIONS

- This unit is intended for indoor use only.
- Do not subject the unit to excessive force or shock.
- Do not expose the unit to extreme temperatures, direct sunlight, dust or moist environments.
- Do not cover the ventilation holes with any items.
- Do not immerse the unit in water. If you spill liquid over it, dry immediately.
- Avoid contact with any abrasive or corrosive materials.
- Do not dispose of this unit in a fire as it may explode.
- Do not open the inner back case or tamper with any of the components of the unit.
- Please dispose of used unit or batteries in an ecologically safe manner.
- The temperature and humidity sensor is located in the power supply socket connector that protrudes from the back of the clock. Ensure that it is kept clear of obstructions.