

Curved Display LED Clock with Dual Alarm and One USB Charging Port

MODEL CL030070 SERIES


- Curved display LED clock with dual alarms
- Programmable snooze duration from 5 to 60 minutes
- Variable brightness display control (high / low / off)
- 100 V to 240 V universal AC adapter and backup timekeeping battery

SECTION 1


FRONT VIEW



TOP VIEW

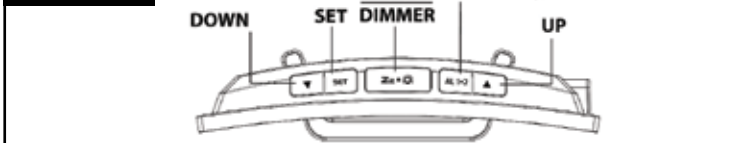

BACK VIEW

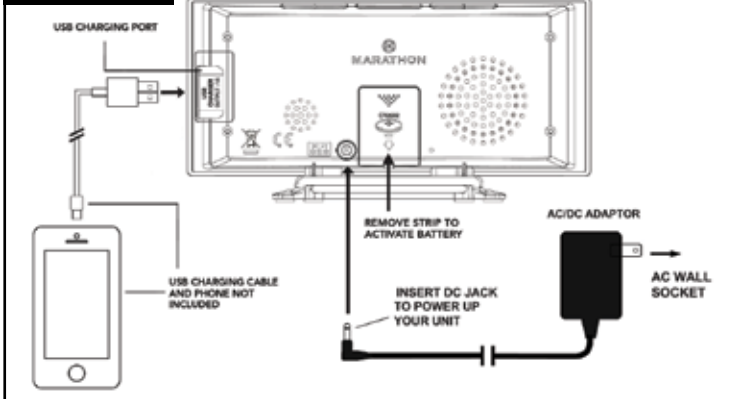

Please read this instruction manual before using your new clock.

SECTION 2

INSTALLATION

Plug the DC jack into the back of the unit, and then plug the AC/DC adapter into a wall outlet. Your clock is now ready to be set up and used.

SECTION 3

BACKUP BATTERY INSTALLATION

Your clock includes one CR2032 lithium battery to provide backup power to the clock in the event of a temporary power interruption.

1. Place your unit face down on a flat surface.
2. Pull the clear tab to activate the battery and provide backup power to the clock.

If the AC power is interrupted, the LED display will go off and the alarm will not function. The backup battery will keep the time and all the settings of your unit. Make sure a fresh CR2032 lithium battery is used. In the event that the CR2032 lithium battery must be changed, simply unscrew the battery compartment and install a new battery according to the diagram.

SECTION 4

SETTING THE TIME AND SNOOZE DURATION

TIME

1. Press the **[SET]** button once. The hour digits will flash. Press **▲** or **▼** to set the desired hour (hold to advance rapidly through the digits).
2. Press the **[SET]** button again. The minute digits will flash. Press **▲** or **▼** to set the desired minutes value (hold to advance rapidly through the digits).

SNOOZE

3. Press the **[SET]** button again. The snooze duration will show "05" and flash. Press **▲** or **▼** to set the snooze duration. The snooze duration range is from **5 minutes to 60 minutes**.
4. Press the **[SET]** button again to exit time setting mode and return to normal display mode. If no buttons are pressed for 10 seconds, the clock will automatically exit.

SECTION 5

SETTING THE ALARM TIME

1. Press the **[AL 1•2]** button. The **🕒** icon and the hour digits will flash. Press **▲** or **▼** to set the desired alarm hour (hold to advance rapidly).
2. Press the **[AL 1•2]** button again. The minute digits will flash. Press **▲** or **▼** to set the desired alarm minutes value (hold to advance rapidly).
3. Press the **[AL 1•2]** button again. "OFF" will appear on the display. Press **▲** or **▼** to turn on or turn off the alarm.
4. Press the **[AL 1•2]** button again to set the alarm volume. Press **▲** or **▼** to switch between "HI" (high volume) and "LO" (low volume).
5. Press the **[AL 1•2]** button again. The **🕒** icon and the hour digits will flash. Press **▲** or **▼** to set the desired alarm hour. Repeat steps 2 through 4.
6. Press the **[AL 1•2]** button again to exit alarm setting mode and return to normal display. If no buttons are pressed for 10 seconds, the clock will automatically exit.

Note:

When an alarm is turned on, a light will appear on the left of the corresponding alarm icon (**🕒** or **🕒**).



SECTION 6

STOP AND RESET THE ALARM FOR THE FOLLOWING DAY

When an alarm sounds, the corresponding icon (**🕒** or **🕒**) will flash. Press the **[AL 1•2]** button once to stop the alarm. The alarm will reset to go off at the same time on the following day. This will be indicated visibly by the red lights next to the corresponding alarm icons.

SECTION 7

SNOOZE OPERATION

The default snooze duration is five minutes.

When an alarm is sounding, press the **[Zz•🕒]** button once to activate snooze mode. The alarm will be silenced and go off again after the set snooze duration. See section 4 step 3 to change the snooze duration.

Note:

If your second alarm activates while the first alarm is sounding or is in snooze mode, the second alarm will override the first alarm. The first alarm will reset to go off on the following day.

SECTION 8

CHANGING DISPLAY BRIGHTNESS

Press the **[Zz•🕒]** button to adjust the display brightness. This can only be done when the unit is not sounding or in snooze mode. Brightness levels: **HI**, **LO**, and **OFF**.

SECTION 9**USING THE USB CHARGING PORT**

You can charge a smartphone, speaker, camera, or other device when the clock is plugged into a power outlet.

Connect your external device's USB charging cable (not included) to the USB charging port.

Note:

- *Charging times will vary.*
- *USB power output: 1 A maximum current.*
- *Only charges 1 A devices or devices that are self-regulating.*

This is a power-output charging port. It does not provide power to the alarm clock.

SECTION 10**TROUBLESHOOTING**

If your clock displays an incorrect time or does not function properly, unplug the DC jack to disconnect the AC power. Remove the backup battery (see section 3) and leave the clock for 5 to 10 minutes. Then, reconnect the adapter to power up the clock again. The clock will be reset to the default settings and you will need to set it up again.

SECTION 11**CARE FOR YOUR PRODUCT**

- Place your clock on a stable surface, away from direct sunlight, excessive heat, or moisture.
- Protect your furniture when placing the clock on natural wood and lacquered finish by using a cloth or protective material between it and the furniture.
- Clean the clock with a soft cloth moistened using only mild soap and water. Stronger agents such as benzene, thinner, or similar materials can damage the surface of the unit. Make sure the unit is unplugged before cleaning.
- If the unit is not to be used for a prolonged period of time (a month or longer), remove the backup battery to prevent possible corrosion. Should the battery compartment become corroded or dirty, clean the compartment thoroughly and replace the battery.

SECTION 12**FCC DISCLAIMER**

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

SECTION 13**WARRANTY**

Marathon Watch Company warrants this item to be free from defects in material and workmanship under normal use in accordance with care and usage instructions for 2 years from date of purchase from an authorized retailer. This warranty excludes damage from misuse, abuse or any irregular application. Return the item to us properly packaged accompanied with the original bill of sale. Please contact Customer Service at 1-800-822-4329 to obtain the shipping address. If we confirm a defect, we will replace it with the same item or one of similar value and return it to you at no charge.

Marathon Watch Company Ltd.
www.MarathonWatch.com

🍁 Designed in Canada / Conçu au Canada
Made in China / Fabriqué en Chine

**2 YEAR
warranty
Garantie
de 2 ANS**