

STOPWATCH

ST083013 / ST083013YE
USER INSTRUCTIONS

Features

- Time / Calendar display,
- Hour (12/24 hour format), minute, second, month, date and day.
- Stopwatch: 1/100 second for 30 minutes, 1 second up to 24 hours.



Function Keys

- A. MODE button:** Switch between normal time mode, stopwatch mode and alarm time mode.
- B. START/STOP button:** Toggle between normal time and month/date display.
- C. SPLIT/RESET button:** Toggle between normal time and alarm time display.
- D. LIGHT button:** Press it to turn on the back light for 3 seconds.

 
Display Symbols

Normal Time Mode

1. Day of the week
2. Hour
3. Minute
4. Second



3. Measurement between two competitors: B-C-B-C-C

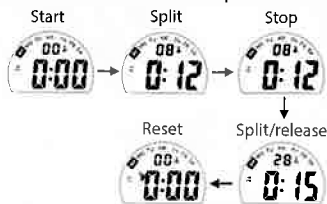


Press A to return to the normal time mode.

Time / Calendar Setting

1. Press A three times to activate this mode.
2. Press C to select the setting items. The sequence will be: second > minute > hour > date > month > day
3. Press B to increase the setting value and change 12/24 hour format when setting the hour.
4. Press A to turn to the normal mode.

 Note: Press B to add one minute when the second is more than or equal to 30 and reset it to 00 when the value is less than 30.

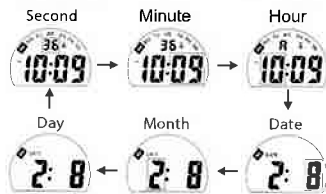

Alarm Time Mode

1. Alarm time
2. Alarm icon

 


Stopwatch Mode


Press A to activate this mode.

Press C to reset the stopwatch to "0:00" before using the stopwatch.

1. Accumulate elapsed time measurement: B-B-B-B-C

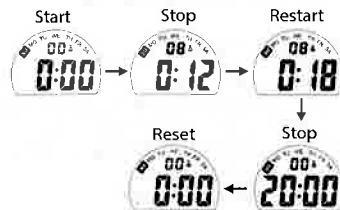

 2. Split time measurement: B-C-C-B-C

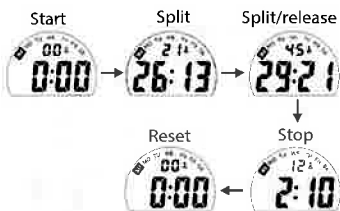

Alarm Setting

1. Press A twice to activate this mode.
2. Press B to advance the hour value.
3. Press C to select the minute and press B to change the minute value.
4. Press A to return to the normal mode.

Note 1: To turn the alarm ON/OFF, press B and C at the same time.

Note 2: When the alarm is on, (1) It will last one minute without any button pressing and will not sound again until the next day. (2) Press B to activate the snooze function, the alarm will start again after 5 minutes. It will sound up to one minute and will not sound again until the next day.

(3) Press C to stop the alarm.

Hourly Chime Setting

To set the hourly chime ON/OFF, please do the following:

1. Press and hold C
2. Press A until all days of the week appear / disappear.

Hourly Chime ON



Hourly Chime OFF



Battery Replacement

When the LCD becomes dim, replace with a new CR2032 battery at once.